



WALL CHASER




ITEM NO. 3200

INSTRUCTION MANUAL

SPECIFICATION

Model	3200
Power	2000 W
Voltage	220-240 V
Frequency	50/60 Hz
No-load Speed	6000 rpm
Cutting Depth	0-35 mm
Cutting Width	9-30 mm
Shaft Diameter	20 mm
Blade Diameter	125 mm
Blade Number	2
Cable Length	2 m
Tool Weight	5.5 kg
Accessories	1 set Carbon Brush 1pc Flat Wrench 1pc Socket Wrench 2pcs Washer (Adjusting Flange)

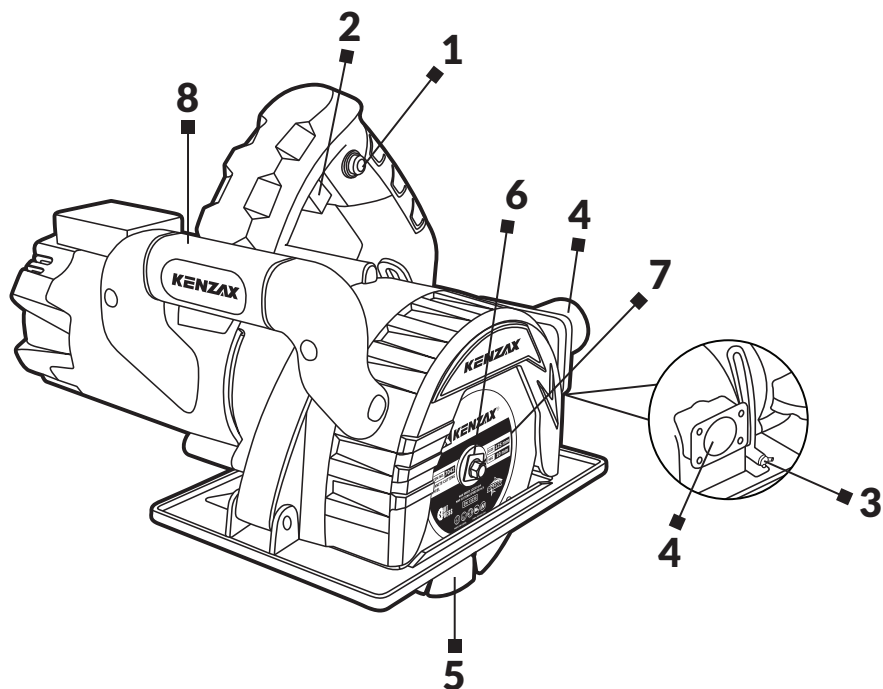PART LIST**Product Elements**

- | | |
|--------------------------|---------------------------|
| 1. Lock On Button | 5. Saw Blade |
| 2. ON/OFF Switch | 6. Outer Flange |
| 3. Depth Adjustment knob | 7. Fix screw Of Saw Blade |
| 4. Dust Outlet | 8. D handle |

NOTE!

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

 This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

 This sign means that there are important instructions of operation and handling in the manual that comes with this device.

GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tools or battery operated (cordless) power tool.

WORK AREA SAFETY

- ▷ Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- ▷ Don't operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- ▷ Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRIC SAFETY

- ▷ Power tool plugs must match the outlet. Never modify the plug in any way. Don't use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.



- ▶ Avoid body contact with earthed or grounded surfaces such as pipe, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- ▶ Don't expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- ▶ Don't abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increased the risk of electric shock.
- ▶ When operating a power tool outdoors, use an extension cord suitable for outdoor use. Using a cord suitable for outdoor use will reduce the risk of electric shock.
- ▶ If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.
- ▶ Use of power supply via an RCD with a rated residual current of 30mA or less is always recommended.

PERSONAL SAFETY

- ▶ Stay alert, watch what you are doing and use common sense when operating a power tool. Don't use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- ▶ Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- ▶ Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- ▶ Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- ▶ Don't overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- ▶ Dress properly. Don't wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose cloths, jewelry or long hair can be caught in moving parts.
- ▶ If devices are provided for connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards. Collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

- ▷ Don't force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- ▷ Don't use the power tool if the switch doesn't turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- ▷ Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- ▷ Store idle power tools out of the reach of children and don't allow persons unfamiliar with power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- ▷ Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- ▷ Use the power tool, accessories and tool bits etc. in accordance with the instruction, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

SERVICE

- ▷ Have your power tool serviced by qualified repair person using only identical replacement parts. This will ensure that the safety of power tool is maintained.
- ▷ Follow instruction for lubricating and changing accessories.
- ▷ Keep handles dry, clean and free from oil and grease

GENERAL POWER TOOL SYMBOLS

Symbol	Name	Symbol	Name
V	Volts	SPM	Strokes per minute
A	Amperes	BPM	Beats per minute
Hz	Hertz	RPM	Revolutions per minute
W	Watts		Double Insulation
Kg	Kilograms		Warning symbol
Min	Minutes		Earthing terminal
IPM	Impacts per minute		

SPECIAL SAFETY INFORMATION

- ▶ Please read the following instructions first before turning on power
- ▶ The working site shall be neat, operating field also requires a neat environment; sufficient illumination; cluttered or scattered things around may be dangerous;
- ▶ The operator shall wear the appropriate clothing, do not wear the gauze glove and spacious clothes, etc., so as to prevent possible personal injuries caused by being caught in the rotating parts of machine. It is suggested to wear insulation shoes for outdoors operation.
- ▶ Concentrated on the operation, maintains the balance of your body and holds the handle with two hands, so as to prevent the possible machine jumping during the notching work and affect the operation effect.
- ▶ Do not let other people approach the operation; unauthorized access is not permitted on the working site except the operating personnel.
- ▶ As for the fixing work, if it is applicable to be notched on the surface of movable parts, the tool shall be fixed.
- ▶ Avoid implementing the operation on the water and oil surface or the site arranged with wire cable. Do not damage the wire cable and avoid the water or oil entering into electric appliances of motor or switch, etc
- ▶ Do not use in following area: it is prohibited to use in special circumstance of moist heat, snowy, explosive or corrosive gas area.
- ▶ Correctly use the plug; do not exchange the plug arbitrarily; do not insert the plug that directly connected with the bare conductor into socket.

- ▶ To disconnect the plug promptly; disconnect the plug in case of the machine is idle or replacing the cutting tool components, so as to prevent the electric shock.


OPERATION INSTRUCTIONS

ASSEMBLY

WARNING!

Prior to assembly and adjustment, always unplug the tool.

1. Place the tool on a stable surface.
2. To remove the blade, hold the outer flange, using the wrench provided. Remove the blade screw by turning it clockwise.
3. To install the blade, reverse this procedure.

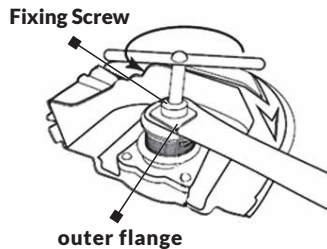


SWITCHING ON AND OFF

WARNING!

- ▶ Always observe the safety instructions and applicable regulations.
- ▶ Use the appropriate blade. Do not use cracked, damaged or excessively worn blade.
- ▶ Wait for the blade to reach the maximum speed and use a slow even feed for proper cutting.




1. To operate your tool, press the on/off switch.
2. For continuous operation, press the lock-on button and release the switch. To disengage the locking button, depress then release the switch.

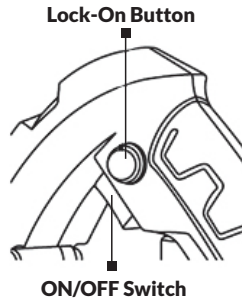

ADJUST THE DEPTH GAUGE FOR STRAIGHT CUTS


1. Release the depth adjustment knob.
2. Pull the base plate to the desired position.
3. Tighten the knob.

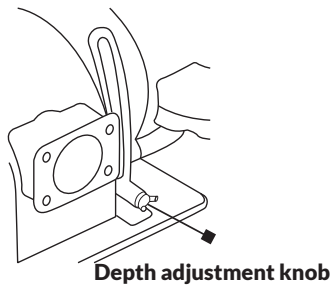

ADJUSTING CUTTING WIDTH

1. User can get the desired width by adding or reducing the adjusting flange in the middle of two diamond-cutting discs. If you want to get more width, add the adjusting flange conveniently by removing and installing disc method, if you want to get less width, only reduce the adjusting flange till reaching the desired width.

2. If the tool's maximum cutting width is less than you needed, cut it in two or more times.

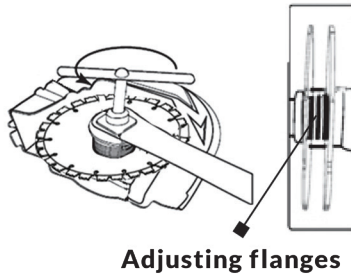

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and wellbeing. Disposal of discarded material shall be in accordance with local environmental regulations.

TOOL STORAGE

- ▷ Keep the device in dry and clean environment
- ▷ Always be sure that the tool is switched off and unplugged from power source before attempting to perform inspection or any maintenance.
- ▷ Never use gasoline, benzene, thinner, alcohol or the like. Discoloration, deformation or cracks may result.

انبارش ابزار

همیشه قبل از انجام هر گونه بازرسی یا تعمیرات دستگاه را از منبع تغذیه جدا کرد و جهت انبارش در مکان خشک و بدون رطوبت نگهداری نمایید.

هرگز از گازوئیل، بنزن، تینر، الکل یا هر گونه مواد مشابه که خاصیت خوردگی دارند استفاده نکنید. چرا که موجب تغییر رنگ، تغییر شکل یا ترک خوردن دستگاه می شود.

کنزاکس سرویس


ضمن تشکر از حسن انتخاب شما

به همراه ابزار شما کارت ضمانت نامه **۱۲ ماهه** کنزاکس سرویس ارائه می گردد.

لطفا توجه داشته باشید که هیچ کدام از اجزای داخلی ابزار، احتیاج به تعمیر و یا بهبود اضافه جهت بهینه نمودن عملکرد ندارند. بنابراین از هرگونه اعمال دستکاری یا مراجعه به مراکز تعمیرات غیر مجاز اجتناب نمایید و در صورت بروز هرگونه مشکل سریعاً با مراکز سرویس و پشتیبانی کنزاکس به شماره ۶۲۸۱۹-۰۲۱ و یا به وب سایت www.kenzax.com تماس حاصل نمایید.

تنظیم عرض برش


- ◀ کاربر می‌تواند با تنظیم و چیدمان لقمه‌ها روی شفت بین صفحات برش، به عرض برش دلخواه خود برسد. با مراجعه به بخش نصب و تهویض صفحه برش، یکی از صفحات برش را خارج کرده و در حد فاصل بین دو صفحه تعدادی لقمه قرار دهید تا به عرض برش مورد نظر خود برسید.
- ◀ اگر عرض بیشتری از حد ظرفیت دستگاه مدنظرتان است، می‌توانید چند برش موازی در کنار هم انجام دهید.

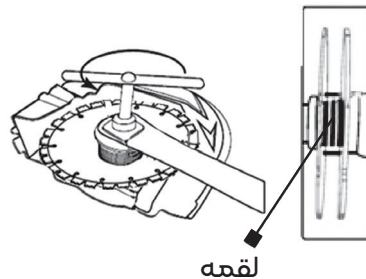

حفاظت از محیط زیست


ضایعات محصولات الکتریکی را نباید با زباله های خانگی دور ریخت. لطفاً به مراکزی که امکانات بازیافت وجود دارد تحویل داده شود. وسایل برقی را به عنوان زباله های شهری دور نریزید و مناطق مخصوص زباله های بازیافتی انبارش ننمایید. برای کسب اطلاعات در مورد سیستم های جمع آوری زباله های بازیافتی با شهرداری منطقه خود تماس بگیرید. اگر وسایل برقی در محل های دفن زباله های معمولی دور ریخته شوند، امکان این وجود دارد که مواد خطرناک و سمی به سفره های زیرزمینی آب نشت کرده و وارد زنجیره غذایی شوند. که این امر موجب آسیب رسیدن به سلامت می شود. دفع ضایعات محصولات الکتریکی باید مطابق با مقررات محیط زیست باشد.

۱. برای شروع به کار دستگاه، کلید خاموش/ روشن را فشار دهید.
۲. برای کار کردن پیوسته دستگاه، دکمه روشن خاموش را نگه دارید و دکمه قفل کن کلید را فشار دهید. سپس دکمه روشن خاموش را رها کنید. در این حالت دستگاه به کار کردن ادامه می‌دهد. برای برگشتن کلید دستگاه به حالت اولیه، کلید روشن/ خاموش را فشار داده و رها کنید.

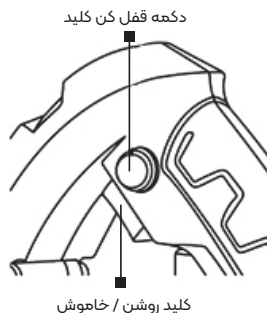

تنظیم عمق برش

- ◀ پیچ تنظیم عمق را شل کنید.
- ◀ کفی را تا ارتفاع دلخواه حرکت دهید.
- ◀ پیچ را سفت کنید.

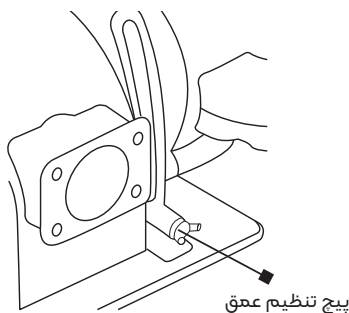


نصب و تعویض صفحه برش

هنگام انجام مراحل ذیل از عدم اتصال دو شاخه به پریز اطمینان حاصل نمائید.

برای نصب یا تعویض صفحه برش مراحل ذیل را انجام دهید:

- ◀ ابتدا با کمک آچار، فلنج را ثابت نگه داشته و با استفاده از آچار مخصوص پیچ روی آن را شل کنید. با چرخاندن پیچ در جهت عقربه های ساعت، آن را خارج نمایید.
- ◀ سپس صفحات برش را بین لقمه ها قرار دهید.
- ◀ در آخر فلنج و پیچ را در جای خود قرار داده و سفت کنید.
- ◀ برای تعویض صفحه مراحل قبل را معکوس اجرا کنید.

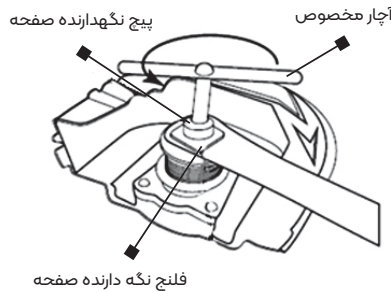**روشن و خاموش کردن**

- ◀ همواره دستورالعمل های ایمنی را رعایت نمایید.
- ◀ از صفحه برش های شکسته یا مستهلک استفاده ننمایید.
- ◀ صبر کنید تا صفحه برش به حداکثر دور خود برسد، سپس به آرامی و با سرعت ثابت شروع به برش کنید.

دستورالعمل های ایمنی کار با شیار زن

- ◀ محل کار باید مرتب باشد. ابزارآلات و ادوات به هم ریخته و نامرتب می تواند، خطرآفرین باشد.
- ◀ کاربر باید لباس مناسب بپوشد. دستکش کار و لباس های خیلی گشاد ممکن است در قسمت های دوار ابزار گیر کرده و باعث آسیب شود. توصیه می شود که از کفش های ایمنی عایق استفاده نمایید.
- ◀ در حین کار تمرکز نمایید و تعادل بدن را حفظ نموده و دسته های شیارزن را با دو دست نگه دارید تا از لگد ناگهانی آن در زمان انجام برش جلوگیری نمایید.
- ◀ از ورود افراد متفرقه به محیط کار خودداری کنید.
- ◀ در صورت امکان برای ایجاد شیار روی سطح های متحرک؛ دستگاه ثابت باشد.
- ◀ از انجام عملیات شیارزنی بر روی سطوح حاوی آب، روغن، سیم و کابل خودداری نمایید. آسیب به کابل ممکن است خطراتی جبران ناپذیری به دنبال داشته باشد. همچنین ورود آب و روغن و مشتقات شیمیایی، به قسمت های مختلف دستگاه می تواند به دستگاه آسیب بزند.
- ◀ اکیدا توصیه می شود در شرایط مرطوب، برفی و در مجاورت مواد منفجره از دستگاه استفاده نشود.
- ◀ به دلخواه دو شاخه دستگاه را تعویض نکنید. دو شاخه را بدون پریز و عایق مناسب به سیم برق وصل نکنید.
- ◀ برای اجتناب از شوک الکتریکی و پیش از تعویض صفحات برش دستگاه و نیز زمانی که دستگاه را استفاده نمی نمایید، از عدم اتصال برق مطمئن شوید.

دستورالعمل استفاده



توجه!

این محصول با دو عدد تیغ برش گرانیته بر ۱۲۵ میلی متر کنزاکس با کد محصول ۷۰۴۲ عرضه می شود.

- ◀ از ابزارآلات برقی به خوبی نگهداری نمائید. هرگونه تنظیمات، گیرکردن قطعات دوار و یا هر وضعیت دیگری که ممکن است بر روی عملکرد دستگاه تاثیر بگذارد را بررسی نمائید و در صورت آسیب دیدگی قبل از استفاده، آن مورد را رفع نمائید. بیشتر حوادث از عدم نگهداری صحیح ابزارآلات برقی رخ می‌دهد.
- ◀ همواره از ابزار و لوازم جانبی مناسب این دستگاه استفاده نمائید. همچنین از این دستگاه تنها برای کارهایی که برای آن تهیه و طراحی شده است، استفاده نمائید.

خدمات

- ◀ برای هرگونه تعمیر و تعویض قطعات، تنها به مراکز خدمات پس از فروش **شرکت کنزاکس** مراجعه نمائید.
- ◀ برای انجام هرگونه روغن کاری و یا تعویض لوازم جانبی تنها از دستورالعمل‌های ذکر شده در منوال دستگاه پیروی نمایید.
- ◀ دستگاه‌های دستگاه را خشک، تمیز و عاری از هرگونه روغن و گریس نگه دارید.

نمادهای عمومی ابزار برقی

نماد	نام	نماد	نام
V	ولتاژ	SPM	کوره بر دقیقه
A	آمپر	BPM	ضربه در دقیقه
Hz	هرتز (فرکانس)	RPM	دور بر دقیقه
W	وات (توان)		عایق دابل
Kg	کیلوگرم (وزن)		هشدار
Min	دقیقه		اتصال به زمین
IPM	ضربه در دقیقه		

- ◀ برای اجتناب از شروع به کار ناگهانی دستگاه، قبل از اتصال آن به منبع برق از قرار داشتن کلید در وضعیت خاموش اطمینان حاصل نمائید. همچنین زمانی که آن را جا به جا می‌کنید، دو شاخه را از پریز جدا کرده و انگشتان را بر روی کلید قرار ندهید.
- ◀ قبل از روشن کردن دستگاه از عدم اتصال هرگونه ابزار تنظیم مانند آچار به قطعات دوار اطمینان حاصل نمائید چرا که می‌تواند منجر به صدمات جبران ناپذیری گردد.
- ◀ حالت صحیح قرارگیری پاها و حفظ تعادل بدن حین کار از خارج شدن کنترل دستگاه جلوگیری می‌نماید.
- ◀ همواره در حین کار از لباس کار مناسب استفاده نمائید. استفاده از لباس‌های غیر استاندارد و گشاد، جواهرات و داشتن موهای بلند امکان درگیر شدن آن‌ها را با قسمت‌های متحرک ابزارآلات برقی افزایش داده و ممکن است خطر آفرین شود.
- ◀ در صورت استفاده از غبار جمع کن از اتصال صحیح و مناسب آن به دستگاه اطمینان حاصل نمائید. استفاده از چنین لوازم جانبی، مضرات مربوط به غبار را کاهش خواهد داد.

استفاده صحیح از دستگاه

- ◀ از اعمال بار اضافه به دستگاه جدا خودداری نمائید. انتخاب درست ابزار برقی مناسب کارتان، باعث کاهش هزینه و زمان و حسن انجام کار برای شما خواهد شد. بنابراین همیشه برای انجام عملکرد مورد نظران از ابزار برقی مخصوص به آن کار استفاده نمائید.
- ◀ در صورت معیوب بودن کلید دستگاه، هرگز از آن استفاده نکنید و به نزدیک ترین مراکز خدمات پس از فروش برای تعمیر آن مراجعه نمائید. هر دستگاهی که با کلید قابل کنترل نباشد، خطر آفرین است و باید تعمیر شود.
- ◀ قبل از هرگونه تنظیم یا تعویض لوازم جانبی دستگاه، همچنین زمانی که از دستگاه استفاده نمی‌کنید دو شاخه را از منبع برق جدا نمائید. این کار از شروع به کار ناگهانی دستگاه جلوگیری خواهد کرد.
- ◀ ابزارآلات برقی را از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. ابزارآلات برقی در دسترس افراد آموزش ندیده، خطرآفرین خواهند بود.

ایمینی برقی

- ◀ دو شاخه دستگاه باید متناسب با پریز باشد. با این کار احتمال برق گرفتگی به شدت کاهش خواهد یافت.
- ◀ در هنگام استفاده از دستگاه به محل عبور لوله، کابل برق مربوط به رادیاتور، گرمخانه و یا یخچال و... توجه ننمائید. زیرا تماس بدن با آنها احتمال خطر برق گرفتگی را افزایش می دهد.
- ◀ ابزارآلات برقی را در معرض باران و یا رطوبت قرار ندهید. ورود آب به ابزارآلات برقی ممکن است موجب برق گرفتگی شود.
- ◀ هرگز از کابل دستگاه برای حمل آن استفاده ننمائید و یا برای قطع اتصال دستگاه از پریز، کابل را نکشید. همچنین کابل را از معرض حرارت، سطوح نوک تیز، قطعات دوار و روغن دور نگهدارید. کابل های آسیب دیده مستعد بروز برق گرفتگی هستند.
- ◀ هنگام استفاده از دستگاه در محیط های باز، از سیم رابط مناسب استفاده ننمائید تا احتمال برق گرفتگی کاهش یابد.
- ◀ هنگام استفاده از دستگاه در محیط های مرطوب حتما از کلید حفاظت جان (RCD) برای اتصال دستگاه به منبع تغذیه برق شهری استفاده ننمائید. کلید حفاظت جان، مانند دستکش و کفش ایمینی به افزایش ایمینی فردی کمک می کند.
- ◀ هرگز ابزارهای دارای جریان متناوب را به منبع تغذیه برق با جریان غیرمتناوب (مستقیم) وصل ننمائید. این کار منجر به آسیب دیدگی دستگاه و آسیب های فردی خواهد شد.

ایمینی فردی

- ◀ زمانی که خسته اید یا تحت تاثیر دارو قرار دارید و در مجموع زمانی که در سلامتی کامل به سر نمی برید، هرگز از ابزارآلات برقی استفاده ننمائید. چرا که لحظه ای درنگ و بی دقتی منجر به صدمات جبران ناپذیری خواهد شد.
- ◀ همواره از لوازم ایمینی مانند عینک ایمینی، ماسک هوا، کفش و کلاه ایمینی و محافظ گوش استفاده ننمائید تا صدمات فردی کاهش یابد.

**هشدار!**

لطفاً به منظور دستیابی به بهترین عملکرد محصول قبل از استفاده، این دستورالعمل را به دقت بخوانید و در محل مناسب انبارش نمایید.



این علامت به معنی خطر برق گرفتگی و وجود ولتاژ خطرناک در دستگاه را بیان می‌کند.



این علامت به این معنی می‌باشد که در دفترچه راهنمای دستگاه، دستورالعمل‌های مهمی در مورد عملکرد و جابجایی وجود دارد.

دستورالعمل‌های کلی ابزارآلات برقی

**هشدار!**

لطفاً کلیه مواردی که در ذیل قید شده است را با دقت مطالعه فرمائید و به کار برید، عدم پیروی از دستورالعمل‌های ذیل ممکن است منجر به ایجاد صدمات جبران ناپذیر فیزیکی یا ایجاد اختلال در کارکرد ابزارآلات برقی شوند.


این دفترچه راهنما را بعد از مطالعه نگهداری نمائید.

منظور از کلمه "ابزار برقی" در هشدارهای زیر کلیه ابزارهای برقی متصل به کابل یا ابزارهای شارژی دارای باتری می‌باشد.

ایمنی محل کار

- ◀ محل کار را تمیز و روشن نگهدارید. محیط‌های در هم ریخته و تاریک حادثه آفرین خواهند بود.
- ◀ هرگز از ابزارآلات برقی در مجاورت مواد اشتعال زا استفاده ننمائید. ابزار آلات برقی جرقه ایجاد می‌کنند که ممکن است موجب آتش سوزی گردد.
- ◀ ابزارآلات برقی را هنگام استفاده از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. زیرا ممکن است باعث از دست دادن تمرکز و کنترل دستگاه شود.

نام قطعات دستگاه

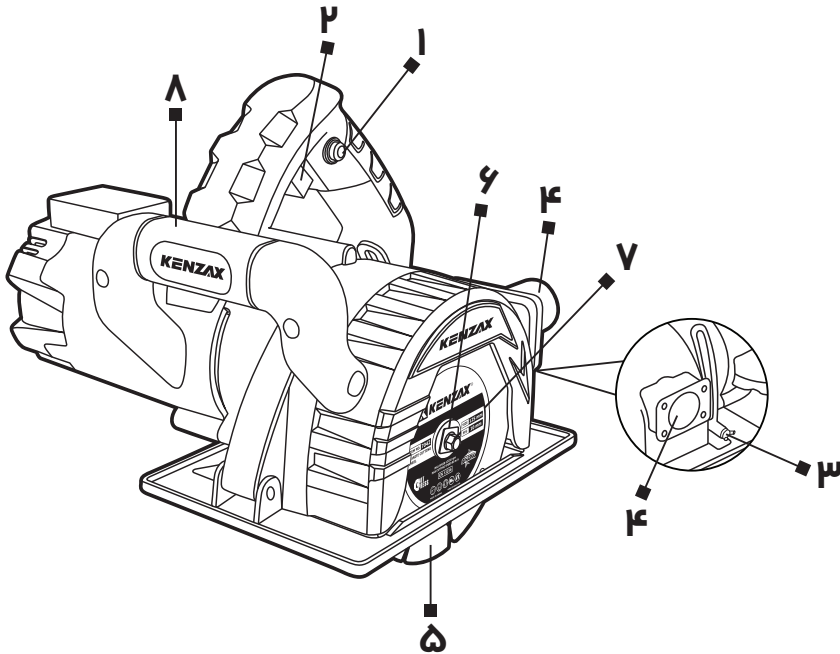

نام قطعات دستگاه

- | | |
|----------------------|-------------------------|
| ۱. دکمه قفل کن کلید | ۵. صفحه برش |
| ۲. کلید روشن / خاموش | ۶. فلنج نگه دارنده صفحه |
| ۳. پیچ تنظیم عمق | ۷. پیچ نگهدارنده صفحه |
| ۴. دریچه خروج غبار | ۸. دسته D شکل |

مشخصات فنی

مدل	3200
توان	۲۰۰۰ وات
ولتاژ	۲۲۰-۲۴۰ ولت
فرکانس	۵۰/۶۰ هرتز
سرعت بی باری	۶۰۰۰ دور بر دقیقه
عمق برش	۰ ~ ۳۵ میلی متر
عرض برش	۹ ~ ۳۰ میلی متر
قطر شفت	۲۰ میلی متر
قطر صفحه برشی	۱۲۵ میلی متر
تعداد تیغه	۲ عدد
طول کابل	۲ متر
وزن ابزار	۵/۵ کیلوگرم
متعلقات	یک جفت ذغال یک عدد آچار تخت یک عدد آچار بکس دو عدد واشر



شیار زن دو تیغ ۱۲۵ میلی متر ۲۰۰۰ وات



ITEM NO. 3200

دفترچه راهنمای فارسی