




MARBLE CUTTER

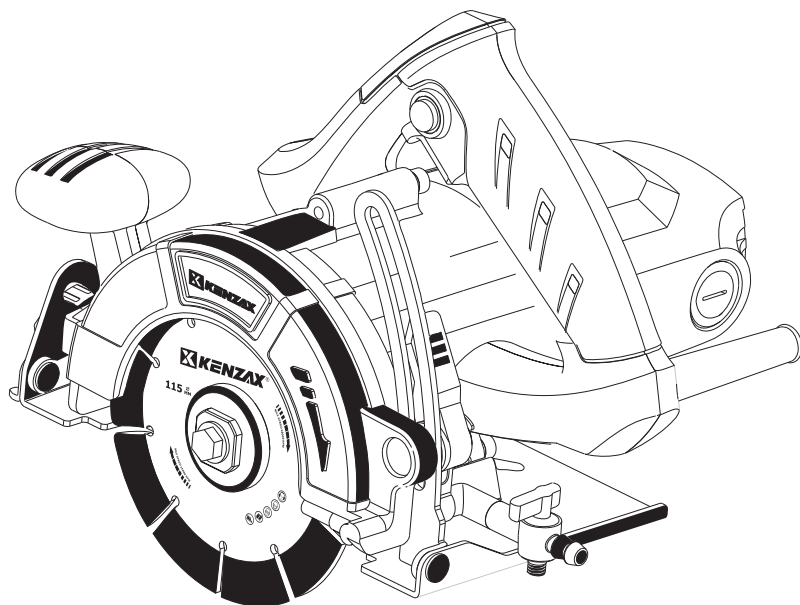


ITEM NO. 3202

INSTRUCTION MANUAL



SPECIFICATION

Model	3202
Max power	1750 W
Voltage	220 V
Frequency	50 Hz
No Load speed	14000 RPM
Maximum cutting depth	38.5 mm
Max. Blade diameter	115 mm
Blade Operating mode	Wet / Dry
Weight	3.8 Kg
Accessories	Socket wrench 13
	Carbon brush
	Open wrench
	Stopcock

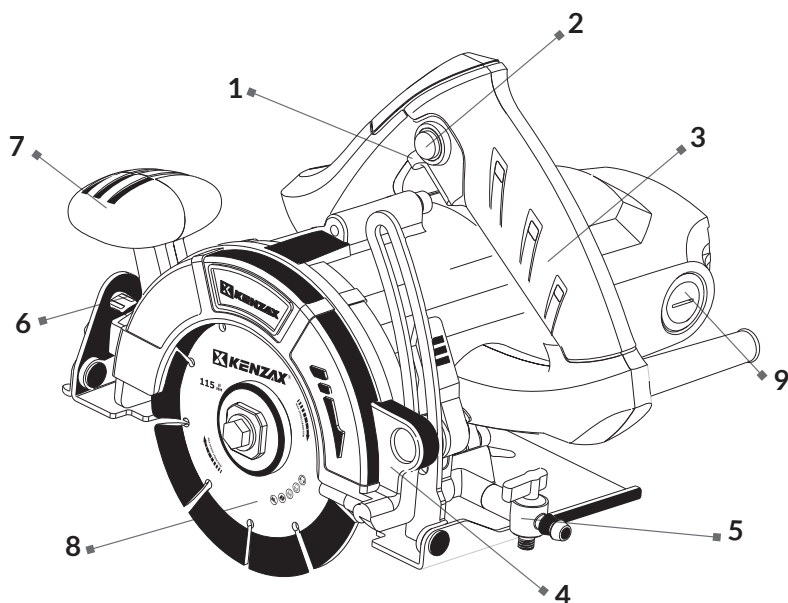PART LIST**Product Elements**

- | | |
|---------------------|---------------------|
| 1. On/Off Switch | 6. Angle Adjustment |
| 2. Lock-On switch | 7. Front Handle |
| 3. Soft Grip Handle | 8. Blade |
| 4. Depth Adjustment | 9. Carbon Brush Cap |
| 5. Stopcock | |

NOTE!

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

 This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

 This sign means that there are important instructions of operation and handling in the manual that comes with this device.

GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tools or battery operated (cordless) power tool.

WORK AREA SAFETY

- ▷ Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- ▷ Don't operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- ▷ Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRIC SAFETY

- ▷ Power tool plugs must match the outlet. Never modify the plug in any way. Don't use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- ▷ Avoid body contact with earthed or grounded surfaces such as pipe, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- ▷ Don't expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- ▷ Don't abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increased the risk of electric shock.

PERSONAL SAFETY

- ▶ Stay alert, watch what you are doing and use common sense when operating a power tool. Don't use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- ▶ Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- ▶ Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- ▶ Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- ▶ Don't overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- ▶ Dress properly. Don't wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose cloths, jewelry or long hair can be caught in moving parts.
- ▶ If devices are provided for connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards. Collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

- ▶ Don't force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- ▶ Don't use the power tool if the switch doesn't turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- ▶ Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- ▶ Store idle power tools out of the reach of children and don't allow persons unfamiliar with power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- ▶ Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc. in accordance with the instruction, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- Use the power tool, accessories and tool bits etc. in accordance with the instruction, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

SERVICE

- Have your power tool serviced by qualified repair person using only identical replacement parts. This will ensure that the safety of power tool is maintained.
- Follow instruction for lubricating and changing accessories.
- Keep handles dry, clean and free from oil and grease

SPECIAL SAFETY INFORMATION

NOTE!

Please read the following instructions first before turning on power

- The working site shall be neat, operating field also requires a neat environment, sufficient illumination; cluttered or scattered things around may be dangerous.
- The operator shall wear the appropriate clothing, do not wear the gauze glove and spacious clothes, etc., so as to prevent possible personal injuries caused by being caught in the rotating parts of machine. It is suggested to wear insulation shoes for outdoors operation.
- Concentrated on the operation, maintains the balance of your body and holds the handle with two hands, so as to prevent the possible machine jumping during the notching work and affect the operation effect.
- Do not let other people approach the operation; unauthorized access is not permitted on the working site except the operating personnel;
- As for the fixing work, if it is applicable to be notched on the surface of movable parts, the tool shall be fixed.
- Avoid implementing the operation on the water and oil surface or the site arranged with wire cable. Do not damage the wire cable and avoid the water or oil entering into electric appliances of motor or switch, etc.
- Do not use in following area: it is prohibited to use in special circumstance of moist heat, snowy, explosive or corrosive gas area.

- ▶ Correctly use the plug; do not exchange the plug arbitrarily; do not insert the plug that directly connected with the bare conductor into socket.
- ▶ To disconnect the plug promptly; disconnect the plug-in case of the machine is idle or replacing the cutting tool components, so as to prevent the electric shock.


OPERATING GUIDE

NOTE!

Please read the instructions carefully before using the machine.

INSTALL THE STOPCOCK

1. Release the depth adjustment lever to pull the bottom plate down.
2. Hold and screw the water stopcock with M4X14 screws packed Position to the head shell , as shown as the picture blew.

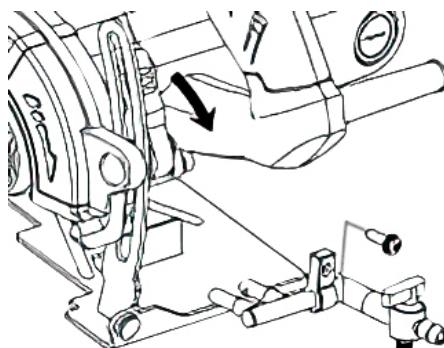

Warning!


- ▶ For safety reasons, it is recommended to install a residual current action protector with a tripping current not exceeding 30mA during wet cutting.
- ▶ Be sure to turn off the machine before connecting the water source and adjusting the water output.

INSTALL AND REPLACE THE SAW

- ▶ Unplug before applying any changes to the machine.
- ▶ Please wear the protective gloves
- ▶ Make sure that the diamond cut is properly installed and that the cut is intact.

ASSEMBLING

1. Cover the cut into the output shaft to ensure cutting The arrow on the slice coincides with the arrow on the head shell.
2. Install the outer plate to the output shaft to ensure that the outer plate is aligned with the output shaft.
3. The open wrench blocks the outer plate, penetrate the M8X18 screw (reverse thread), then rotate the screw counterclockwise with the sleeve wrench to ensure the cutter is locked.

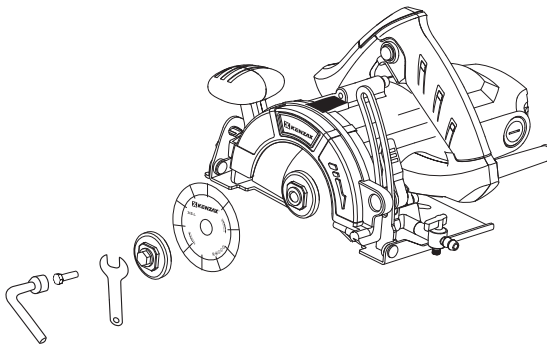


REPLACING

The sequence of replacing blade is opposite to the sequence of mounting blade.


ADJUST THE CUTTING DEPTH

1. Unscrew the base plate trigger in the direction as shown.
2. Adjust the bottom plate up or down to the appropriate depth. Workability Measurement tools to assist in adjusting the accurate depth.
3. Turn the locking bottom plate trigger in the opposite direction.

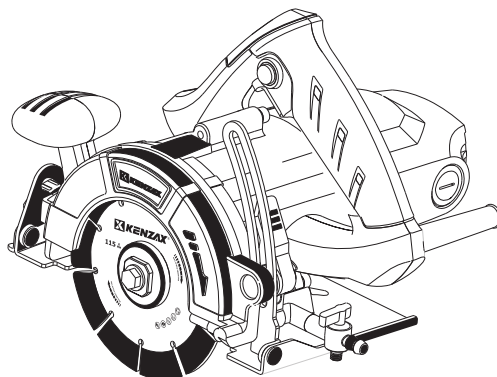

ADJUST THE CUTTING ANGLE

1. Rotate and loosen the knob in the direction shown.
2. Adjust the base plate up or down to the proper angle. Point the floor pointer to the desired scale.
3. Rotate the locking knob in the opposite direction.

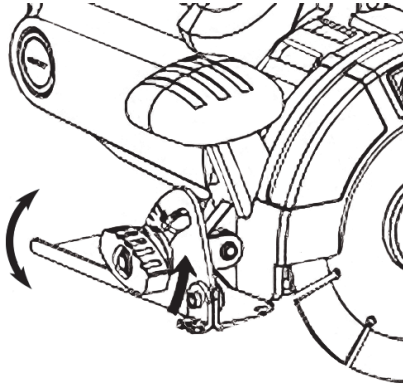

OPERATION

ON/OFF SWITCH

- ▷ connect the power cord to a standard power outlet.
1. To start the machine, simply depress the switch trigger. Release the switch trigger to stop your marble cutter.
 2. If you wish to use the machine continuously, depress switch trigger and then lock on button, release switch trigger first and lock on button second. Your switch is now locked on for continuous use. To turn off your machine, just depress and release the switch trigger. The switch will return to the "off" position automatically.

MAINTENANCE

Warning: Always off and unplug before any maintenance and maintenance of this machine!

- ▷ The machine is manufactured according to the safety standards. If the machine fails, do not

remove it by yourself. Ask the maintenance department or qualified professional maintenance personnel to repair it. Otherwise, it will bring a danger to you!

- ▷ During maintenance, the required parts must be spare parts provided by the company, otherwise it will cause damage or personal injury to the machine.
- ▷ After the use of each machine, please clean the sand and dust on the machine, and ensure the drying of all operating parts, such as switches, plugs and handles, and store them in a dry place where children can not touch, so as to avoid the rust on the machine cannot work properly or accidents.

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and wellbeing. Disposal of discarded material shall be in accordance with local environmental regulations

حفاظت از محیط زیست

ضایعات محصولات الکتریکی را نباید با زباله‌های خانگی دور ریخت. لطفاً به مراکزی که امکانات بازیافت وجود دارد تحویل داده شود. وسایل برقی را به عنوان زباله‌های شهری دور نریزید و مناطق مخصوص زباله‌های بازیافتی انبارش نمایید. برای کسب اطلاعات در مورد سیستم‌های جمع‌آوری زباله‌های بازیافتی با شهرداری منطقه خود تماس بگیرید. اگر وسایل برقی در محل‌های دفن زباله‌های معمولی دور ریخته شوند، امکان این وجود دارد که مواد خطرناک و سمی به سفره‌های زیرزمینی آب نشت کرده و وارد زنجیره غذایی شوند. که این امر موجب آسیب رسیدن به سلامت می‌شود. دفع ضایعات محصولات الکتریکی باید مطابق با مقررات محیط زیست باشد.

کنزاکس سرویس

ضمن تشکر از حسن انتخاب شما

به همراه ابزار شما کارت ضمانت نامه **۱۲ ماهه** کنزاکس سرویس ارائه می‌گردد.

لطفاً توجه داشته باشید که هیچ کدام از اجزای داخلی ابزار، احتیاج به تعمیر و یا بهبود اضافه جهت بهینه نمودن عملکرد ندارند. بنابراین از هرگونه اعمال دستکاری یا مراجعه به مراکز تعمیرات غیر مجاز اجتناب نمایید و در صورت بروز هرگونه مشکل سریعاً با مراکز سرویس و پشتیبانی کنزاکس به شماره ۰۲۱-۶۲۸۱۹ و یا به وب سایت www.kenzax.com تماس حاصل نمایید.

راه اندازی

سوئیچ روشن و خاموش

همواره قبل از اتصال دستگاه به برق از خاموش بودن دستگاه اطمینان حاصل نمایید.

۱. برای راه اندازی دستگاه تنها کافیسیت کلید روشن / خاموش را به سمت بالا فشار دهید تا دستگاه شروع به کار کند. با رها کردن کلید دستگاه خاموش می‌شود.
۲. در صورت تمایل به استفاده مداوم از دستگاه، کلید را به سمت بالا فشار دهید و سپس دکمه قفل کن کلید را بفشارید تا ماشه کلید در موقعیت خود ثابت شود. برای خاموش کردن مرمز بر تنها کافی است کلید را مجدداً به سمت بالا فشار دهید تا دکمه قفل کن کلید آزاد شود

نگهداری و تعمیرات




همیشه قبل از هر گونه تعمیر و نگهداری این دستگاه، آن را خاموش و از برق جدا کنید!

- ◀ این دستگاه بر اساس استانداردهای ایمنی تولید شده است و نیاز به هیچ گونه تغییرات و دستکاری ندارد لذا در صورت بروز هر گونه مشکل به نمایندگی‌های مجاز شرکت کنزاکس مراجعه نمایید.
- ◀ پس از هر بار استفاده، حتماً گرد و غبار روی دستگاه (مخصوصاً ورودی هوا) را تمیز کنید و تمام قسمت‌های عملیاتی مانند کلیدها، دوشاخه‌ها و دستگیره‌ها را با دستمال تمیز نمایید.
- ◀ در صورت مشاهده جرقه در قسمت موتور و یا استشمام بوی غیر طبیعی حتماً به نمایندگی‌های مجاز شرکت کنزاکس مراجعه نمایید.
- ◀ فشار بیش از حد و غیر استاندارد به دستگاه در حین کار باعث گرم شدن بیش از حد موتور و آسیب جدی به آن می‌شود. در صورت بروز این مشکل عملیات کاری را فوراً متوقف کرده و دستگاه را به مدت چند دقیقه در حالت بی‌باری روشن بگذارید.


تنظیم عمق برشی

۱. اهرم قفل کن کفی را آزاد نمایید.
۲. کفی فلزی دستگاه را تا عمق مناسب به بالا یا پایین تنظیم کنید.
۳. اهرم قفل کن کفی را کاملاً سفت نمایید.

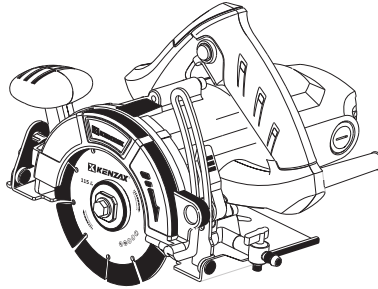

تعویض زاویه برشی

۱. پیچ قفل کن را در جهت خلاف عقربه‌های ساعت بچرخانید تا کاملاً شل شود.
۲. کفی فلزی دستگاه را به سمت بالا و یا پایین حرکت داده و در زاویه دلخواه آن را تنظیم نمایید.
۳. در انتها پیچ قفل کن را در جهت عقربه‌های ساعت بچرخانید تا کاملاً سفت شود.

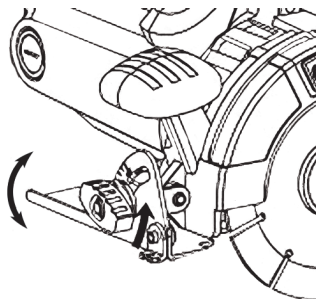

**هشدار!**


- ◀ به دلایل ایمنی، توصیه می‌شود در هنگام برش تر، از منبع برق مجهز به محافظ جان استفاده نمایید.
- ◀ قبل از اتصال منبع آب و تنظیم خروجی آب، حتما دستگاه را خاموش کنید.

نصب و تعویض تیغه برشی

- ◀ قبل از هر گونه عملیات، دوشاخه دستگاه را از برق جدا کنید.
- ◀ لطفا دستکش محافظ بپوشید.
- ◀ مطمئن شوید که تیغه برشی به درستی نصب شده و سالم است.

نصب تیغه برشی

۱. تیغه برشی را بر روی شفت دستگاه قرار دهید.
۲. فلنج را بر روی تیغه برشی نصب نمایید.
۳. در انتها توسط دو عدد آچار پیچ شفت را در جای خود کاملاً سفت نمایید.

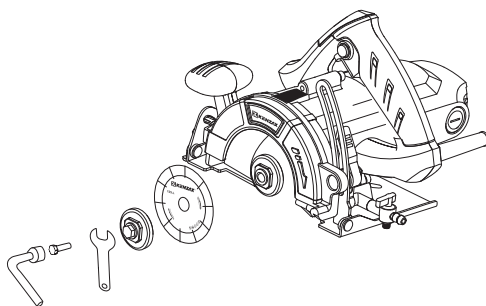

تعویض تیغه برشی

۱. توسط آچار پیچ شفت را جدا کنید.
۲. فلنج را از جای خود خارج نمایید.
۳. تیغه برشی را از روی شفت جدا نمایید.

- ◀ از ورود افراد متفرقه به محیط کار خودداری کنید.
- ◀ در صورت امکان برای ایجاد شکاف روی سطح‌های متحرک؛ دستگاه ثابت باشد.
- ◀ از انجام عملیات شیارزنی بر روی سطوح حاوی آب، روغن، سیم و کابل خودداری نمایید. آسیب به کابل ممکن است خطراتی جبران ناپذیری به دنبال داشته باشد. همچنین ورود آب و روغن و هشتقات شیمیایی، به قسمت‌های مختلف دستگاه می‌تواند به دستگاه آسیب بزند.
- ◀ اکیدا توصیه می‌شود در شرایط مرطوب، برفی و در مجاورت مواد منفجره از دستگاه استفاده نشود.
- ◀ به دلخواه دو شاخه دستگاه را تعویض نکنید. دو شاخه را بدون پریز و عایق مناسب به سیم برق وصل نکنید.
- ◀ برای اجتناب از شوک الکتریکی و پیش از تعویض صفحات برش دستگاه و نیز زمانی که دستگاه را استفاده نمی‌کنید، از عدم اتصال برق مطمئن شوید.

عملیات نصب




توجه!

لطفاً قبل از استفاده از دستگاه دستورالعمل‌ها را به دقت بخوانید.

نصب شیر آب

۱. کفی فلزی دستگاه را در پایین‌ترین حالت ممکن قرار دهید.
۲. شیر آب را در محل خود بر روی پوسته قرار داده و با پیچ $M4 \times 14$ آن را کاملاً در جای خود محکم نمایید.

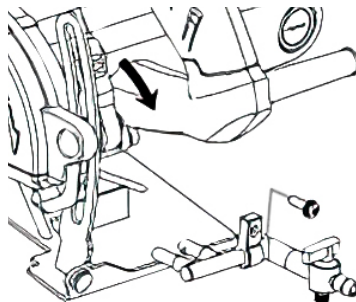

استفاده صحیح از دستگاه

- ◀ از اعمال بار اضافه به دستگاه جدا خودداری نمائید. انتخاب درست ابزار برقی مناسب کارتان، باعث کاهش هزینه و زمان و حسن انجام کار برای شما خواهد شد. بنابراین همیشه برای انجام عملکرد مورد نظران از ابزار برقی مخصوص به آن کار استفاده نمائید.
- ◀ در صورت معیوب بودن کلید دستگاه، هرگز از آن استفاده نکنید و به نزدیک ترین مراکز خدمات پس از فروش برای تعمیر آن مراجعه نمائید. هر دستگاهی که با کلید قابل کنترل نباشد، خطر آفرین است و باید تعمیر شود.
- ◀ قبل از هرگونه تنظیم یا تعویض لوازم جانبی دستگاه، همچنین زمانی که از دستگاه استفاده نمی‌کنید دو شاخه را از منبع برق جدا نمائید. این کار از شروع به کار ناگهانی دستگاه جلوگیری خواهد کرد.
- ◀ ابزارآلات برقی را از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. ابزارآلات برقی در دسترس افراد آموزش ندیده، خطرآفرین خواهند بود.
- ◀ از ابزارآلات برقی به خوبی نگهداری نمائید. هرگونه تنظیمات، گیرکردن قطعات دوار و یا هر وضعیت دیگری که ممکن است بر روی عملکرد دستگاه تاثیر بگذارد را بررسی نمائید و در صورت آسیب دیدگی قبل از استفاده، آن مورد را رفع نمائید. بیشتر حوادث از عدم نگهداری صحیح ابزارآلات برقی رخ می‌دهد.
- ◀ همواره از ابزار و لوازم جانبی مناسب این دستگاه استفاده نمائید. همچنین از این دستگاه تنها برای کارهایی که برای آن تهیه و طراحی شده است، استفاده نمائید.

تعمیرات و نگهداری

- ◀ برای هرگونه تعمیر و تعویض قطعات، تنها به مراکز خدمات پس از فروش **شرکت کنزاکس** مراجعه نمائید.

دستورالعمل‌های ایمنی

- ◀ محل کار باید مرتب باشد. ابزارآلات و ادوات به هم ریخته و نامرتب می‌تواند، خطرآفرین باشد.
- ◀ کاربر باید لباس مناسب بپوشد. دستکش گاز و لباس‌های خیلی گشاد ممکن است در قسمت‌های دوار ابزار گیر کرده و باعث آسیب شود. توصیه می‌شود که از کفش‌های عایق استفاده ننمایید.
- ◀ در حین کار تمرکز نمایید و تعادل بدن را حفظ نموده و دسته شیارزن را با دو دست نگه دارید تا از پرتاب ناگهانی آن در زمان انجام برش جلوگیری ننمایید.

- ◀ ابزارآلات برقی را در معرض باران و یا رطوبت قرار ندهید. ورود آب به ابزارآلات برقی ممکن است موجب برق گرفتگی شود.
- ◀ هرگز از کابل دستگاه برای حمل آن استفاده ننمائید و یا برای قطع اتصال دستگاه از پریز، کابل را نکشید. همچنین کابل را از معرض حرارت، سطوح نوک تیز، قطعات دوار و روغن دور نگهدارید. کابل های آسیب دیده مستعد بروز برق گرفتگی هستند.
- ◀ هنگام استفاده از دستگاه در محیط های باز، از سیم رابط مناسب استفاده ننمائید تا احتمال برق گرفتگی کاهش یابد.
- ◀ هنگام استفاده از دستگاه در محیط های مرطوب حتما از کلید حفاظت جان (RCD) برای اتصال دستگاه به منبع تغذیه برق شهری استفاده ننمائید. کلید حفاظت جان، مانند دستکش و کفش ایمنی به افزایش ایمنی فردی کمک می کند.
- ◀ هرگز ابزارهای دارای جریان متناوب را به منبع تغذیه برق با جریان غیرمتناوب (مستقیم) وصل ننمائید. این کار منجر به آسیب دیدگی دستگاه و آسیب های فردی خواهد شد.

ایمنی فردی

- ◀ زمانی که خسته اید یا تحت تاثیر دارو قرار دارید و در مجموع زمانی که در سلامتی کامل به سر نمی برید، هرگز از ابزارآلات برقی استفاده ننمائید. چرا که لحظه ای درنگ و بی دقتی منجر به صدمات جبران ناپذیری خواهد شد.
- ◀ همواره از لوازم ایمنی مانند عینک ایمنی، ماسک هوا، کفش و کلاه ایمنی و محافظ گوش استفاده ننمائید تا صدمات فردی کاهش یابد.
- ◀ برای اجتناب از شروع به کار ناگهانی دستگاه، قبل از اتصال آن به منبع برق از قرار داشتن کلید در وضعیت خاموش اطمینان حاصل ننمائید. همچنین زمانی که آن را جا به جا می کنید، دو شاخه را از پریز جدا کرده و انگشتان را بر روی کلید قرار ندهید.
- ◀ قبل از روشن کردن دستگاه از عدم اتصال هرگونه ابزار تنظیم مانند آچار به قطعات دوار اطمینان حاصل ننمائید چرا که می تواند منجر به صدمات جبران ناپذیری گردد.
- ◀ حالت صحیح قرارگیری پاها و حفظ تعادل بدن حین کار از خارج شدن کنترل دستگاه جلوگیری می نماید.
- ◀ همواره در حین کار از لباس کار مناسب استفاده ننمائید. استفاده از لباس های غیر استاندارد و گشاد، جواهرات و داشتن موهای بلند امکان درگیر شدن آنها را با قسمت های متحرک ابزارآلات برقی افزایش داده و ممکن است خطر آفرین شود.
- ◀ در صورت استفاده از غبار جمع کن از اتصال صحیح و مناسب آن به دستگاه اطمینان حاصل ننمائید. استفاده از چنین لوازم جانبی، مضرات مربوط به غبارات را کاهش خواهد داد.

**هشدار!**

لطفاً به منظور دستیابی به بهترین عملکرد محصول قبل از استفاده، این دستورالعمل را به دقت بخوانید و در محل مناسب انبارش نمایید.



این علامت به معنی خطر برق گرفتگی و وجود ولتاژ خطرناک در دستگاه را بیان می‌کند.



این علامت به این معنی می‌باشد که در دفترچه راهنمای دستگاه، دستورالعمل‌های مهمی در مورد عملکرد و جابجایی وجود دارد.

دستورالعمل‌های کلی ابزارآلات برقی

**هشدار!**

لطفاً کلیه مواردی که در ذیل قید شده است را با دقت مطالعه فرمائید و به کار برید، عدم پیروی از دستورالعمل‌های ذیل ممکن است منجر به ایجاد صدمات جبران ناپذیر فیزیکی یا ایجاد اختلال در کارکرد ابزارآلات برقی شوند.

این دفترچه راهنما را بعد از مطالعه نگهداری نمائید.

منظور از کلمه "ابزار برقی" در هشدارهای زیر کلیه ابزارهای برقی متصل به کابل یا ابزارهای شارژی دارای باتری می‌باشد.


ایمنی محل کار

- ◀ محل کار را تمیز و روشن نگهدارید. محیط‌های در هم ریخته و تاریک حادثه آفرین خواهند بود.
- ◀ هرگز از ابزارآلات برقی در مجاورت مواد اشتعال زا استفاده ننمائید. ابزار آلات برقی جرقه ایجاد می‌کنند که ممکن است موجب آتش سوزی گردد.
- ◀ ابزارآلات برقی را هنگام استفاده از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. زیرا ممکن است باعث از دست دادن تمرکز و کنترل دستگاه شود.

ایمنی برقی

- ◀ دو شاخه دستگاه باید متناسب با پریز باشد. با این کار احتمال برق گرفتگی به شدت کاهش خواهد یافت.
- ◀ در هنگام استفاده از دستگاه به محل عبور لوله، کابل برق مربوط به رادیاتور، گرمخانه و یا یخچال و... توجه نمائید. زیرا تماس بدن با آن‌ها احتمال خطر برق گرفتگی را افزایش می‌دهد.

نام قطعات دستگاه

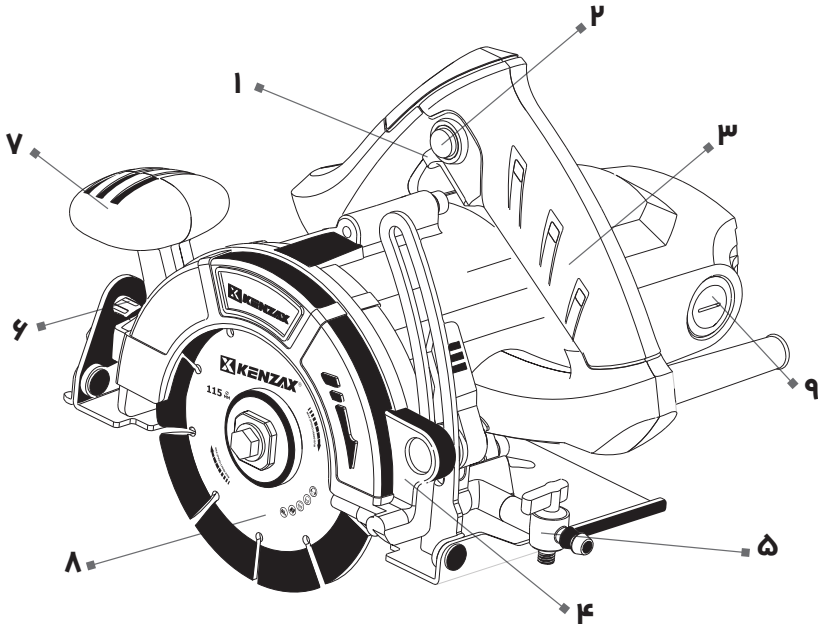

نام قطعات دستگاه


- | | |
|---------------------|----------------|
| ۱. کلید روشن/خاموش | ۶. تنظیم زاویه |
| ۲. ضامن قفل کن کلید | ۷. دسته جانبی |
| ۳. دسته ضد لغزش | ۸. تیغه |
| ۴. تنظیم عمق | ۹. درپوش ذغال |
| ۵. شیر آب | |

مشخصات فنی

مدل	3202
توان	۱۷۵۰ وات
ولتاژ	۲۲۰ ولت
فرکانس	۵۰ هرتز
سرعت بی باری	۱۴۰۰۰ دور بر دقیقه
عمق برشی	۳۸/۵ میلی‌متر
قطر تیغه	۱۱۵ میلی‌متر
نوع برش	خشک/تر
وزن	۳/۸ کیلوگرم
متعلقات	آچار بکس ذغال آچار بکس شیر آب



مهربر

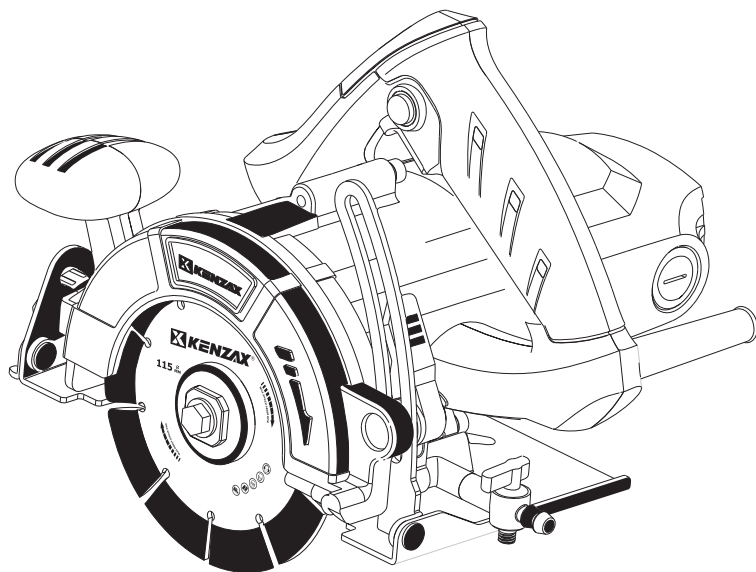

ITEM NO. 3202

دفترچه راهنمای فارسی

