



OSCILLATING MULTI TOOL




ITEM NO. 3595

INSTRUCTION MANUAL

SPECIFICATION

Model	3595
Power	500 W
Voltage	220 V
Frequency	50 Hz
No Load speed	5000-22000 opm
Oscillating Angle	3.2°
Max. cutting depth	40 mm
Variable Speed Setting Number	6
Motor Type	brush motor
Product Length	270 mm
Product Height	94 mm
Product Width	57 mm
Net weight	1.38 Kg
Gross weight	1.7 Kg
Supplied with	BMC BOX
	1 pair of carbon brush
	2 Pcs HCS oscillating standard multitool saw blades (wood,plastics,soft metal)
Accessories	SS Fixed scraper oscillating multitool saw blades
	flush triangular sanding pad oscillating multitool
	4pcs sanding papers (60,80,120, 180)

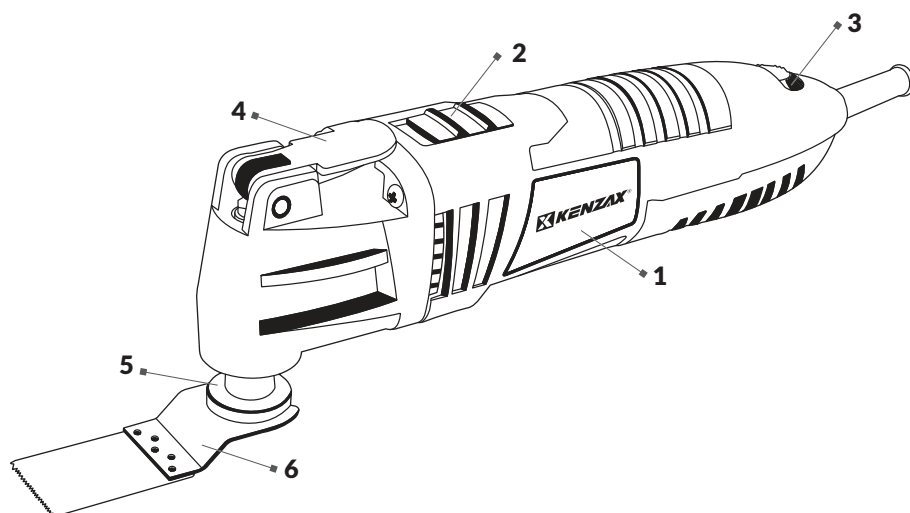PART LIST**Product Elements**

- | | |
|------------------------|-----------------------|
| 1. Body | 4. Blade change lever |
| 2. On / Off switch | 5. Accessory holder |
| 3. Variable speed dial | 6. Blade |

NOTE!

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

 This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

 This sign means that there are important instructions of operation and handling in the manual that comes with this device.

GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

- ▷ Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and or serious injury.
- ▷ Save all warnings and instructions for future reference.
- ▷ The term "power tool" in the warnings refers to your mains-operated (corded) power tools or battery operated (cordless) power tool.

WORK AREA SAFETY

- ▷ Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- ▷ Don't operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- ▷ Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRIC SAFETY

- ▷ Power tool plugs must match the outlet. Never modify the plug in any way. Don't use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- ▷ Avoid body contact with earthed or grounded surfaces such as pipe, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- ▷ Don't expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- ▷ Don't abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increased the risk of electric shock.
- ▷ When operating a power tool outdoors, use an extension cord suitable for outdoor use. Using a cord suitable for outdoor use will reduce the risk of electric shock.

- ▶ If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.
- ▶ Use of power supply via a RCD with a rated residual current of 30mA or less is always recommended.

PERSONAL SAFETY

- ▶ Stay alert, watch what you are doing and use common sense when operating a power tool. Don't use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- ▶ Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- ▶ Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- ▶ Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- ▶ Don't overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- ▶ Dress properly. Don't wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose cloths, jewelry or long hair can be caught in moving parts.
- ▶ If devices are provided for connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards. collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

- ▶ Don't force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- ▶ Don't use the power tool if the switch doesn't turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- ▶ Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- ▶ Store idle power tools out of the reach of children and don't allow persons unfamiliar with power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- ▶ Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- ▶ Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

- ▶ Use the power tool, accessories and tool bits etc. in accordance with the instruction, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

SERVICE

- ▶ Have your power tool serviced by qualified repair person using only identical replacement parts. This will ensure that the safety of power tool is maintained.
- ▶ Follow instruction for lubricating and changing accessories.
- ▶ Keep handles dry, clean and free from oil and grease.

OSCILLATING TOOL SAFETY INSTRUCTIONS

- ▶ Wear safety goggles
- ▶ Wear ear protection.
- ▶ Wear dust mask
- ▶ Wear Anti-vibration gloves
- ▶ Keep hands out of path of cutting blade.
- ▶ Do not use excessively oversized accessory
- ▶ Do not leave the tool while it's On.
- ▶ Always secure all moving portions before carrying the tool.
- ▶ Do not touch the workpiece immediately after operation; it may be extremely hot and could burn your skin.
- ▶ Do not use the tool on any materials containing asbestos.

PREPARATION

WARNING!

- ▶ To prevent any accidents, assemble all parts of the tool before using it.
- ▶ If any parts are missing, do not operate this tool until the missing parts are replaced. Failure to do so could result in possible serious personal injury.

WARNING!

The machine is designed to be operated by one person. The prerequisites for operating the machine are physical and mental fitness as well as knowledge and understanding of the operating instructions. Persons who, due to their physical, sensory or mental capabilities, inexperience or lack of knowledge, are unable to operate the machine safely must not use the machine without supervision or instruction by a responsible person.

OSCILLATING TOOL SAFETY

WARNING!


- ▶ Do not wash the power tool After the tool is used with water.
- ▶ - Ensure the accessory is correct and sharp before starting the tool.
- ▶ - Never hold the work pieces with your hand or any part of your body during operations with the tool.
- ▶ - This tool vibrates during use. Continual and regular users should monitor closely the condition of their hands and fingers. Prolong exposure to vibration could result in
- ▶ - Wear suitable anti-vibration gloves when using the tool.
- ▶ - Plan your work and allow plenty of time for rest.
- ▶ - When the tool is not in use or before performing cleaning, turn it off and disconnect from main power source.
- ▶ - To reduce risk of injury, keep children and bystanders away while operating this power tool.
- ▶ - Keep handles and grasping surfaces dry, clean and free from oil and grease.
- ▶ - To reduce the risk of electric shock, do not use near water or any liquid.
- ▶ Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.
- ▶ Do not use the power tool if the switch does not turn on and off.
- ▶ Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.
- ▶ Never use the cord for carrying, pulling or unplugging the power tool.
- ▶ Do not start cutting until the saw reaches its full power

SWITCH ACTION

Connect the power tool to the main power source.


- ▶ To start the power tool on, set the on/off switch to "1" position.

- ▶ To turn off the power tool, set the on/off switch to "0" position.

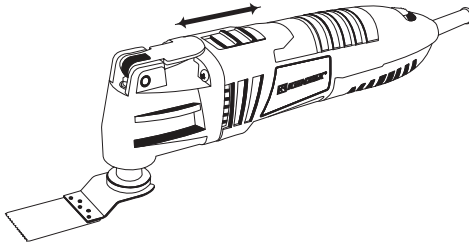

VARIABLE SPEED DIAL


- ▶ Using the speed adjusting wheel to adjust the speed.

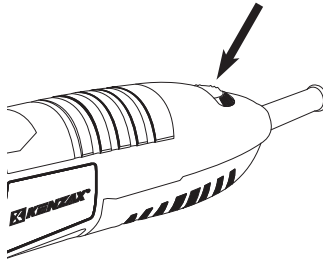

BLADE CHANGE LEVER

- ▶ Flip the Blade change lever (1) completely to loosen the accessory holder (2).
- ▶ Insert an accessory into the accessory holder from the open-end. Make sure the alignment holes on the accessory match the position of pins on the accessory holder.
- ▶ Flip the Blade change lever completely to tighten the accessory holder.
- ▶ Check and make sure the accessory is securely positioned onto the tool before starting the tool.

- ▶ To remove the accessory, completely flip the Blade change lever again, then release the accessory from the tool.

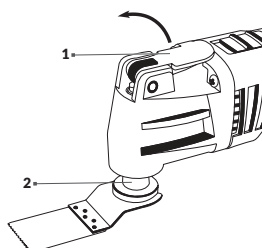

OPERATION

CAUTION!


Always be sure that the tool is switched off before any adjusting.

Check the accessory is securely seated on the tool with holes and pins aligned.

Before connecting the tool to the main sources, make sure the On/Off switch was set at "0" position.

CUTTING OPERATION

- ▶ Use straight saw blade for making precise cuts on wood, plastic or drywall material.
- ▶ Hold the machine with both hands in a stable position, then switch on the machine without loading for few seconds.
- ▶ Adjust the speed of the tool with scrolling the Variable speed dial.
- ▶ Gently place the tool on the workpiece surface.

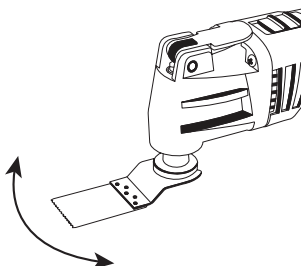

Note!

If you need to rest the blade on a delicate surface, use cardboard or masking tape to protect the surface.

SANDING OPERATION

- ▷ Install the sanding accessory onto the tool with selecting suitable sandpaper.
- ▷ Adjust the speed with the Variable speed dial.
- ▷ Gently place the tool on the workpiece surface.

SCRAPING OPERATION

- ▷ Install the scraper blade onto the tool.
- ▷ Hold the machine with both hands in a stable position, then switch on the machine without loading for few seconds.
- ▷ Adjust the speed with the Variable speed dial.
- ▷ Gently place the tool on the workpiece surface at an angle of 10-15°.



Do not apply excessive pressure on the tool.

Stop the machine immediately in case of abnormal vibration or noise.

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and wellbeing. Disposal of discarded material shall be in accordance with local environmental regulations.



Do not dispose of batteries and chargers in general household garbage.

TOOL STORAGE AND MAINTENANCE

- ▷ Keep the device in dry and clean environment
- ▷ Always be sure that the tool is switched off and unplugged from power source before attempting to perform inspection or any maintenance.
- ▷ Never use gasoline, benzene, thinner, alcohol or the like. Discoloration, deformation or cracks may result.

انبارش ابزار

همیشه قبل از انجام هر گونه بازرسی یا تعمیرات دستگاه را از منبع تغذیه جدا کرد و جهت انبارش در مکان خشک و بدون رطوبت نگهداری نمایید.

هرگز از گازوئیل، بنزن، تینر، الکل یا هر گونه مواد مشابه که خاصیت خوردگی دارند استفاده نکنید. چرا که موجب تغییر رنگ، تغییر شکل یا ترک خوردن دستگاه می‌شود.

کنزاکس سرویس

ضمن تشکر از حسن انتخاب شما

به همراه ابزار شما کارت ضمانت نامه **۱۲ ماهه** کنزاکس سرویس ارائه می‌گردد.

لطفا توجه داشته باشید که هیچ کدام از اجزای داخلی ابزار، احتیاج به تعمیر و یا بهبود اضافه جهت بهینه نمودن عملکرد ندارند. بنابراین از هرگونه اعمال دستکاری یا مراجعه به مراکز تعمیرات غیر مجاز اجتناب نمایید و در صورت بروز هرگونه مشکل سریعا با مراکز سرویس و پشتیبانی کنزاکس به شماره ۰۲۱-۶۲۸۱۹ و وب سایت www.kenzax.com تماس حاصل نمایید.

عملیات سنباده کاری

- ◀ ابزار مخصوص سنباده زدن را بر روی دستگاه نصب نمایید.
- ◀ سرعت دستگاه را به کمک دیمر تنظیم نمایید.
- ◀ ابزار را به آرامی روی سطح قطعه کار قرار دهید.

عملیات رنگ بری

- ◀ تیغه کاردک را بر روی ابزار نصب کنید.
- ◀ دستگاه را با هر دو دست در وضعیت ثابت نگه دارید، سپس دستگاه را بدون بارگیری برای چند ثانیه روشن بزارید.
- ◀ سرعت را متناسب با کاربرد خود تغییر دهید.
- ◀ ابزار را به آرامی با زاویه ۱۰-۱۵ درجه روی سطح قطعه کار قرار دهید.



از آوردن فشار بیش از حد به ابزار خودداری نمایید.
در صورت بروز لرزش یا سر و صدای غیرعادی دستگاه را فوراً متوقف کنید.

حفاظت از محیط زیست

ضایعات محصولات الکتریکی را نباید با زباله‌های خانگی دور ریخت. لطفاً به مراکزی که امکانات بازیافت وجود دارد تحویل داده شود. وسایل برقی را به عنوان زباله‌های شهری دور نریزید و مناطق مخصوص زباله‌های بازیافتی انبارش نمایید. برای کسب اطلاعات در مورد سیستم‌های جمع‌آوری زباله‌های بازیافتی با شهرداری منطقه خود تماس بگیرید. اگر وسایل برقی در محل‌های دفن زباله‌های معمولی دور ریخته شوند، امکان این وجود دارد که مواد خطرناک و سمی به سفره‌های زیرزمینی آب نشت کرده و وارد زنجیره غذایی شوند. که این امر موجب آسیب رسیدن به سلامت می‌شود. دفع ضایعات محصولات الکتریکی باید مطابق با مقررات محیط زیست باشد.

شروع عملیات



احتیاط!

همیشه قبل از انجام هرگونه تنظیمات مطمئن شوید که ابزار خاموش است. بررسی کنید که تیغه به طور ایمن روی ابزار قرار گرفته و سوراخ‌ها و پین‌ها هم تراز باشند. قبل از اتصال ابزار به برق، مطمئن شوید که کلید روشن/خاموش در موقعیت "ه" قرار دارد.


عملیات برش

- ◀ از تیغه مستقیم بر برای برش‌های دقیق بر روی چوب، پلاستیک و یا مصالح دیوار استفاده کنید.
- ◀ دستگاه را با هر دو دست در وضعیت ثابت نگه دارید، سپس دستگاه را بدون بارگیری برای چند ثانیه روشن کنید.
- ◀ می‌توانید سرعت حرکت تیغه را به کمک دیمر تغییر تنظیم نمایید.
- ◀ ابزار را به آرامی روی سطح قطعه کار قرار دهید.




توجه!

اگر لازم است تیغه را روی یک سطح ظریف قرار دهید، از مقوا یا نوار چسب برای محافظت از سطح استفاده کنید.

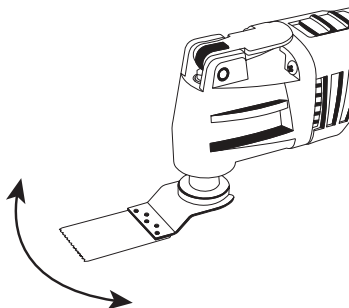


دیمر تغییر سرعت

جهت تنظیم سرعت دستگاه می‌توان از دیمر تغییر سرعت استفاده کرد.

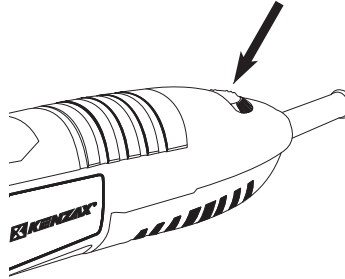

ضامن تعویض تیغه


- ◀ اهرم تعویض تیغه (۱) را کاملاً به سمت بالا بچرخانید تا ابزار گیر (۲) شل شود.
- ◀ تیغه را از قسمت باز داخل ابزارگیر قرار دهید. مطمئن شوید که سوراخ‌های تیغه با پین‌های ابزارگیر هم‌تراز باشند.
- ◀ مجدداً اهرم تعویض تیغه (۱) را بچرخانید تا ابزارگیر سفت شود.
- ◀ قبل از راه اندازی ابزار، بررسی کنید و مطمئن شوید که تیغه به طور ایمن روی ابزارگیر قرار گرفته است.
- ◀ برای جدا کردن لوازم جانبی، اهرم تعویض تیغه را دوباره کاملاً بچرخانید، سپس تیغه را جدا نمایید.

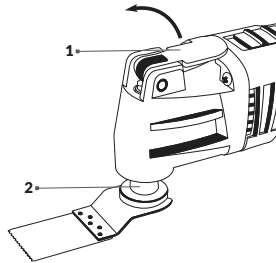

- ◀ از دستکش مناسب و ضد لرزش استفاده نمایید.
- ◀ همواره زمان استفاده از دستگاه را مدیریت کنید و به دستان خود استراحت دهید.
- ◀ هنگامی که از ابزار استفاده نمی‌شود یا قبل از هر گونه تغییرات و نظافت، آن را خاموش کرده و از منبع برق اصلی جدا کنید.
- ◀ برای جلوگیری از بروز هرگونه حادثه، از قرار گرفتن کودکان و افراد در اطراف محل کار خودداری نمایید.
- ◀ همواره دستان خود را خشک و تمیز و عاری از هرگونه روغن و چربی نگه دارید.
- ◀ برای جلوگیری از خطر برق گرفتگی، از دستگاه در مکان‌های مرطوب و خیس استفاده نکنید.
- ◀ از دستگاه در محیط‌هایی که احتمال بروز آتش سوزی و انفجار وجود دارد خودداری نمایید.
- ◀ هرگز از دستگاه با کلید معیوب استفاده نکنید.
- ◀ در هنگام خستگی و یا زمانی که تحت تأثیر مواد مخدر، الکل یا دارو هستید از ابزار برقی استفاده نکنید.
- ◀ هرگز از سیم برق دستگاه برای حمل و نقل استفاده نکنید.
- ◀ اجازه دهید تا ااره به قدرت کامل خود برسد، سپس استفاده فرمایید.

کلید روشن و خاموش

- پریز دستگاه را به منبع برق اصلی وصل کنید.
- ◀ برای روشن کردن ابزار، کلید روشن/خاموش را در موقعیت «۱» قرار دهید.
 - ◀ برای خاموش کردن ابزار، کلید روشن/خاموش را روی حالت "۰" قرار دهید.

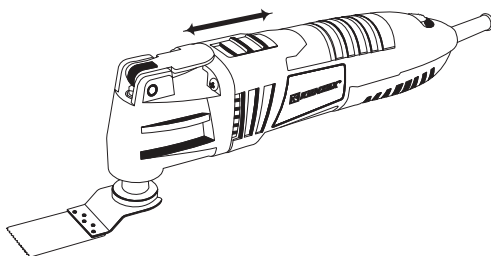

- ◀ از دستکش ایمنی مناسب استفاده نمایید.
- ◀ از قرار دادن دست‌ها در مسیر تیغه برشی جدا خوداری نمایید.
- ◀ از استفاده لوازم جانبی با سایز متفاوت و غیر استاندارد جدا خوداری نمایید.
- ◀ از رها کردن دستگاه روشن خوداری نمایید.
- ◀ در هنگام حمل دستگاه تمامی قسمت‌های متحرک را سفت نمایید.
- ◀ پس از پایان عملیات سایش و یا برش، به قطعه کار دست نزنید. قطعه کار بر اثر سایش ممکن است بسیار داغ شده باشد و موجب سوختگی شود.
- ◀ از برش موادی که دارای آربست هستند جدا خوداری نمایید.

آماده سازی



برای جلوگیری از بروز هر گونه حادثه، قبل از استفاده از دستگاه، تمام قسمت‌های متحرک را مونتاژ کنید در صورت مفقود شدن قطعات دستگاه از آن تا زمانی که قطعه از دست رفته تعویض نشده است، کار نکنید. عدم انجام این کار می‌تواند منجر به صدمات جسمانی کاربر شود.



این دستگاه به گونه‌ای طراحی شده است که تنها توسط یک کاربر کار کند. لازمه کار با دستگاه، آمادگی جسمانی و روحی و همچنین آگاهی و درک دستورالعمل‌های ایمنی می‌باشد. افرادی که به دلیل ناتوانایی‌های جسمی یا ذهنی و بی‌تجربگی قادر به انجام کار ایمن با دستگاه نمی‌باشند، به هیچ عنوان نباید بدون نظارت یا دستور شخص مسئول از دستگاه استفاده کنند.

ایمنی استفاده از فرز همه کاره



- ◀ هرگز ابزار برقی را پس از استفاده با آب تعیز نکنید.
- ◀ قبل از راه اندازی ابزار از صحت و تیز بودن تیغه اطمینان حاصل کنید.
- ◀ هرگز قطعات کار را با دست یا بدن خود نگه ندارید.
- ◀ این ابزار در حین استفاده می‌لرزد. این عمل موجب ایجاد فشار به انگشتان و دست‌ها می‌شود. در صورت کارکرد مستمر و منظم با دستگاه باید وضعیت دست‌ها و انگشتان خود را از نزدیک زیر نظر داشته باشند. قرار گرفتن طولانی مدت در معرض لرزش می‌تواند منجر به بروز آسیب و صدمات جدی به دست شود.

استفاده صحیح از دستگاه

- ◀ از اعمال بار اضافه به دستگاه جدا خودداری نمائید. انتخاب درست ابزار برقی مناسب کارتان، باعث کاهش هزینه و زمان و حسن انجام کار برای شما خواهد شد. بنابراین همیشه برای انجام عملکرد مورد نظرتان از ابزار برقی مخصوص به آن کار استفاده نمائید.
- ◀ در صورت معیوب بودن کلید دستگاه، هرگز از آن استفاده نکنید و به نزدیک ترین مراکز خدمات پس از فروش برای تعمیر آن مراجعه نمائید. هر دستگاهی که با کلید قابل کنترل نباشد، خطرآفرین است و باید تعمیر شود.
- ◀ قبل از هرگونه تنظیم یا تعویض لوازم جانبی دستگاه، همچنین زمانی که از دستگاه استفاده نمی‌کنید دو شاخه را از منبع برق جدا نمائید. این کار از شروع به کار ناگهانی دستگاه جلوگیری خواهد کرد.
- ◀ ابزارآلات برقی را از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. ابزارآلات برقی در دسترس افراد آموزش ندیده، خطرآفرین خواهند بود.
- ◀ از ابزارآلات برقی به خوبی نگهداری نمائید. هرگونه تنظیمات، گیرکردن قطعات دوار و یا هر وضعیت دیگری که ممکن است بر روی عملکرد دستگاه تاثیر بگذارد را بررسی نمائید و در صورت آسیب دیدگی قبل از استفاده، آن مورد را رفع نمائید. بیشتر حوادث از عدم نگهداری صحیح ابزارآلات برقی رخ می‌دهد.
- ◀ همواره از ابزار و لوازم جانبی مناسب این دستگاه استفاده نمائید. همچنین از این دستگاه تنها برای کارهایی که برای آن تهیه و طراحی شده است، استفاده نمائید.

تعمیرات و نگهداری

- ◀ برای هرگونه تعمیر و تعویض قطعات، تنها به مراکز خدمات پس از فروش **شرکت کنزاکس** مراجعه نمائید.
- ◀ برای انجام هرگونه روغن کاری و یا تعویض لوازم جانبی تنها از دستورالعمل‌های ذکر شده در منوال دستگاه پیروی نمایید.
- ◀ دستگاه‌های دستگاه را خشک، تمیز و عاری از هرگونه روغن و گریس نگه دارید.

دستورالعمل‌های ایمنی استفاده از فرز همه کاره

- ◀ از عینک استفاده نمایید.
- ◀ از محافظ گوش استفاده نمایید.
- ◀ از ماسک گرد و غبار در هنگام کار استفاده نمایید.

- ◀ ابزارآلات برقی را در معرض باران و یا رطوبت قرار ندهید. ورود آب به ابزارآلات برقی ممکن است موجب برق گرفتگی شود.
- ◀ هرگز از کابل دستگاه برای حمل آن استفاده ننمائید و یا برای قطع اتصال دستگاه از پریز، کابل را نکشید. همچنین کابل را از معرض حرارت، سطوح نوک تیز، قطعات دوار و روغن دور نگهدارید. کابل‌های آسیب دیده مستعد بروز برق گرفتگی هستند.
- ◀ هنگام استفاده از دستگاه در محیط‌های باز، از سیم رابط مناسب استفاده ننمائید تا احتمال برق گرفتگی کاهش یابد.
- ◀ هنگام استفاده از دستگاه در محیط‌های مرطوب حتماً از کلید حفاظت جان (RCD) برای اتصال دستگاه به منبع تغذیه برق شهری استفاده ننمائید. کلید حفاظت جان، مانند دستکش و کفش ایمنی به افزایش ایمنی فردی کمک می‌کند.
- ◀ هرگز ابزارهای دارای جریان متناوب را به منبع تغذیه برق با جریان غیرمتناوب (مستقیم) وصل ننمائید. این کار منجر به آسیب دیدگی دستگاه و آسیب‌های فردی خواهد شد.

ایمنی فردی

- ◀ زمانی که خسته اید یا تحت تاثیر دارو قرار دارید و در مجموع زمانی که در سلامتی کامل به سر نمی‌برید، هرگز از ابزارآلات برقی استفاده ننمائید. چرا که لحظه‌ای درنگ و بی دقتی منجر به صدمات جبران ناپذیری خواهد شد.
- ◀ همواره از لوازم ایمنی مانند عینک ایمنی، ماسک هوا، کفش و کلاه ایمنی و محافظ گوش استفاده ننمائید تا صدمات فردی کاهش یابد.
- ◀ برای اجتناب از شروع به کار ناگهانی دستگاه، قبل از اتصال آن به منبع برق از قرار داشتن کلید در وضعیت خاموش اطمینان حاصل ننمائید. همچنین زمانی که آن را جا به جا می‌کنید، دو شاخه را از پریز جدا کرده و انگشتان را بر روی کلید قرار ندهید.
- ◀ قبل از روشن کردن دستگاه از عدم اتصال هرگونه ابزار تنظیم مانند آچار به قطعات دوار اطمینان حاصل ننمائید چرا که می‌تواند منجر به صدمات جبران ناپذیری گردد.
- ◀ حالت صحیح قرارگیری پاها و حفظ تعادل بدن حین کار از خارج شدن کنترل دستگاه جلوگیری می‌نماید.
- ◀ همواره در حین کار از لباس کار مناسب استفاده ننمائید. استفاده از لباس‌های غیر استاندارد و گشاد، جواهرات و داشتن موهای بلند امکان درگیر شدن آن‌ها را با قسمت‌های متحرک ابزارآلات برقی افزایش داده و ممکن است خطرآفرین شود.
- ◀ در صورت استفاده از غبار جمع کن از اتصال صحیح و مناسب آن به دستگاه اطمینان حاصل ننمائید. استفاده از چنین لوازم جانبی، مضرات مربوط به غبار را کاهش خواهد داد.



لطفا به منظور دستیابی به بهترین عملکرد محصول قبل از استفاده، این دستورالعمل را به دقت بخوانید و در محل مناسب انبارش نمایید.

این علامت به معنی خطر برق گرفتگی و وجود ولتاژ خطرناک در دستگاه را بیان می‌کند.

این علامت به این معنی می‌باشد که در دفترچه راهنمای دستگاه، دستورالعمل‌های مهمی در مورد عملکرد و جابجایی وجود دارد. قبل از استفاده، لطفا دستورالعمل‌ها را به دقت بخوانید.

دستورالعمل‌های کلی ابزارآلات برقی



لطفا کلیه مواردی که در ذیل قید شده است را با دقت مطالعه فرمائید و به کار برید، عدم پیروی از دستورالعمل‌های ذیل ممکن است منجر به ایجاد صدمات جبران ناپذیر فیزیکی یا ایجاد اختلال در کارکرد ابزارآلات برقی شوند.

این دفترچه راهنما را بعد از مطالعه نگهداری ننمائید.

منظور از کلمه "ابزار برقی" در هشدارهای زیر کلیه ابزارهای برقی متصل به کابل یا ابزارهای شارژی دارای باتری می‌باشد.


ایمنی محل کار

- ◀ محل کار را تمیز و روشن نگهدارید. محیط‌های در هم ریخته و تاریک حادثه آفرین خواهند بود.
- ◀ هرگز از ابزارآلات برقی در مجاورت مواد اشتعال زا استفاده ننمائید. ابزار آلات برقی جرقه ایجاد می‌کنند که ممکن است موجب آتش سوزی گردد.
- ◀ ابزارآلات برقی را هنگام استفاده از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. زیرا ممکن است باعث از دست دادن تمرکز و کنترل دستگاه شود.

ایمنی برقی

- ◀ دو شاخه دستگاه باید متناسب با پریز باشد. با این کار احتمال برق گرفتگی به شدت کاهش خواهد یافت.
- ◀ در هنگام استفاده از دستگاه به محل عبور لوله، کابل برق مربوط به رادیاتور، گرمخانه و یا یخچال و... توجه ننمائید. زیرا تماس بدن با آن‌ها احتمال خطر برق گرفتگی را افزایش می‌دهد.

نام قطعات دستگاه

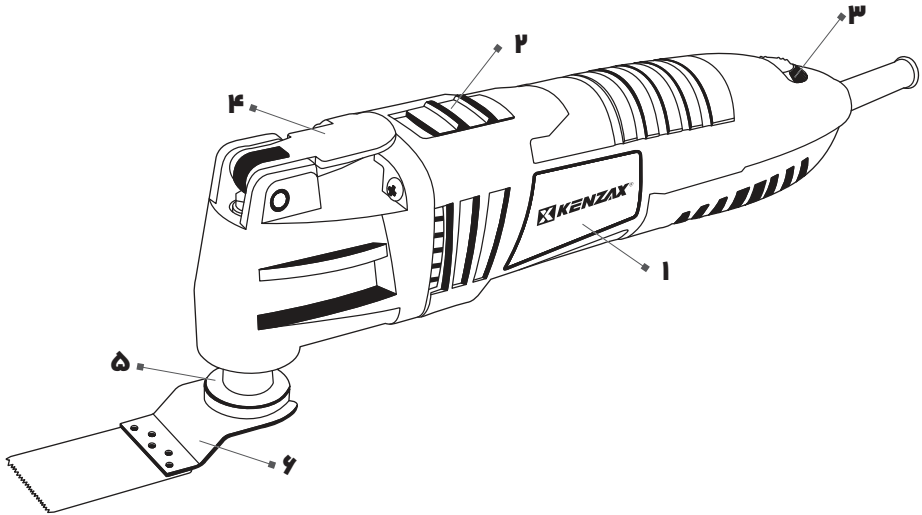

نام قطعات دستگاه

- | | |
|----------------------|--------------------|
| ۱. دسته | ۴. ضامن تعویض تیغه |
| ۲. کلید روشن و خاموش | ۵. ابزار گیر |
| ۳. دیمر تغییر سرعت | ۶. تیغه |

مشخصات فنی

3595	مدل
۵۰۰ وات	توان
۲۲۰ ولت	ولتاژ
۵۰ هرتز	فرکانس
۵۰۰۰ ~ ۲۲۰۰۰ نوسان بر دقیقه	سرعت بی باری
۳/۲ درجه	زاویه نوسان
۴۰ میلی‌متر	حداکثر عمق برش
۶	تعداد تنظیمات سرعت
ذغالی	نوع موتور
۲۷۰ میلی‌متر	طول ابزار
۹۴ میلی‌متر	ارتفاع ابزار
۵۷ میلی‌متر	عرض ابزار
۱/۳۸ کیلوگرم	وزن خالص
۱/۷ کیلوگرم	وزن کل
کیف BMC	نوع بسته بندی
یک جفت ذغال	متعلقات
۲ عدد تیغه مستقیم بر نفوذی	
کاردک	
پد سنباده	
کاغذ سنباده (۱۸۰، ۱۲۰، ۸۰، ۶۰)	



فرز همه کاره



ITEM NO. 3595

دفترچه راهنمای فارسی