



ELECTRIC TRIMMER

6mm




ITEM NO. 4750

INSTRUCTION MANUAL

RoHS CE

SPECIFICATION

Model	4750
Power	650W
Voltage	220V
Frequency	50Hz
No load speed	37000RPM
Collet size	6mm
Weight	1.76kg
Includes	1 pc bearing guide 1 pc parallel guide 1 pc Trimmer bit 1 pair carbon brushes 2 pcs spanner

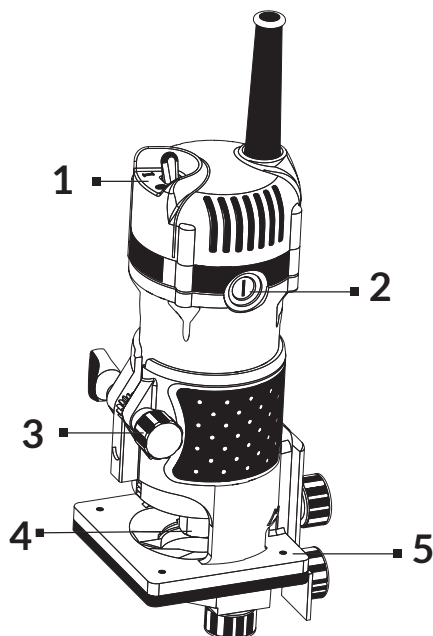PART LIST**Product Elements**

- | | | | |
|----|------------------|----|--------|
| 1. | ON/OFF Switch | 4. | Collet |
| 2. | Carbon Brush Cap | 5. | Base |
| 3. | Adjusting Screw | | |

 NOTE!

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

 NOTE!

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

 NOTE!

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

GENERAL POWER TOOL SAFETY WARNINGS

 WARNING!

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tools or battery operated (cordless) power tool.

WORK AREA SAFETY

- ▷ Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- ▷ Don't operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- ▷ Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRIC SAFETY

- ▷ Power tool plugs must match the outlet. Never modify the plug in any way. Don't use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- ▷ Avoid body contact with earthed or grounded surfaces such as pipe, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- ▷ Don't expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- ▷ Don't abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increased the risk of electric shock.

- ▶ When operating a power tool outdoors, use an extension cord suitable for outdoor use. Using a cord suitable for outdoor use will reduce the risk of electric shock.
- ▶ If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.
- ▶ Use of power supply via an RCD with a rated residual current of 30mA or less is always recommended.

PERSONAL SAFETY

- ▶ Stay alert, watch what you are doing and use common sense when operating a power tool. Don't use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- ▶ Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- ▶ Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- ▶ Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- ▶ Don't overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- ▶ Dress properly. Don't wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose cloths, jewelry or long hair can be caught in moving parts.
- ▶ If devices are provided for connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards. collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

- ▶ Don't force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- ▶ Don't use the power tool if the switch doesn't turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- ▶ Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- ▶ Store idle power tools out of the reach of children and don't allow persons unfamiliar with power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- ▶ Maintain power tools. Check for misalignment or binding of moving parts, breakage o parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- ▶ Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

- ▷ Use the power tool, accessories and tool bits etc. in accordance with the instruction, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

SERVICE

- ▷ Have your power tool serviced by qualified repair person using only identical replacement parts. This will ensure that the safety of power tool is maintained.
- ▷ Follow instruction for lubricating and changing accessories.
- ▷ Keep handles dry, clean and free from oil and grease

TRIMMER SAFETY NOTE

The following listed points are the safety regulation for trimmer. Please read and must obey, otherwise the tools could be damaged and cause injury to user.

1. Please hold the tool on insulated handle to avoid electricity shock during working because the tool may touch some living wire beneath or the cable itself when working.
2. Wear the ear protector for long time working.
3. Take care when assembling and disassembling the cutting bits.
4. Before operating the tool, please make sure whether the cutting bits have a breakage or a crack Don't not use the cracked or damage bits.
5. Please take down all the screws or nut on work pieces.
6. Hold the tool tightly
7. When using the tool, please do not touch the cutting bit with your finger, even with glove. Keep the hand far away from the cutting bits.
8. Before turning on the tool please make sure that the cutting it is not touching other objects.
9. Before staring working, please keep the tool running, for a while and check if the Cutting bits are assembled well and if there is any vibration or swing.
10. Keep the correct moving direction.
11. Don 't lay down the tool before turning it off.
12. Only dissemble the cutting bits after the tool is off.
13. Don't touch the drilling bit at once after working. Because the bit could be very hot and cause injury to your hand.
14. Don't clean the base plate with impregnant, oil or gasoline, otherwise It may be damaged.
15. Use the cutting bits with correct size, and the bits could be applied with high speed.

OPERATING REGULATIONS

WARNING!


before adjusting the function of the tool, please make sure the tool is off and the plug does not connect to the electricity.

ADJUST THE CUTTING DEPTH

Screw out the fixing knob till loose. Adjust the base seat assembly to your satisfied depth. Then screw the fixing knob to be tight


NOTE!

1. Base seat
2. Depth indicator
3. Cutting depth
4. Fixing knob
5. Adjusting screw

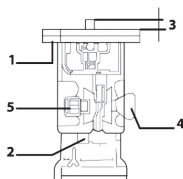


SWITCH ON/OFF

To turn on the tool, just turn the switch button to "I" position. To turn off the tool, just put the switch button to "O" position.

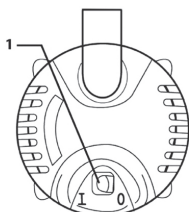

ASSEMBLE AND DISASSEMBLE THE BITS

When assembling the bits, put the bit into the collet first, and then use the two spanners to fix the clamping nut. Use the spanners to disassemble the bit contrary procedure.

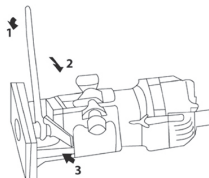


OPERATION

Put the tool on the work piece but the cutting bits should not touch it. Turn on the tool. When the tool achieves the full speed, keep it moving forward to correct direction. Make sure to keep the base plate trimly with the working objects and keep the tool moving with even speed.

NOTE!


1. Work piece
2. Rotating direction of cutting bits
3. Overlook from top
4. Feeding direction

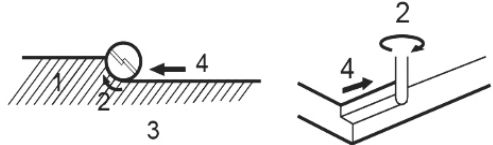

WARNING!

If moving forward of the tool is too fast will cause the bad quality of work piece, damages the cutting bits or motor of the tool. If moving forward of the tool is too slow it will cause the cutting bits too hot and bad quality of work piece. Before starting cutting, please try cutting firstly to some wasted work pieces. This will tell you the cutting quality and then you could adjust the tool.

1. Feeding direction
2. Rotating direction of cutting bits
3. Workpiece
4. Parallel guide

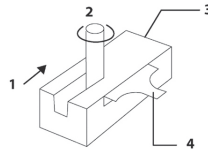

When using the parallel guide or guide bar, please make sure to install it onto the right hand of feeding direction. Parallel bar and guide are for fine cutting of the tools.

WARNING!

Feeding the tool too much will cause overload of the motor. The maximum cutting depth of the tool is 3 mm. If you need depth more than 3mm, you could achieve it by cutting couple of times.

GUIDE BUSH

There is a guide bush in accessories. The cutting bit could get through the guide bush and cutting the work piece according to logo.


Take down the base plate by loosening the screws.

Put The guide bush onto the base plate then fix back onto the tool.

Screw it tightly.

NOTE!

1. Base plate
2. Screws
3. Screwdriver
4. Screws

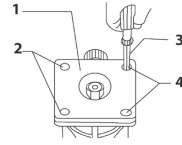


Fix the logo guider onto the work piece.

Put the tool onto the guider.


Move the tool forward to cut the work piece according to the side line of the guider.

NOTE!

1. Cutting bit
2. Logo guider
3. Work piece
4. Guide bush

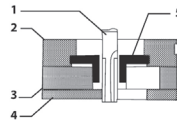**PARALLEL GUIDE**

When cutting the edge or grooving the work piece, the parallel guide is quite useful. Use the bolt and wing nut to assemble guide bar to the parallel guide.

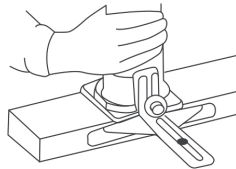


Use the fixing screw to assemble the parallel guide.

Screw out the wing nut on parallel guide. Adjust the distance between the cutting bits and parallel guide.

When achieving the proper distance, please fix the wing nut tightly.


NOTE!

1. Fixing nut
2. Parallel guide
3. Wing nut
4. Base plate

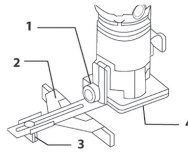**BEARING GUIDE**

Use the fixing nut to assemble the bearing guide to the base plate. Loose the Fixing nut to adjust the distance between cutting bits and the bearing guide seat. When achieve proper distance, screw the Fixing nut tightly.

When operating the tool, please keep the bearing guide tightly to the edge of the workpiece

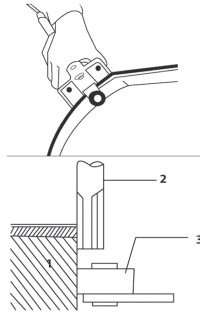**MAINTENANCE AND SERVICING**

1. Always disconnect the tool before carrying out inspection or cleaning. Never use water or other liquids to clean the tool. Clean the tool by brushing it with a brush.
2. The air-vent of the tool should be cleaned regularly to avoid the motor too hot due to air-vent blocked.
3. Always check if the components of the tool are fixed well.
4. The housing should be without trace of crack or damage.
5. Always check if the cable is without damage.

**توجه!**

برای تمیز کردن دستگاه تنها از دستمال مرطوب استفاده نمایید. استفاده از حلال‌های شیمیایی موجب آسیب دیدن پوسته خواهد شد.

**هشدار!**

در صورت نیاز به هرگونه تعمیر و یا تعویض قطعات تنها به مراکز خدمات کنزاکس مراجعه نمایید.

**هشدار!**

برای جلوگیری از برق گرفتگی و صدمات فردی از ورود آب یا هر مایع دیگری به داخل دستگاه جدا خودداری نمایید.

حفاظت از محیط زیست

ضایعات محصولات الکتریکی را نباید با زباله‌های خانگی دور ریخت. لطفاً به مراکزی که امکانات بازیافت وجود دارد تحویل داده شود. وسایل برقی را به عنوان زباله‌های شهری دور نریزید و مناطق مخصوص زباله‌های بازیافتی انبارش نمایید. برای کسب اطلاعات در مورد سیستم‌های جمع‌آوری زباله‌های بازیافتی با شهرداری منطقه خود تماس بگیرید. اگر وسایل برقی در محل‌های دفن زباله‌های معمولی دور ریخته شوند، امکان این وجود دارد که مواد خطرناک و سمی به سفره‌های زیرزمینی آب نشت کرده و وارد زنجیره غذایی شوند. که این امر موجب آسیب رسیدن به سلامت می‌شود. دفع ضایعات محصولات الکتریکی باید مطابق با مقررات محیط زیست باشد.

انبارش ابزار

همیشه قبل از انجام هر گونه بازرسی یا تعمیرات دستگاه را از منبع تغذیه جدا کرد و جهت انبارش در مکان خشک و بدون رطوبت نگهداری نمایید.


هرگز از گازوئیل، بنزن، تینر، الکل یا هر گونه مواد مشابه که خاصیت خوردگی دارند استفاده نکنید. چرا که موجب تغییر رنگ، تغییر شکل یا ترک خوردن دستگاه می‌شود.

کنزاکس سرویس

ضمن تشکر از حسن انتخاب شما

به همراه ابزار شما کارت ضمانت نامه ۱۲ ماهه کنزاکس سرویس ارائه می‌گردد.


لطفاً توجه داشته باشید که هیچ کدام از اجزای داخلی ابزار، احتیاج به تعمیر و یا بهبود اضافه جهت بهینه نمودن عملکرد ندارند. بنابراین از هرگونه اعمال دستکاری یا مراجعه به مراکز تعمیرات غیر مجاز اجتناب نمایید و در صورت بروز هرگونه مشکل سریعاً با مراکز سرویس و پشتیبانی کنزاکس به شماره ۰۲۱-۶۲۸۱۹ و یا به وب سایت www.kenzax.com تماس حاصل نمایید.

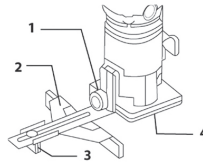

۱. پیچ قفل کن
۲. راهنمای برش طولی
۳. مهره تنظیم
۴. کفی

راهنمای لبه گیری

به منظور لبه گیری و فرم دهی کناره قطعه کار می توان از راهنمای لبه گیری استفاده نمود. راهنمای لبه گیری را روی کفی قرار داده و پیچ قفل کن را در جای خود محکم نمایید. فاصله بین تیغه برشی و راهنمای لبه گیری را می توان تنظیم کرد.

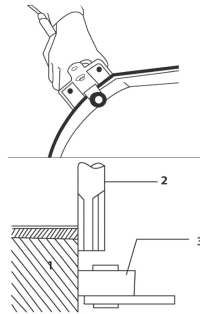

تعمیرات و نگهداری




برای حفظ ایمنی فردی، قبل از هرگونه تعمیر یا تغییر دستگاه و قطعات، حتماً آن را خاموش کرده و از پریز برق جدا نمایید.

تعمیرات و نگهداری منظم دستگاه موجب طول عمر و عملکرد مناسب دستگاه خواهد شد.

دستگاه را به طور مرتب تمیز و روغن کاری نمایید. همچنین بررسی نمایید که دریچه های هوا مسدود نشده باشند.


صفحه الگوی برش را روی قطعه کار ثابت کنید. حال بوش راهنما را داخل شیار الگو قرار داده و دستگاه را حرکت دهید تا اشکال مورد نظر بر روی قطعه کار ایجاد گردد.

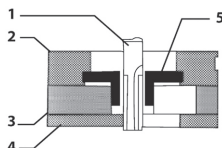

۱. تیغچه برش
۲. کفی
۳. صفحه الگوی برش
۴. قطعه کار
۵. بوش راهنما


راهنمای برش طولی

به منظور ایجاد خطوط برشی موازی با لبه قطعه کار می‌توان از راهنمای برش طولی استفاده نمود.

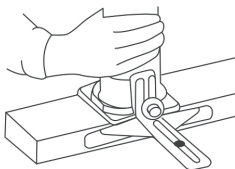

راهنمای برش طولی را بر روی پایه دستگاه قرار داده و توسط پیچ روی بدنه آن را کاملاً محکم نمایید. فاصله بین تیغچه برشی و لبه قطعه کار را می‌توان تنظیم کرد.


سپس دستگاه را روشن کرده و صبر می‌کنیم تا به سرعت حداکثر برسد. دستگاه را به صورت تراز بر روی قطعه کار نگه داشته و به آرامی حرکت دهید تا عملیات برش و کنده کاری انجام گردد. دقت شود در صورتی که نیاز است بر روی لبه‌های قطعه کار، عملیات انجام شود، باید قطعه کار در سمت چپ تیغچه قرار گیرد.

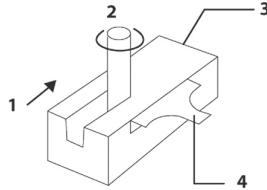

۱. قطعه کار
۲. جهت چرخش تیغچه
۳. نمای دید از بالای ابزار
۴. جهت قرار گیری گونیا

بوش راهنمای برش


- ◀ با استفاده از بوش راهنما و یک صفحه الگو میتوان طرح‌های دلخواه را روی قطعه کار ایجاد نمود.
- ◀ پیچ‌های کفی را باز کرده و صفحه روی کفی را از جای خود خارج نمایید.
- ◀ بوش راهنما را روی کفی قرار دهید.
- ◀ صفحه روی کفی را نصب و پیچ‌های آنرا محکم نمایید.

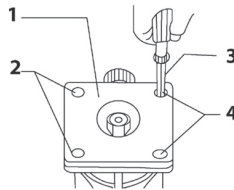

۱. صفحه کفی
۲. پیچ
۳. پیچ‌گوشی
۴. پیچ

نصب یا جدا کردن تیغه

۱. آچار را بر روی شفت قرار دهید. (شماره ۳)
۲. آچار دوم را در جهت ۲ بچرخانید تا مهره کولت شل شود.
۳. تیغه را نصب کرده سپس آچار را در جهت ۱ چرخانده تا مهره کاملاً سفت شود.

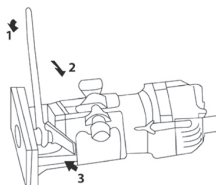


هرگز مهره کولت را بدون قرار دادن تیغ محکم نکنید. چراکه موجب شکسته شدن کولت می شود. همیشه فقط از آچارهای قرار داده شده در بسته بندی محصول استفاده نمایید.

عملکرد

پایه دستگاه را روی صفحه کار طوری قرار دهید که هیچ گونه تماسی با تیغه نداشته باشد. سپس دستگاه را روشن کنید و تا رسیدن به سرعت دلخواه صبر کنید. بعد از تنظیم عمق برش مورد نظر دستگاه را روی صفحه کار به سمت جلو حرکت دهید. پایه را محکم نگه داشته و حرکت را کاملاً روان ادامه دهید تا عملیات برش انجام گیرد.

۱. صفحه کار
۲. جهت چرخش تیغه
۳. زاویه دید از بالای دستگاه
۴. جهت حرکت

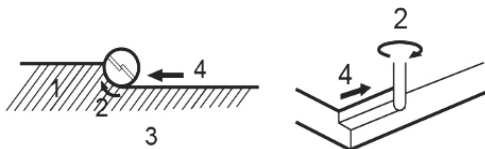

تنظیم عمق و ارتفاع کار


ابتدا ابزار را بر روی یک سطح مسطح قرار دهید. پس از آزاد کردن ضامن قفل کن کافی، با فشار دادن بدنه دستگاه به سمت پایین، تیغه را در عمق مورد نظر تنظیم نمایید. با سفت کردن ضامن قفل کن، ارتفاع به صورت ثابت در می آید. دقت شود در حین کار، دستگاه به صورت محکم با دو دست گرفته شود.

تنظیمات



قبل از انجام هرکاری، مطمئن شوید که دستگاه در حالت خاموش و جدا از جریان برق می‌باشد. پیچ قفل کن را شل کرده و سپس ارتفاع مورد نظر خود را توسط پیچ تنظیم مشخص نمایید. در انت‌ها پیچ قفل کن را کاملاً سفت نمایید.


۱. کفی
۲. نشانگر عمق برش
۳. عمق برش
۴. پیچ قفل کن
۵. پیچ تنظیم

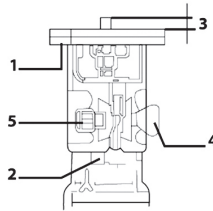

تعمیرات و نگهداری



همیشه قبل از اتصال دستگاه به جریان برق، از خاموش بودن کلید اطمینان حاصل فرمایید. جهت روشن نمودن دستگاه، کلید را به سمت ۱ فشار دهید. جهت خاموش نمودن دستگاه، کلید را به سمت ۰ فشار دهید.

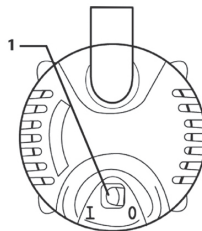

تعمیرات و نگهداری

برای هرگونه تعمیر و تعویض قطعات، تنها به مراکز خدمات پس از فروش **شرکت کنزاکس** مراجعه نمائید.

نکات ایمنی لبه گیر

- ◀ همواره دستگاه را محکم بگیرید، چرا که ممکن است تیغه در حین کار، کابل دستگاه را قطع کند و دچار برق گرفتگی شوید.
- ◀ از گیره یا دیگر وسایل جهت محکم و ثابت نمودن قطعه کار روی میز استفاده نمایید تا کنترل و تعادل در حین کار حفظ گردد.
- ◀ در استفاده‌های طولانی مدت، حتماً از گوشی‌های محافظ استفاده نمایید تا شنوایی شما آسیب نبیند.
- ◀ همیشه با دقت با تیغه کار کنید و قبل از کار آن را از نظر ترک خوردگی یا دیگر معایب چک کنید.
- ◀ حتماً قبل از شروع به کار، تمامی میخ‌های قطعه کار را خارج نمایید.
- ◀ دستگاه را محکم نگه دارید.
- ◀ دست‌ها را از قسمت‌های چرخشی دور نگه دارید.
- ◀ هرگز در زمان روشن نمودن دستگاه، تیغ با صفحه کار تماسی نداشته باشد.
- ◀ قبل از استفاده از دستگاه، اجازه دهید تا چند لحظه بصورت آزاد کار کند و آن را از نظر لرزش یا دیگر معایب که نشان دهنده عدم جایگذاری صحیح تیغه است چک کنید.
- ◀ به جهت چرخش تیغه و جهت حرکت دستگاه دقت داشته باشید.
- ◀ هرگز دستگاه روشن را آزاد نگذارید. تنها زمانی آن را روشن کنید که در دست داشته اید.
- ◀ همیشه بعد از خاموش کردن دستگاه تا زمانی که بطور کامل از حرکت متوقف نشده است صبر کنید و سپس در جای خود قرار دهید.
- ◀ هرگز فوراً بعد از اتمام کار به تیغه دست نزنید چراکه به شدت داغ است.
- ◀ هرگز بدنه دستگاه را به تینر، بنزین یا روغن آغشته نکنید چراکه باعث ایجاد ترک روی بدنه دستگاه خواهند شد.
- ◀ همواره از سایز تیغه مناسب با سرعت دستگاه استفاده نمایید.
- ◀ برخی متریال‌ها حاوی موادی شیمیایی سمی هستند. پس همواره مراقب تنفس و تماس پوست خود با آن‌ها باشید.
- ◀ همواره از ماسک‌های مخصوص استفاده نمایید.

ایمنی فردی

- ◀ زمانی که خسته‌اید یا تحت تاثیر دارو قرار دارید و در مجموع زمانی که در سلامتی کامل به سر نمی‌برید، هرگز از ابزارآلات برقی استفاده ننمائید. چرا که لحظه‌ای درنگ و بی‌دقتی منجر به صدمات جبران ناپذیری خواهد شد.
- ◀ همواره از لوازم ایمنی مانند عینک ایمنی، ماسک هوا، کفش و کلاه ایمنی و محافظ گوش استفاده نمائید تا صدمات فردی کاهش یابد.
- ◀ برای اجتناب از شروع به کار ناگهانی دستگاه، قبل از اتصال آن به منبع برق از قرار داشتن کلید در وضعیت خاموش اطمینان حاصل نمائید. همچنین زمانی که آن را جا به جا می‌کنید، دو شاخه را از پریز جدا کرده و انگشتان را بر روی کلید قرار ندهید.
- ◀ قبل از روشن کردن دستگاه اذعده اتصال هرگونه ابزار تنظیم مانند آچار به قطعات دوار اطمینان حاصل نمائید چرا که می‌تواند منجر به صدمات جبران ناپذیری گردد.
- ◀ حالت صحیح قرارگیری پاها و حفظ تعادل بدن حین کار از خارج شدن کنترل دستگاه جلوگیری می‌نماید.
- ◀ همواره در حین کار از لباس کار مناسب استفاده نمائید. استفاده از لباس‌های غیر استاندارد و گشاد، جواهرات و داشتن موهای بلند امکان درگیر شدن آن‌ها را با قسمت‌های متحرک ابزارآلات برقی افزایش داده و ممکن است خطرآفرین شود.
- ◀ در صورت استفاده از غبار جمع کن از اتصال صحیح و مناسب آن به دستگاه اطمینان حاصل نمائید. استفاده از چنین لوازم جانبی، مضرات مربوط به غبارات را کاهش خواهد داد.

استفاده صحیح از دستگاه

- ◀ از اعمال بار اضافه به دستگاه جدا خودداری نمائید. انتخاب درست ابزار برقی مناسب کارتان، باعث کاهش هزینه و زمان و حسن انجام کار برای شما خواهد شد. بنابراین همیشه برای انجام عملکرد مورد نظران از ابزار برقی مخصوص به آن کار استفاده نمائید.
- ◀ در صورت معیوب بودن کلید دستگاه، هرگز از آن استفاده نکنید و به نزدیک‌ترین مراکز خدمات پس از فروش برای تعمیر آن مراجعه نمائید. هر دستگاهی که با کلید قابل کنترل نباشد، خطرآفرین است و باید تعمیر شود.
- ◀ قبل از هرگونه تنظیم یا تعویض لوازم جانبی دستگاه، همچنین زمانی که از دستگاه استفاده نمی‌کنید دو شاخه را از منبع برق جدا نمائید. این کار از شروع به کار ناگهانی دستگاه جلوگیری خواهد کرد.
- ◀ ابزارآلات برقی را از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. ابزارآلات برقی در دسترس افراد آموزش ندیده، خطرآفرین خواهند بود.
- ◀ از ابزارآلات برقی به خوبی نگهداری نمائید. هرگونه تنظیمات، گیرکردن قطعات دوار و یا هر وضعیت دیگری که ممکن است بر روی عملکرد دستگاه تاثیر بگذارد را بررسی نمائید و در صورت آسیب دیدگی قبل از استفاده، آن مورد را رفع نمائید. بیشتر حوادث ازعدم نگهداری صحیح ابزارآلات برقی رخ می‌دهد.
- ◀ همواره از ابزار و لوازم جانبی مناسب این دستگاه استفاده نمائید. همچنین از این دستگاه تنها برای کارهایی که برای آن تهیه و طراحی شده است، استفاده نمائید.

دستورالعمل‌های کلی ابزارآلات برقی




منظور از کلمه «ابزار برقی» در هشدارهای زیر کلیه ابزارهای برقی متصل به کابل یا ابزارهای شارژی دارای باتری می‌باشد.

ایمینی محل کار

محل کار را تمیز و روشن نگهدارید. محیط‌های در هم ریخته و تاریک حادثه آفرین خواهند بود. هرگز از ابزارآلات برقی در مجاورت مواد اشتعال زا استفاده ننمائید. ابزار آلات برقی جرقه ایجاد می کنند که ممکن است موجب آتش سوزی گردد. ابزارآلات برقی را هنگام استفاده از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. زیرا ممکن است باعث از دست دادن تمرکز و کنترل دستگاه شود.

ایمینی برقی

- ◀ دو شاخه دستگاه باید متناسب با پریز باشد. با این کار احتمال برق گرفتگی به شدت کاهش خواهد یافت.
- ◀ در هنگام استفاده از دستگاه به محل عبور لوله، کابل برق مربوط به رادیاتور، گرمخانه و یا یخچال و... توجه نمائید. زیرا تماس بدن با آن‌ها احتمال خطر برق گرفتگی را افزایش می‌دهد.
- ◀ ابزارآلات برقی را در معرض باران و یا رطوبت قرار ندهید. ورود آب به ابزارآلات برقی ممکن است موجب برق گرفتگی شود.
- ◀ هرگز از کابل دستگاه برای حمل آن استفاده ننمائید و یا برای قطع اتصال دستگاه از پریز، کابل را نکشید. همچنین کابل را از معرض حرارت، سطوح نوک تیز، قطعات دوار و روغن دور نگهدارید. کابل‌های آسیب دیده مستعد بروز برق گرفتگی هستند.
- ◀ هنگام استفاده از دستگاه در محیط‌های باز، از سیم رابط مناسب استفاده ننمائید تا احتمال برق‌گرفتگی کاهش یابد.
- ◀ هنگام استفاده از دستگاه در محیط‌های مرطوب حتما از کلید حفاظت جان (RCD) برای اتصال دستگاه به منبع تغذیه برق شهری استفاده ننمائید. کلید حفاظت جان، مانند دستکش و کفش ایمنی به افزایش ایمنی فردی کمک می‌کند.
- ◀ هرگز ابزارهای دارای جریان متناوب را به منبع تغذیه برق با جریان غیرمتناوب (مستقیم) وصل ننمائید. این کار منجر به آسیب دیدگی دستگاه و آسیب‌های فردی خواهد شد.

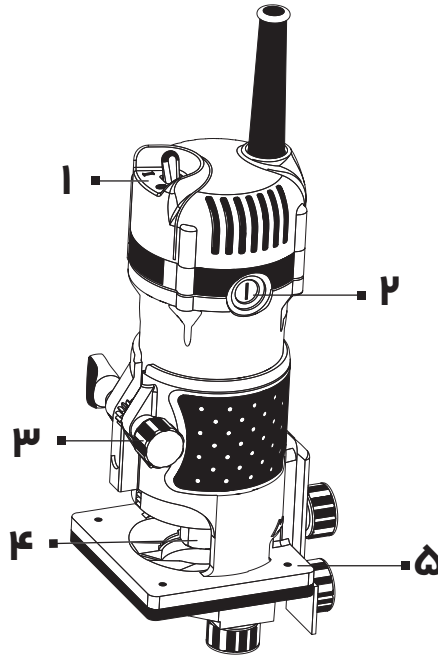

نام قطعات دستگاه

- | | |
|-----------------------|---------|
| ۱. سوئیچ روشن / خاموش | ۴. کولت |
| ۲. درپوش ذغال | ۵. کفی |
| ۳. پیچ تنظیم عمق | |

مشخصات فنی

4750	مدل
۶۵۰ وات	توان
۲۲۰ ولت	ولتاژ
۵۰ هرتز	فرکانس
۳۷۰۰۰ دور در دقیقه	سرعت بی باری
۶ میلی متر	سایز گولت
۱/۷۶ کیلوگرم	وزن
پایه راهنما	متعلقات
گونیا	
تیغچه برشی	
یک جفت دغال	
۲ عدد آچار	



لبه گیر نجاری ۶ میلی متر



ITEM NO. 4750

دفترچه راهنمای فارسی

RoHS CE