



DIGITAL MINI AIR COMPRESSOR-DC/AC



ITEM NO. 5418

INSTRUCTION MANUAL

CE RoHS

SPECIFICATION

Model	5418
Power Source	AC 220-240V & 12V Car Cigar-Lighter
Max. Pressure	160PSI/11 Bar/1100Kpa
Max. Air Flow	Blower:380 L/min Inflator:9L/min
MAX. Continuous Operating time	20 Min
Pressure units	PSI/BAR/KPA
Compressor Hose Length	79 cm
Cigar Lighter Length	3 m
AC power cord length	3 m
Weight	2.4 kg
Includes	1x Ball Adapter 1x Tire Valve Adapter 1x Air Bed Adapter 1x High Volume Hose 1x Tool Bag

PART LIST**Product Elements**

- | | |
|-------------------------------|------------------------|
| 1. "+" Pressure set button | 8. Outlet Air Blower |
| 2. Inflator and blower switch | 9. Blower Hose |
| 3. "-" Pressure set button | 10. Inflator Hose |
| 4. LED light | 11. Ball Adapter |
| 5. LED light switch | 12. Air Bed Adapter |
| 6. Digital LCD display | 13. Tire Valve Adapter |
| 7. Mode button | |

GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

The warning icon consists of a yellow triangle with a black border and a black exclamation mark inside.

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

WORK AREA SAFETY

Keep work area clean and well lit. Cluttered or dark areas invite accidents. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRICAL SAFETY

- ▷ Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- ▷ Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- ▷ Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- ▷ Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- ▷ When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- ▷ If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

PERSONAL SAFETY

- ▷ Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- ▷ Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- ▷ Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- ▷ Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- ▷ Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- ▷ Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- ▷ If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

1. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
2. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired by Service Center.
3. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
4. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
5. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
6. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
7. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

SERVICE

- ▷ Have your power tool serviced by Service Center using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

ADDITIONAL SAFETY WARNINGS FOR YOUR INFLATOR

1. Know your inflator. Read operator's manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this inflator.
2. Inflate items only to their manufacturer's recommendations. Exceeding the pressure rating could cause them to explode resulting in personal injury.
3. Operate only with the accessories included or those rated for 160 PSI / 11BAR or higher. The use of any accessory not recommended for use with this tool could be hazardous.
4. Operate inflator away from any wall or object that could restrict the flow of fresh air to ventilation openings.
5. Inspect inflator for cracks, pin holes, or other imperfections that could cause inflator to become unsafe. Never cut or drill holes in the inflator.
6. Make sure the hose is free of obstructions or snags. Entangled or snarled hoses can cause loss of balance or footing and may become damaged.
7. Use the inflator only for its intended use. Do not alter or modify the inflator from the original design or function.
8. Since the vibration produced by the inflator may cause it to "walk", do not operate on a high shelf or other surface. Operate at ground or bench level.
9. Never leave the inflator unattended during inflation.
10. Do not attempt to pull or carry the inflator by the hoses.
11. The compressed air from your inflator is not safe for breathing. Never inhale air from your inflator or from a breathing device connected to the inflator.
12. Never direct a jet of compressed air toward people or animals. Take care not to blow dust and dirt towards yourself or others.
13. Carefully monitor objects during inflation.
14. Turn off and unplug inflator when not in use, when cleaning, or when changing nozzles.
15. Inflator can become hot during use. Allow inflator to cool for ten min- minutes after each ten minutes of continuous use. Allow inflator to cool 30 minutes before storing away.
16. Do not operate inflator when car engine is running.

SYMBOLS

To reduce the risk of injury, user must read instruction manual



Double insulation Warning



Warning !



Wear dust mask



Wear eye protection



Wear ear protection

OPERATING INSTRUCTIONS

Before using the tool, read the instruction manual carefully.

INTENDED USE

This tool is designed to be used for most vehicles from the standard 12-volt socket, motorcycle and bike tires, balls, rafts, air mattresses, swimming pool floats, etc. It is also used to deflate the rafts, air mattresses, swimming pool floats, and other low-pressure items requiring large quantities of air.

BEFORE USING YOUR INFLATOR

Too much air pressure causes a hazardous risk of bursting. Check the manufacturer's maximum pressure rating for objects being inflated.

LEDLIGHT SWITCH


To turn the LED light off, press the lower part of the LED light switch marked  or press the right part of the LED light switch marked "OFF".

INFLATOR AND BLOWER SWITCH

This three-position switch operates the Inflator and blower function. Place

the switch in the

(I) position to turn on the inflator function. Place the switch in the (II) position to turn on the blower function. When the switch is in the center position (0), all pump operations are off.

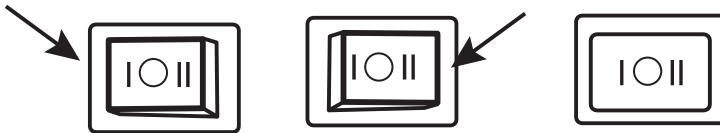

INFLATOR AND BLOWER SWITCH

Your inflator is equipped with a built-in digital gauge that will automatically shut off when a predetermined air pressure is reached. The digital gauge is multifunctional serving as a pressure gauge, monitoring the amount of pressure being applied to the item being inflated, pressure is indicated by PSI, BAR or KPA.


Press the mode button to switch between the different units (PSI, BAR or KPA).

Press the (+) or (-) button at the same time until the required units are displayed.



NOTE!

The digital gauge will only show inflation pressures when the inflator is being used.

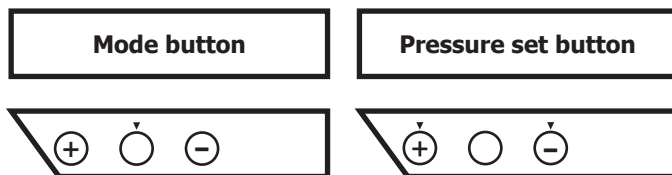


UNIVERSAL VALVE ADAPTOR

To operate the valve adaptor, position the lever straight up.

Push the valve adaptor down over the threaded section of the valve stem, or one of the three accessories provided with your inflator.

When the adaptor is down all the way over the threads, press the lever down with your finger to lock it in place.

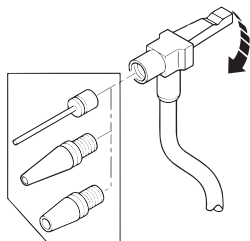

Make sure that the universal valve adaptor is firmly locked in place before turning the inflator on. To release the adaptor, lift the lever straight up and pull the adaptor off.

 NOTE!

Always make sure that the lever is in the up position when not in use. Operate your inflator only with the universal valve adaptor or with the included nozzles.
Inflating with the high-pressure hose The valve adaptor on the high-pressure hose can be used without adaptors to inflate tires.

 WARNING!

Do not operate the inflator when the car engine is running.

 WARNING!

Do not leave unit running unattended. Over inflation of tires and other items could result in serious injury and property damage.

 NOTE!

Make sure that your 12 Volt accessory socket is live. On some vehicles the accessory socket may only become live when the ignition key is in the accessory position.

 NOTE!

When inflating items of 10PSI /0.7BAR or less, inflate in short bursts and check after each burst by feel or with a calibrated measuring device to determine accurate pressure.
Press mode button to activate. Set desired pressure.
Place valve adaptor on valve stem and lock in place.
Press the low pressure and high-pressure switch to start inflating. When the desired pressure is reached, the inflator will automatically turn off. This is a safety feature to prevent the risk of items over inflating.

USING THE INFLATOR AS A PRESSURE GAUGE

- ▷ Press mode button to activate.
- ▷ Connect the universal valve adaptor to the item to be checked. The digital gauge will display the items pressure.

HOSE AND CORD STORAGE

- ▷ When not in use, the high-pressure hose is stored in the storage area on back of the inflator. The low-pressure hose is stored in the storage area on top of the inflator. The cords are stored in the storage area on bottom of the inflator.

ACCESSORIES STORAGE

When not in use, adaptors and needles provided with the inflator can be placed in the storage area located on back of the inflator.



به هیچ وجه دستگاه را در حالت روشن رها نکنید زیرا با باد شدن بیش از حد تایر و ...، امکان صدمه رسیدن به کاربر و دستگاه وجود دارد.



از برق دار بودن سوکت فندکی خودرو اطمینان حاصل فرمایید، زیرا در برخی از خودروها زمانی سوکت فندکی خودرو دارای برق است که ماشین روشن باشد.



در هنگام باد کردن وسایل با 10PSI / 0.7BAR فشار، به صورت مقطعی به باد کردن ادامه دهید و بعد از هر بار باد کردن با استفاده از دستگاه فشار سنج بررسی نمایید که میزان باد کافی است.

دکمه تغییر واحد اندازه گیری را فشار داده و واحد مورد نظر را انتخاب نمایید. حال با استفاده از دکمه های مثبت (+) و منفی (-) فشار مطلوب را با توجه به نوع وسیله ای که می خواهید باد کنید، انتخاب نمایید. سپس رابط سری شلنگ را داخل نازل وسیله مورد نظر قرار داده و کاملاً سفت کنید و با روشن کردن سوئیچ روشن و خاموش شروع به باد کردن کنید. زمانی که دستگاه به میزان تنظیم شده رسید به صورت خودکار موتور را قطع خواهد کرد و این کار برای ایمنی بیشتر و جلوگیری از باد شدن بیش از حد می باشد.

نحوه استفاده دستگاه به عنوان فشار سنج

دستگاه را به برق بزنید و دکمه تغییر واحد اندازه گیری را بفشارید و سپس وسیله مورد نظر را به سری شلنگ دستگاه بزنید، دستگاه فشار را روی صفحه نمایشگر نشان می دهد.

نحوه انبارش دستگاه

زمانی که به مدت طولانی از دستگاه استفاده نمی کنید، شلنگ کمپرسور را در قسمت عقب دستگاه که محلی برای آن تعبیه شده قرار دهید و همچنین برای انبارش نازل ها می بایست از قسمت پشت دستگاه که جای هریک از نازل ها مشخص می باشد استفاده نمایید.




اگر دستگاه را خاموش کنید، گیج دیجیتال نیز خاموش شده و تمامی تنظیماتی که انجام داده اید نیز از بین خواهد رفت.



گیج دیجیتالی دستگاه فشار باد همان لحظه‌ای که تولید می‌کند را نشان می‌دهد.

سری‌های رابط

برای استفاده از سری، اهرم پشت نازل شلنگ را به سمت بالا بکشید سپس سری مورد نظر را داخل نازل قرار دهید و در انتها اهرم را به سمت پایین فشار دهید و از محکم بودن آن اطمینان حاصل فرمایید یا خود نازل را به صورت مجزا با روش ذکر شده مورد استفاده قرار دهید.

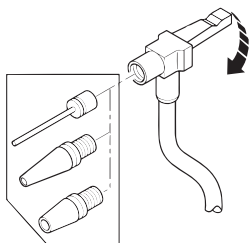

همواره قبل از روشن کردن دستگاه از چفت بودن کامل سری نازل اطمینان حاصل فرمایید. برای آزاد کردن سری می‌بایست اهرم پشت نازل شلنگ را به سمت بالا بکشید و از جای خود خارج کنید.



همواره از بالا بودن اهرم پشت نازل شلنگ در زمان های عدم استفاده، اطمینان حاصل فرمایید. فقط از شلنگ و سری نازل های داخل محصول استفاده کنید.

نحوه استفاده از کمپرسور

شلنگ همراه با رابط سری را می‌توان بدون استفاده از نازل نیز برای باد کردن تایرها استفاده کرد.



از باد کردن تایر های خودروی روشن خودداری فرمایید.

قبل از استفاده از دستگاه

فشار بیش از حد خطر ترکیدن را به شدت افزایش می‌دهد. به حداکثر فشار قابل تحمل نوشته شده روی وسیله‌ای که می‌خواهید آن را باد کنید دقت کنید.


سوییچ چراغ LED

برای روشن کردن چراغ LED، قسمت چپ سوییچ LED را فشار دهید و با فشردن قسمت راست سوییچ «OFF» چراغ خاموش می‌شود.

سوییچ تغییر عملکرد

کمپرسور/دمنده


سوییچ تغییر عملکرد دارای ۳ حالت کمپرسور، دمنده و حالت خاموش دارد. با قرار دادن سوییچ در حالت (I) عملکرد کمپرسور فعال می‌شود و با قرار دادن سوییچ در حالت (II) عملکرد دمنده فعال می‌شود و برای غیر فعال کردن عملکردها سوییچ باید در حالت وسط «0» باشد.

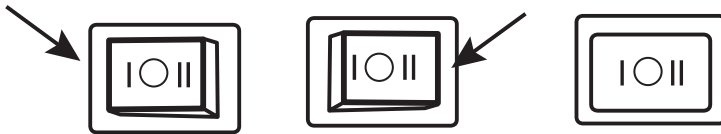

گیج دیجیتالی

این دستگاه دارای گیج دیجیتالی می‌باشد و زمانی که به فشار تعیین شده برسد به صورت خودکار خاموش می‌شود. این گیج چند کاره همانند گیج فشار میزان فشار باد تولیدی را به صورت PSI, BAR, KPA به نمایش می‌گذارد.

دکمه تغییر واحد را فشرده تا واحد فشار خروجی دستگاه تغییر کند (PSI, BAR, KPA)
دکمه (+) یا (-) را فشرده تا حداکثر فشار مورد نظرت تعیین شود.

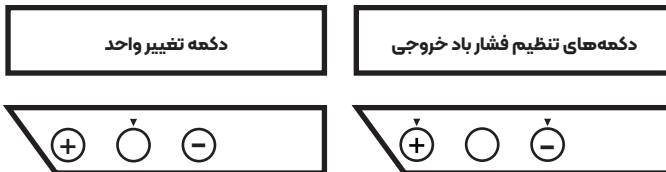

نمادها

برای کاهش و از بین بردن خطرات، کاربران می‌بایست تمامی دستورالعمل‌ها را مطالعه و پیروی کنند.



عایق ایزولاسیون (دو لایه)



اخطار!



استفاده از ماسک ایمنی



استفاده از محافظ چشم (عینک محافظ)



استفاده از گوشی محافظ



دستورالعمل استفاده از دستگاه



قبل از استفاده از دستگاه، با دقت دستورالعمل‌ها را خوانده و از آن پیروی کنید.

موارد استفاده:

این دستگاه برای استفاده روی ماشین‌های دارای سوکت برق فندکی خودرو ۱۲ ولتی برای باد کردن تایر خودرو، موتور سیکلت و دوچرخه، توپ، قایق‌های بادی، تشک‌های بادی، استخر بادی و ... طراحی شده است همچنین برای باد کردن وسایل کم فشار که نیاز به حجم باد زیاد دارند، طراحی شده است.

۳. همواره از متعلقات جانبی مخصوص دستگاه با نرخ کاری 160PSI و 11BAR یا بالاتر استفاده کنید زیرا استفاده از متعلقات جانبی متفرقه ممکن است به دستگاه و کاربر صدمات جدی وارد کند.
۴. از استفاده دستگاه در مجاورت دیوار یا هرگونه شی دیگری که باعث جلوگیری و محدود کردن ورود هوا به داخل دریچه‌های هوای دستگاه شود جدا خودداری فرمایید.
۵. قبل از هربار استفاده، مرتباً بررسی کنید که دستگاه عاری از هرگونه ترک یا عیوب دیگری که باعث ناپایمن شدن آن می‌شود و در صورت وجود از آن استفاده نکنید.
۶. از عدم انسداد و گرفتگی شلنگ اطمینان حاصل فرمایید. شلنگ‌های در هم پیچیده ممکن است باعث از دست رفتن تعادل در حین کار و صدمه به فرد و دستگاه گردد.
۷. از این دستگاه فقط برای مصارف ذکر شده در دستورالعمل استفاده کنید. در طراحی و عملکرد محصول هیچگونه تغییر و دستکاری نباید انجام دهید.
۸. دستگاه در حین کار دارای ویبره می‌باشد که ممکن است دستگاه کمی حرکت داشته باشد پس از گذاشتن دستگاه روی قفسه‌ها یا سطوح دارای ارتفاع خودداری فرمایید.
۹. دستگاه را در حالت روشن رها نکنید.
۱۰. به هیچ وجه از سیم برق دستگاه برای حمل استفاده نکنید.
۱۱. هوای فشرده خارج شده از دستگاه به هیچ وجه مناسب برای نفس کشیدن نمی‌باشد مراقب باشید که هوای خارج شده از دستگاه یا وسیله‌ای که در حال باد شدن می‌باشد را تنفس نکنید.
۱۲. هرگز شلنگ خروج هوا را به سمت حیوانات یا انسان نگیرید و
۱۳. همواره در حین کار با دهنده دستگاه از ماسک ایمنی مناسب استفاده کنید.
۱۴. میزان باد شدن وسیله مورد نظر را در حین کار، می‌بایست بررسی کنید.
۱۵. دستگاه را هنگامی که از آن استفاده نمی‌کنید یا در حین تمیزکاری یا تعویض سری، خاموش کرده و از برق بکشید.
۱۶. دستگاه در حین کار داغ می‌شود و می‌بایست اجازه دهید در کارکردهای مداوم برای هر ۵ دقیقه کار، ۱۰ دقیقه خنک شود و همچنین باید قبل از انبارش ۳۰ دقیقه اجازه دهید دستگاه کاملاً خنک شود.
۱۷. زمانی که ماشین روشن است اقدام به باد کردن تایرها نکنید.

استفاده صحیح از دستگاه

- ◀ از اعمال بار اضافه به دستگاه جدا خودداری نمائید. انتخاب درست ابزار برقی مناسب کارتان، باعث کاهش هزینه و زمان و حسن انجام کار برای شما خواهد شد. بنابراین همیشه برای انجام عملکرد مورد نظرتان از ابزار برقی مخصوص به آن کار استفاده نمائید.
- ◀ در صورت معیوب بودن کلید دستگاه، هرگز از آن استفاده نکنید و به نزدیک ترین مراکز خدمات پس از فروش برای تعمیر آن مراجعه نمائید. هر دستگاهی که با کلید قابل کنترل نباشد، خطرآفرین است و باید تعمیر شود.
- ◀ قبل از هرگونه تنظیم یا تعویض لوازم جانبی دستگاه، همچنین زمانی که از دستگاه استفاده نمی کنید دو شاخه را از منبع برق جدا نمائید. این کار از شروع به کار ناگهانی دستگاه جلوگیری خواهد کرد.
- ◀ ابزارآلات برقی را از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. ابزارآلات برقی در دسترس افراد آموزش ندیده، خطرآفرین خواهند بود.
- ◀ از ابزارآلات برقی به خوبی نگهداری نمائید. هرگونه تنظیمات، گیرکردن قطعات دوار و یا هر وضعیت دیگری که ممکن است بر روی عملکرد دستگاه تاثیر بگذارد را بررسی نمائید و در صورت آسیب دیدگی قبل از استفاده، آن مورد را رفع نمائید. بیشتر حوادث از عدم نگهداری صحیح ابزارآلات برقی رخ می دهد.
- ◀ همواره از ابزار و لوازم جانبی مناسب این دستگاه استفاده نمائید. همچنین از این دستگاه تنها برای کارهایی که برای آن تهیه و طراحی شده است، استفاده نمائید.

تعمیرات و نگهداری

- ◀ برای هرگونه تعمیر و تعویض قطعات، تنها به مراکز خدمات پس از فروش شرکت کنزاکس مراجعه نمائید.

دستورالعمل های ایمنی مخصوص مینی کمپرسور

۱. دستورالعمل های استفاده از دستگاه را با دقت خوانده تا کاملا با کاربردها، محدودیت ها و همچنین خطرات احتمالی مربوط به این دستگاه آشنا شوید.
۲. فقط برای موارد ذکر شده داخل این دستورالعمل، از این دستگاه استفاده کنید زیرا اعمال فشار بیشتر منجر به خرابی دستگاه و صدمات جانی می گردد.

- ◀ هنگام استفاده از دستگاه در محیط های مرطوب حتما از کلید حفاظت جان (RCD) برای اتصال دستگاه به منبع تغذیه برق شهری استفاده نمائید. کلید حفاظت جان، مانند دستکش و کفش ایمنی به افزایش ایمنی فردی کمک می کند.
- ◀ هرگز ابزارهای دارای جریان متناوب را به منبع تغذیه برق با جریان غیرمتناوب (مستقیم) وصل ننمائید. این کار منجر به آسیب دیدگی دستگاه و آسیب های فردی خواهد شد.

ایمنی فردی

- ◀ زمانی که خسته اید یا تحت تاثیر دارو قرار دارید و در مجموع زمانی که در سلامتی کامل به سر نمی برید، هرگز از ابزارآلات برقی استفاده ننمائید. چرا که لحظه ای درنگ و بی دقتی منجر به صدمات جبران ناپذیری خواهد شد.
- ◀ همواره از لوازم ایمنی مانند عینک ایمنی، ماسک هوا، کفش و کلاه ایمنی و محافظ گوش استفاده نمائید تا صدمات فردی کاهش یابد.
- ◀ برای اجتناب از شروع به کار ناگهانی دستگاه، قبل از اتصال آن به منبع برق از قرار داشتن کلید در وضعیت خاموش اطمینان حاصل نمائید. همچنین زمانی که آن را جا به جا می کنید، دو شاخه را از پریز جدا کرده و انگشتان را بر روی کلید قرار ندهید.
- ◀ قبل از روشن کردن دستگاه از عدم اتصال هرگونه ابزار تنظیم مانند آچار به قطعات دوار اطمینان حاصل نمائید چرا که می تواند منجر به صدمات جبران ناپذیری گردد.
- ◀ حالت صحیح قرارگیری پا ها و حفظ تعادل بدن حین کار از خارج شدن کنترل دستگاه جلوگیری می نماید.
- ◀ همواره در حین کار از لباس کار مناسب استفاده نمائید. استفاده از لباس های غیر استاندارد و گشاد، جواهرات و داشتن موهای بلند امکان درگیر شدن آنها را با قسمت های متحرک ابزارآلات برقی افزایش داده و ممکن است خطرآفرین شود.
- ◀ در صورت استفاده از غبار جمع کن از اتصال صحیح و مناسب آن به دستگاه اطمینان حاصل نمائید. استفاده از چنین لوازم جانبی، مضرات مربوط به غبارات را کاهش خواهد داد..

دستورالعمل های کلی ابزارآلات برقی



هشدار!

- ◀ لطفا کلیه مواردی که در ذیل قید شده است را با دقت مطالعه فرمائید و به کار برید، عدم پیروی از دستورالعمل های ذیل ممکن است منجر به ایجاد صدمات جبران ناپذیر فیزیکی یا ایجاد اختلال در کارکرد ابزارآلات برقی شوند.
- ◀ این دفترچه راهنما را بعد از مطالعه نگهداری نمائید.
- ◀ منظور از کلمه "ابزار برقی" در هشدارهای زیر کلیه ابزارهای برقی متصل به کابل یا ابزارهای شارژی دارای باتری می باشد.


ایمنی محل کار

- ◀ محل کار را تمیز و روشن نگهدارید. محیط های در هم ریخته و تاریک حادثه آفرین خواهند بود.
- ◀ هرگز از ابزارآلات برقی در مجاورت مواد اشتعال زا استفاده ننمائید. ابزار آلات برقی جرقه ایجاد می کنند که ممکن است موجب آتش سوزی گردد.
- ◀ ابزارآلات برقی را هنگام استفاده از دسترس کودکان و افراد غیرمختص دور نگهدارید. زیرا ممکن است باعث از دست دادن تمرکز و کنترل دستگاه شود.

ایمنی برقی

- ◀ دو شاخه دستگاه باید متناسب با پریز باشد. با این کار احتمال برق گرفتگی به شدت کاهش خواهد یافت.
- ◀ در هنگام استفاده از دستگاه به محل عبور لوله، کابل برق مربوط به رادیاتور، گرمخانه و یا یخچال و... توجه نمائید.
- ◀ ابزارآلات برقی را در معرض باران و یا رطوبت قرار ندهید. ورود آب به ابزارآلات برقی ممکن است موجب برق گرفتگی شود.
- ◀ هرگز از کابل دستگاه برای حمل آن استفاده ننمائید و یا برای قطع اتصال دستگاه از پریز، کابل را نکشید. همچنین کابل را از معرض حرارت، سطوح نوک تیز، قطعات دوار و روغن دور نگهدارید. کابل های آسیب دیده مستعد بروز برق گرفتگی هستند.
- ◀ هنگام استفاده از دستگاه در محیط های باز، از سیم رابط مناسب استفاده نمائید تا احتمال برق گرفتگی کاهش یابد.

نام قطعات دستگاه

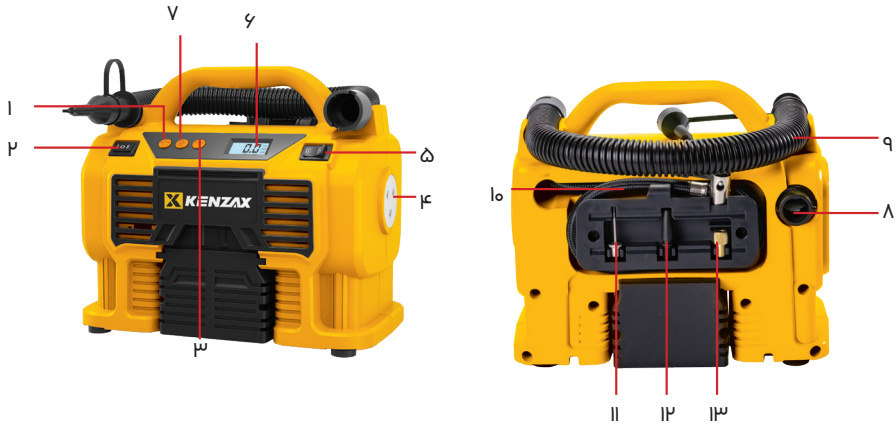

اجزاء و قطعات دستگاه

- | | |
|--------------------------------|---------------------|
| ۱. دکمه "+" افزایش مقادیر | ۸. خروجی هوای دمنده |
| ۲. سویچ تغییر عملکرد | ۹. شلنگ دمنده |
| ۳. دکمه "-" کاهش مقادیر | ۱۰. شلنگ کمپرسور |
| ۴. چراغ LED | ۱۱. نازل توپ |
| ۵. سویچ چراغ LED | ۱۲. نازل تشک بادی |
| ۶. صفحه نمایشگر دیجیتال | ۱۳. نازل تایر |
| ۷. دکمه تغییر واحد اندازه گیری | |

مشخصات فنی

5418	مدل دستگاه
برق شهری ۲۲۰-۲۴۰ ولت ۲ ولت فن‌دکی	منبع تغذیه
160PSI/11 Bar/1100Kpa	حداکثر فشار
دمنده: ۳۸۰ لیتر بر دقیقه کمپرسور: ۹ لیتر بر دقیقه	حداکثر جریان باد خروجی
۲۰ دقیقه	حداکثر مدت زمان کار پیوسته
PSI/BAR/KPA	واحد نمایش فشار
۷۹ سانتی متر	طول شلنگ کمپرسور
۳ متر	طول کابل فن‌دکی
۳ متر	طول کابل برق
۲/۴ کیلوگرم	وزن
رابط باد توپ رابط باد تایر رابط تشک بادی لوله خرطومی باد کیف	متعلقات



مینی کمپرسور دیجیتال فندکی / برق شهری



ITEM NO. 5418

دفترچه راهنمایی فارسی

CE RoHS