



INDUCTION HIGH PRESSURE WASHER-170 BAR




ITEM NO. 6526

INSTRUCTION MANUAL



SPECIFICATION

Model	6526
Power	2200 W
Voltage	220 V
Frequency	50 Hz
Motor Type	Induction
Max Pressure	170 bar
Max. Flow	7.2 L/min
Max. Water Temperature	50 °C
Working temperature	5°C ~ 50°C
Weight	22 kg
Includes	1x Spray gun with stainless steel lance 5x nozzle tips(0°/25°/40°/Detergent Injection/Turbo nozzle) 1x 5m water outlet Steel armed pressure hose 1x Built in detergent tank 1x HPC connector

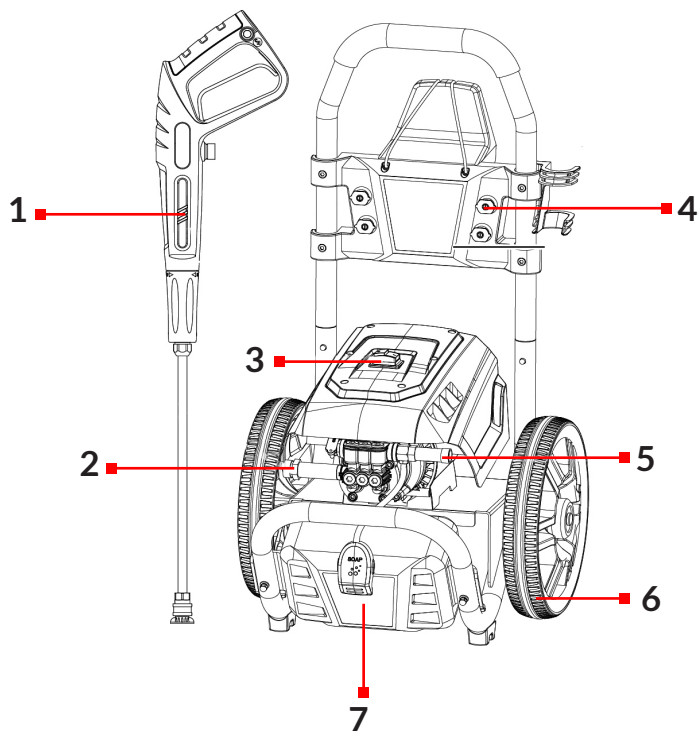PART LIST**Product Elements**

- | | |
|----------------|-------------------|
| 1. GUN | 5. Water outlet |
| 2. Water inlet | 6. Wheel |
| 3. Switch | 7. Detergent tank |
| 4. Nozzle | |

 NOTE!

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

 This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

 This sign means that there are important instructions of operation and handling in the manual that comes with this device.

GENERAL POWER TOOL SAFETY WARNINGS

 WARNING!

- ▷ Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and or serious injury.
- ▷ Save all warnings and instructions for future reference.
- ▷ The term “power tool” in the warnings refers to your mains-operated (corded) power tools or battery operated (cordless) power tool.

WORK AREA SAFETY

- ▷ Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- ▷ Don't operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- ▷ Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRIC SAFETY

- ▷ Power tool plugs must match the outlet. Never modify the plug in any way. Don't use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- ▷ Avoid body contact with earthed or grounded surfaces such as pipe, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- ▷ Don't expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

- ▶ Don't abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increased the risk of electric shock.
- ▶ When operating a power tool outdoors, use an extension cord suitable for outdoor use. Using a cord suitable for outdoor use will reduce the risk of electric shock.
- ▶ If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.
- ▶ Use of power supply via a RCD with a rated residual current of 30mA or less is always recommended.

PERSONAL SAFETY

- ▶ Stay alert, watch what you are doing and use common sense when operating a power tool. Don't use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- ▶ Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- ▶ Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- ▶ Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- ▶ Don't overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- ▶ Dress properly. Don't wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose cloths, jewelry or long hair can be caught in moving parts.
- ▶ If devices are provided for connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

- ▶ Don't force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- ▶ Don't use the power tool if the switch doesn't turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- ▶ Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- ▶ Store idle power tools out of the reach of children and don't allow persons unfamiliar with power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc. in accordance with the instruction, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- Use the power tool, accessories and tool bits etc. in accordance with the instruction, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

SERVICE

- Have your power tool serviced by qualified repair person using only identical replacement parts. This will ensure that the safety of power tool is maintained.
- Follow instruction for lubricating and changing accessories.
- Keep handles dry, clean and free from oil and grease.

SPECIAL SAFETY

- DO NOT use the appliance with inflammable or toxic liquids, or any products which are not compatible with the correct operation of the appliance.
- DO NOT direct the water jet towards people or animals.
- DO NOT direct the waterjet towards the unit itself, electrical protowords other electrical equipment.
- DO NOT use the appliance outdoors in case of rain.
- DO NOT allow children or incompetent persons to use the appliance.
- DO NOT touch the plug and, or socket with wet hands.
- DO NOT use the appliance if the electrical cable is damaged.
- DO NOT use the appliance if the high-pressure hose is damaged.
- DO NOT jam the trigger in the operating position.
- DO NOT tamper with or adjust the setting of the safety valve or the safety devices.
- DO NOT alter the original diameter of the spray head Nozzle.
- DO NOT leave the appliance unattended.
- DO NOT move the appliance by pulling on the ELECTRICAL CABLE.
- Make sure that cars do not drive over the high-pressure hose.
- DO NOT move the appliance by pulling on the high-pressure hose.

- ▶ When directed towards tires, tire valves or other pressurized components, the high-pressure jet is potentially dangerous. Do not use the rotating nozzle kit, and always keep the jet at a distance of at least 03 cm during cleaning.

SAFETY MUSTS

- ▶ All electrical conductors must be protected against the water jet.
- ▶ The appliance must only be connected to an adequate power supply in compliance with all applicable regulations.
- ▶ Use of a safety residual current circuit-breaker (R.C.C.B.) will provide additional protection for the operator (30 MA).
- ▶ High pressure may cause parts to rebound: wear all the protective clothing and equipment needed to ensure the operator's safety
- ▶ Before doing work on the appliance, remove the plug.
- ▶ Before pressing the trigger, grip the gun firmly to counteract the recoil.
- ▶ Maintenance and/or repair of electrical components must be carried out by qualified staff.
- ▶ Before using the appliance, check every time that the screws are fully tightened and that there are no broken or worn parts.
- ▶ Only use detergents which will not corrode the coating materials of the high-pressure hose/ electrical cable.
- ▶ Ensure that all people or animals keep a LYN minimum stance of 16 yd. (15m) away

SAFETY MUST KNOWS

Danger!

- ▶ Do not tamper with or adjust the safety valve setting. Safety valve and/or pressure limiting
- ▶ valve. The safety valve is also a pressure limiting valve. When the gun trigger is released, the valve opens and the water recirculates through the pump inlet or is discharged onto the ground.
- ▶ Safety catch (see Connection of gun and hose) Prevent accidental spraying of water.
- ▶ Air outlet on plastic case and it should NOT be blocked during ration, or fire or electric shock hazard is possible.

RUNNING INSTRUCTION



WARNING!

This unit is to be connected to a cold-water source only.

 WARNING!

The motor of this pressure washer will NOT run. It will only operate when the trigger is squeezed.

- ▷ Connect the outlet hose to the washer and connect the spray gun to the outlet hose.
- ▷ Connect nozzle and nozzle extension.
- ▷ Check gauze filter is clear of any blockage.
- ▷ Connect the water supply hose.
- ▷ Check that the hose has no kinks in it
- ▷ Turn on water and check for leaks.
- ▷ Depress trigger to allow air to be expelled though the pump and hoses, lock trigger.
- ▷ Plug in machine and turn on side switch.
- ▷ Unlock trigger and use the pressure washer.

SHUT DOWN

- ▷ Turn off the motor(push switch to the off position).
- ▷ Unplug the unit from the power source.
- ▷ Turn off the water supply.
- ▷ Press the trigger of the gun to depressurize the system, take down the water outlet hose, 10 seconds racing of the motor to let take water completely spray out.
- ▷ Disconnect the garden hose from the pressure washer.
- ▷ Wipe all surfaces of the unit with a damp clean cloth.
- ▷ Engage the gun safety lock.

 CAUTION!

ALWAYS turn off the unit's motor BEFORE turning off the unit's water supply. Serious damage could occur to the motor if the unit is run without water.

 CAUTION!

NEVER disconnect the high-pressure discharge hose from the machine while the system is still pressurized. To depressurize the unit, turn off the motor, turn off the water supply and squeeze the trigger 2-3times.

SPRAY NOZZLES

The Pressure Washer comes furnished with four spray nozzles. Each nozzle is color coded and delivers a specific spray pattern and pressure for a particular cleaning job. The size of the nozzle

determines the size of the fan spray and the pressure out of the nozzle.

0° Nozzle – Red: This nozzle delivers a pinpoint stream of pressurized water and is extremely powerful. It covers only a small area of cleaning. This nozzle should only be directed at surfaces that can withstand high pressure such as metal or concrete. Do not use this nozzle to clean wood. (fig 1)



25° Nozzle (Green): This nozzle delivers a 25 degree spray pattern for intense cleaning of larger areas. This nozzle should only be used on areas that can withstand pressure from this nozzle. (fig 2)




40° Nozzle – White: This nozzle delivers a 40 degree spray pattern and a less powerful stream of water. This nozzle can cover a wide area and should be used for most general cleaning jobs. (fig 3)



Chemical Nozzle – Black: This nozzle is used to apply special chemicals and cleaning solutions. This nozzle produces the weakest pressure stream of the five nozzles. (fig 4)



Turbo Nozzles: This nozzle delivers a rotating spray pattern for maximum cleaning power. The internally rotating nozzle conveys the water power spins it in a circle to clean a much larger area.




The nozzles are stored in receptacles on a panel mounted to the handle of the washer. Colors on the panel identify nozzle location and spray panel.

USING DETERGENT

Add detergent to the container. Set the Adjustable Spray Wand at low pressure position. Trigger gun to spray detergent.


GUN SAFETY DEVICE

Whenever you use the high pressure washer, we suggest you grip the in the right position, with one hand on the handle and the other on the lance. When you stop the machine it is necessary to use the safety lock placed on the gun in order to avoid accidental.

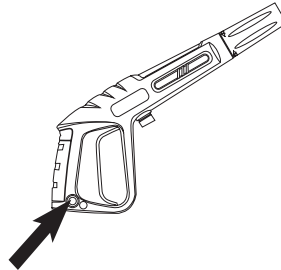

Cleaning pin instruction

Using included tip cleaner, or an unfolded paper clip, insert wire into the nozzle hole and move back and forth until debris is dislodged.

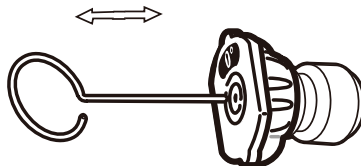



برای اطمینان از خروج کامل ذرات ، داخل نازل را به مدت ۳۰ الی ۶۰ ثانیه توسط شلنگ آب شستشو دهید.

حفاظت از محیط زیست

ضایعات محصولات الکتریکی را نباید با زباله های خانگی دور ریخت. لطفاً به مراکزی که امکانات بازیافت وجود دارد تحویل داده شود. وسایل برقی را به عنوان زباله های شهری دور نریزید و مناطق مخصوص زباله های بازیافتی انبارش نمایید. برای کسب اطلاعات در مورد سیستم های جمع آوری زباله های بازیافتی با شهرداری منطقه خود تماس بگیرید. اگر وسایل برقی در محل های دفن زباله های معمولی دور ریخته شوند، امکان این وجود دارد که مواد خطرناک و سمی به سفره های زیرزمینی آب نشت کرده و وارد زنجیره غذایی شوند. که این امر موجب آسیب رسیدن به سلامت می شود. دفع ضایعات محصولات الکتریکی باید مطابق با مقررات محیط زیست باشد.

انبارش ابزار

همیشه قبل از انجام هر گونه بازرسی یا تعمیرات دستگاه را از منبع تغذیه جدا کرد و جهت انبارش در مکان خشک و بدون رطوبت نگهداری نمایید.
هرگز از گازوئیل، بنزن، تینر، الکل یا هر گونه مواد مشابه که خاصیت خوردگی دارند استفاده نکنید. چرا که موجب تغییر رنگ، تغییر شکل یا ترک خوردن دستگاه می شود.

کنزاکس سرویس

ضمن تشکر از حسن انتخاب شما

به همراه ابزار شما کارت ضمانت نامه ۱۲ ماهه کنزاکس سرویس ارائه می گردد.

لطفا توجه داشته باشید که هیچ کدام از اجزای داخلی ابزار، احتیاج به تعمیر و یا بهبود اضافه جهت بهینه نمودن عملکرد ندارند. بنابراین از هرگونه اعمال دستکاری یا مراجعه به مراکز تعمیرات غیر مجاز اجتناب نمایید و در صورت بروز هرگونه مشکل سریعا با مراکز سرویس و پشتیبانی کنزاکس به شماره ۶۲۸۱۹-۰۲۱ و یا به وب سایت www.kenzax.com تماس حاصل نمایید.

استفاده از مواد شوینده

مایع شوینده رقیق شده را داخل مخزن کف پاش بریزید.


نازل کف پاش (هشکی) را روی لانس نصب کنید.

ماشه تفنگی را بفشارید.

دکمه ایمنی تفنگی


هنگام استفاده از کارواش نیاز است تا تفنگی دستگاه توسط دو دست بصورت کامل مهار شود.

هنگامیکه از دستگاه استفاده نمی‌کنید نیاز است تا دکمه قفل کن روی تفنگی را فشار دهید تا از روشن شدن ناگهانی دستگاه جلوگیری شود.

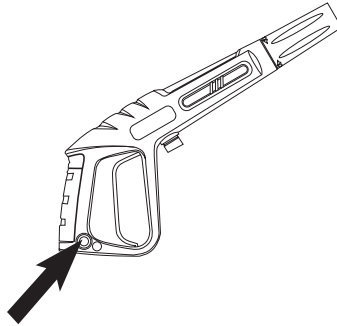

سوزن تمیزکاری

سوزن تمیزکاری را داخل سوراخ نازل قرار داده و به سمت جلو و عقب حرکت دهید تا ذرات و کثیفی‌ها از نازل خارج شوند.

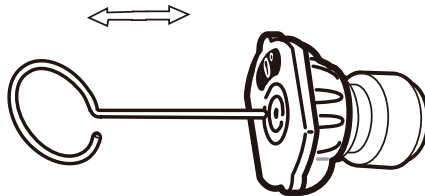

نازل ۲۵ درجه (سبز): این نازل یک الگوی اسپری ۲۵ درجه برای تمیزکاری پر فشار در محدوده‌های بزرگ ارائه می‌دهد. این نازل فقط باید در مناطقی استفاده شود که می‌توانند فشار این نازل را تحمل کنند.




نازل ۴۰ درجه (سفید): این نازل الگوی اسپری ۴۰ درجه و جریان آب کمتری را ارائه می‌دهد. این نازل می‌تواند منطقه وسیعی را پوشش دهد و برای انجام نظافت عمومی (شستشوی خودرو و ...) استفاده می‌شود.



نازل کف پاش (مشکی): از این نازل برای پاشش محلول‌های تمیز کننده استفاده می‌شود. این نازل ضعیف‌ترین فشار را در بین نازل‌ها تولید می‌کند.



نازل توربو: نازل توربو الگوی اسپری دایره ای را برای حداکثر قدرت تمیز کاری ایجاد میکند. این نازل می‌تواند با چرخش آب، جریان آب پر فشار و قدرتمندی را برای پوشش منطقه وسیعی ایجاد کند.



خاموش کردن دستگاه

- ◀ موتور را خاموش کنید (سوئیچ حالت خاموش را فشار دهید).
- ◀ دو شاخه دستگاه را از پریز خارج نمایید.
- ◀ شیر آب را ببندید.
- ◀ ماشه تفنگی را فشار دهید تا فشار سیستم کاهش یابد. شلنگ خروجی آب را در ارتفاع کمتر نسبت به دستگاه قرار دهید، تا آب کاملاً خارج شود.
- ◀ شلنگ آب را از دستگاه جدا کنید.
- ◀ تمام سطوح دستگاه را با یک پارچه تمیز مرطوب پاک کنید.
- ◀ قفل ایمنی تفنگی را فعال کنید.



همیشه قبل از قطع منبع آب دستگاه، موتور دستگاه را خاموش کنید.
اگر دستگاه بدون آب کار کند ممکن است آسیب جدی به موتور وارد شود.



در حالی که سیستم هنوز تحت فشار است، هرگز شلنگ را از دستگاه جدا نکنید. برای کاهش فشار دستگاه، موتور را خاموش کنید، شیر آب را ببندید و ماشه را ۲ تا ۳ بار فشار دهید.

نازل

دستگاه کارواش کنزاکس مجهز به ۴ عدد نازل می باشد. هر نازل دارای کد رنگی است و الگوی اسپری و فشار خاصی را برای یک عملیات خاص ارائه می دهد.

نازل • درجه (قرمز): جریان آب پرفشار و قدرتمندی را ایجاد کرده و برای امور لایه برداری و تمیزکاری سطوح سخت استفاده میشود. این نازل فقط باید به سمت سطوحی هدایت شود که فشار بالایی را تحمل کنند مانند فلز یا بتن. از این نازل برای تمیز کردن چوب استفاده نکنید.



دستورات ایمنی حین استفاده از دستگاه



خطر!

۱. تنظیمات شیر اطمینان را تغییر ندهید.
شیر اطمینان به منظور محدود کردن فشار دستگاه است.
که شاسی تفنگی آزاد میشود شیر باز شده و آب درون پمپ جریان می باید زمانی
۲. قفل تفنگی از خروج ناگهانی آب جلوگیری می کند.
۳. خروجی هوا بر روی بدنه پلاستیکی دستگاه نباید در حین استفاده مسدود شود در غیر اینصورت خطر برق گرفتگی و آتش سوزی وجود دارد.

دستورالعمل های استفاده

نصب و راه اندازی



خطر!

این دستگاه فقط باید به منبع آب سرد متصل شود.



خطر!

- موتور دستگاه در حالت معمول خاموش است. فقط زمانی کار می کند که ماشه فشرده شود.
- ◀ شلنگ فشار قوی را به خروجی آب دستگاه وصل کنید سپس تفنگی را به شلنگ متصل کنید.
 - ◀ لانس را روی تفنگی نصب کنید.
 - ◀ فیلتر را بررسی کنید که انسداد نداشته باشد.
 - ◀ شلنگ آب را به ورودی دستگاه متصل نمایید.
 - ◀ بررسی کنید که شلنگ پیچ خوردگی نداشته باشد.
 - ◀ شیر آب را باز کرده و نشتی را بررسی کنید.
 - ◀ ماشه را فشار دهید تا هوا از طریق پمپ و شلنگ ها خارج شود.
 - ◀ دستگاه را به برق وصل کنید و سوئیچ را روشن کنید.
 - ◀ با فشردن مجدد ماشه ، اقدام به عملیات شستشو کنید.

- ◀ در صورتیکه کابل برق دستگاه آسیب دیده است از آن استفاده نکنید.
- ◀ چنانچه شلنگ فشار قوی کارواش آسیب دیده است ، از دستگاه استفاده نکنید.
- ◀ کلید را در موقعیت عملیاتی قرار ندهید.
- ◀ تنظیمات سوپاپ اطمینان و دیگر تجهیزات ایمنی دستگاه را تغییر ندهید و آن‌ها را از حالت تنظیم خارج نکنید.
- ◀ قطر اصلی سری نازل اسپری را تغییر ندهید
- ◀ دستگاه را در صورتیکه روشن است رها نکنید.
- ◀ از جابه جا کردن دستگاه از طریق کشیدن کابل برق آن اجتناب نمایید.
- ◀ از حرکت دادن کارواش بر روی شلنگ فشار قوی اجتناب نمایید.
- ◀ از جابه جا کردن دستگاه از طریق کشیدن شلنگ آن پرهیزید.
- ◀ نشانه رفتن مستقیم لانس به سمت تیر و یا دیگر اجزایی که دارای هوای فشرده هستند و برخورد آب به آن‌ها با فشار بالا خطرناک است همواره در طول کار با دستگاه سری لانس را در فاصله ۳۰ سانتی متری از سطح نگه دارید.

مواد ایمنی ضروری

- ◀ تمامی قطعات الکتریکی باید از برخورد با آب محافظت شوند.
- ◀ دستگاه باید به یک منبع برق استاندارد متصل شود.
- ◀ باید از منبع برق مجهز به محافظ جان استفاده شود.
- ◀ فشار زیاد ممکن است سبب پرتاب قطعات شود.
- ◀ از لباس ایمنی و تجهیزات مورد نیاز استفاده نمایید.
- ◀ پیش از انجام تنظیمات بر روی دستگاه دوشاخه را از پریز خارج نمایید.
- ◀ پیش از شروع به کار با دستگاه تفنگی را محکم بگیرید.
- ◀ نگهداری و تعمیر قطعات الکتریکی باید توسط واحد خدمات شرکت انجام گیرد.
- ◀ پیش از هر بار استفاده از دستگاه پیچ‌ها را بررسی کرده که کاملاً محکم باشند و هیچ قطعه شکسته و یا آسیب دیدهای وجود نداشته باشد.
- ◀ فقط از مواد شوینده‌های استفاده نمایید که سبب خوردگی مواد پوشش دهنده شلنگ فشار قوی نشود.

استفاده صحیح از دستگاه

- از اعمال بار اضافه به دستگاه جدا خودداری نمائید. انتخاب درست ابزار برقی مناسب کارتان، باعث کاهش هزینه و زمان و حسن انجام کار برای شما خواهد شد. بنابراین همیشه برای انجام عملکرد مورد نظرتان از ابزار برقی مخصوص به آن کار استفاده نمائید.
- در صورت معیوب بودن کلید دستگاه، هرگز از آن استفاده نکنید و به نزدیک ترین مراکز خدمات پس از فروش برای تعمیر آن مراجعه نمائید. هر دستگاهی که با کلید قابل کنترل نباشد، خطرآفرین است و باید تعمیر شود.
- قبل از هرگونه تنظیم یا تعویض لوازم جانبی دستگاه، همچنین زمانی که از دستگاه استفاده نمی‌کنید دو شاخه را از منبع برق جدا نمائید. این کار از شروع به کار ناگهانی دستگاه جلوگیری خواهد کرد.
- ابزارآلات برقی را از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. ابزارآلات برقی در دسترس افراد آموزش ندیده، خطرآفرین خواهند بود.
- از ابزارآلات برقی به خوبی نگهداری نمائید. هرگونه تنظیمات، گیرکردن قطعات دوار و یا هر وضعیت دیگری که ممکن است بر روی عملکرد دستگاه تاثیر بگذارد را بررسی نمائید و در صورت آسیب دیدگی قبل از استفاده، آن مورد را رفع نمائید. بیشتر حوادث از عدم نگهداری صحیح ابزارآلات برقی رخ می‌دهد.
- همواره از ابزار و لوازم جانبی مناسب این دستگاه استفاده نمائید. همچنین از این دستگاه تنها برای کارهایی که برای آن تهیه و طراحی شده است، استفاده نمائید.

تعمیرات و نگهداری

- برای هرگونه تعمیر و تعویض قطعات، تنها به مراکز خدمات پس از فروش شرکت کنزاکس مراجعه نمائید.

دستورالعمل های ایمنی کاراوش

- از مایعات قابل اشتعال یا سمی یا هر محصولی که با عملکرد صحیح دستگاه سازگار نیست استفاده نکنید.
- از نشانه رفتن لانس دستگاه به سمت افراد و یا حیوانات پرهیز نمائید.
- از نشانه رفتن لانس به سمت خود، کاراوش قطعات الکتریکی و یا دیگر تجهیزات برقی پرهیزید.
- در صورت بارندگی از دستگاه در فضای باز استفاده نکنید.
- به کودکان و افراد فاقد صلاحیت اجازه ندهید از دستگاه استفاده نمایند.
- از لمس کردن دوشاخه و یا کابل با دستان خیس اجتناب نمائید.

◀ هنگام استفاده از دستگاه در محیط‌های مرطوب حتما از کلید حفاظت جان (RCD) برای اتصال دستگاه به منبع تغذیه برق شهری استفاده نمائید. کلید حفاظت جان، مانند دستکش و کفش ایمنی به افزایش ایمنی فردی کمک می‌کند.

◀ هرگز ابزارهای دارای جریان متناوب را به منبع تغذیه برق با جریان غیرمتناوب (هستقیم) وصل ننمائید. این کار منجر به آسیب دیدگی دستگاه و آسیب‌های فردی خواهد شد.

◀

ایمنی فردی

◀ زمانی که خسته اید یا تحت تاثیر دارو قرار دارید و در مجموع زمانی که در سلامتی کامل به سر نمی‌برید، هرگز از ابزارآلات برقی استفاده ننمائید. چرا که لحظه‌ای درنگ و بی دقتی منجر به صدمات جبران ناپذیری خواهد شد.

◀ همواره از لوازم ایمنی مانند عینک ایمنی، ماسک هوا، کفش و کلاه ایمنی و محافظ گوش استفاده نمائید تا صدمات فردی کاهش یابد.

◀ برای اجتناب از شروع به کار ناگهانی دستگاه، قبل از اتصال آن به منبع برق از قرار داشتن کلید در وضعیت خاموش اطمینان حاصل نمائید. همچنین زمانی که آن را جا به جا می‌کنید، دو شاخه را از پریز جدا کرده و انگشتان را بر روی کلید قرار ندهید.

◀ قبل از روشن کردن دستگاه از عدم اتصال هرگونه ابزار تنظیم مانند آچار به قطعات دوار اطمینان حاصل نمائید چرا که می‌تواند منجر به صدمات جبران ناپذیری گردد.

◀ حالت صحیح قرارگیری پاها و حفظ تعادل بدن حین کار از خارج شدن کنترل دستگاه جلوگیری می‌نماید.

◀ همواره در حین کار از لباس کار مناسب استفاده نمائید. استفاده از لباس‌های غیر استاندارد و گشاد، جواهرات و داشتن موهای بلند امکان درگیر شدن آن‌ها را با قسمت‌های متحرک ابزارآلات برقی افزایش داده و ممکن است خطرآفرین شود.

◀ در صورت استفاده از غبار جمع کن از اتصال صحیح و مناسب آن به دستگاه اطمینان حاصل نمائید. استفاده از چنین لوازم جانبی، مضرات مربوط به غبارات را کاهش خواهد داد.

دستورالعمل‌های کلی ابزارآلات برقی



هشدار!

◀ لطفا کلیه مواردی که در ذیل قید شده است را با دقت مطالعه فرمائید و به کار برید، عدم پیروی از دستورالعمل‌های ذیل ممکن است منجر به ایجاد صدمات جبران ناپذیر فیزیکی یا ایجاد اختلال در کارکرد ابزارآلات برقی شوند.

این دفترچه راهنما را بعد از مطالعه نگهداری نمائید.

◀ منظور از کلمه "ابزار برقی" در هشدارهای زیر کلیه ابزارهای برقی متصل به کابل یا ابزارهای شارژی دارای باتری می‌باشد.


ایمنی محل کار

- ◀ محل کار را تمیز و روشن نگهدارید. محیط‌های در هم ریخته و تاریک حادثه آفرین خواهند بود.
- ◀ هرگز از ابزارآلات برقی در مجاورت مواد اشتعال زا استفاده ننمائید. ابزار آلات برقی جرقه ایجاد می‌کنند که ممکن است موجب آتش سوزی گردد.
- ◀ ابزارآلات برقی را هنگام استفاده از دسترس کودکان و افراد غیرمختص دور نگهدارید. زیرا ممکن است باعث از دست دادن تمرکز و کنترل دستگاه شود.

ایمنی برقی

- ◀ دو شاخه دستگاه باید متناسب با پریز باشد. با این کار احتمال برق گرفتگی به شدت کاهش خواهد یافت.
- ◀ در هنگام استفاده از دستگاه به محل عبور لوله، کابل برق مربوط به رادیاتور، گرمخانه و یا یخچال و... توجه ننمائید. زیرا تماس بدن با آن‌ها احتمال خطر برق گرفتگی را افزایش می‌دهد.
- ◀ ابزارآلات برقی را در معرض باران و یا رطوبت قرار ندهید. ورود آب به ابزارآلات برقی ممکن است موجب برق گرفتگی شود.
- ◀ هرگز از کابل دستگاه برای حمل آن استفاده ننمائید و یا برای قطع اتصال دستگاه از پریز، کابل را نکشید. همچنین کابل را از معرض حرارت، سطوح نوک تیز، قطعات دوار و روغن دور نگهدارید. کابل‌های آسیب دیده مستعد بروز برق گرفتگی هستند.
- ◀ هنگام استفاده از دستگاه در محیط‌های باز، از سیم رابط مناسب استفاده ننمائید تا احتمال برق گرفتگی کاهش یابد.

نام قطعات دستگاه

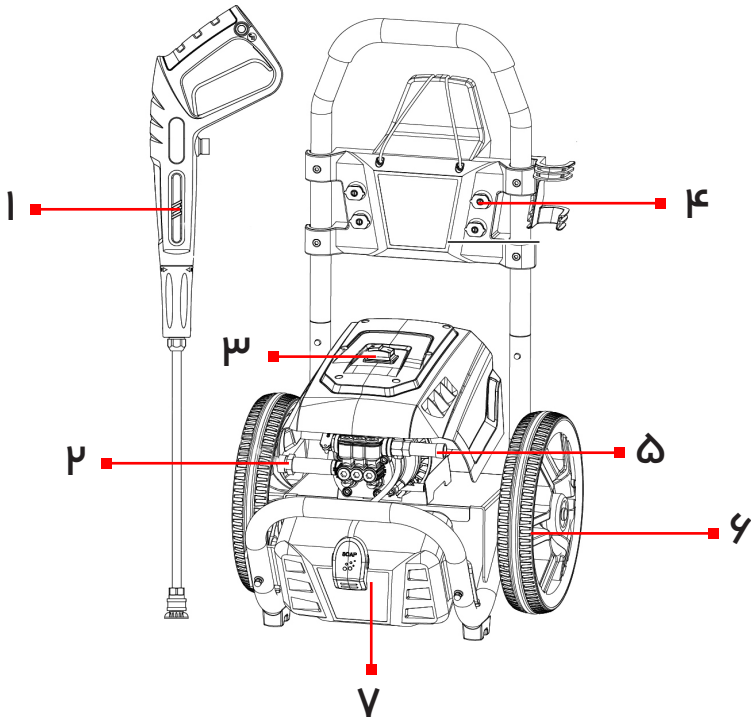

نام قطعات دستگاه

- | | |
|----------------------|-------------|
| ۱. تفنگ | ۵. خروجی آب |
| ۲. ورودی آب | ۶. چرخ |
| ۳. سوئیچ روشن/ خاموش | ۷. مخزن کف |
| ۴. نازل | |

مشخصات فنی

مدل	6526
توان	۲۲۰۰ وات
ولتاژ	۲۲۰ ولت
فرکانس	۵۰ هرتز
نوع موتور	دینامی
حداکثر فشار	۷۰ ابار
حداکثر جریان خروجی	۷/۲ لیتر بر دقیقه
حداکثر دمای آب	۵۰ درجه سانتیگراد
دمای کاری	۵ تا ۵۰ درجه سانتیگراد
وزن متعلقات	۲۲ کیلوگرم
متعلقات	تفنگی با لانس فلزی ۵ عدد نازل (۰°/۲۵°/۴۰°/کف پاش/نازل توربو) شلنگ فشار قوی تقویت شده ۵ متری محزن کف پاش کوپلینگ ورودی آب



کارواش دینامی ۱۷۰ بار



ITEM NO. 6526

دفترچه راهنمای فارسی

