



BRUSHLESS CORDLESS PRUNING SHEARS




ITEM NO. 8732

INSTRUCTION MANUAL

SPECIFICATION

Model	8732
No Load Speed	26500 rpm
Power	300 W
Cutting Capacity	0.3-3.5 cm
Blade material	SK5
Blade Thickness	4 mm
Battery Voltage	21 V
Battery Capacity	2 Ah
Battery Type	Li-ion
Battery Runtime	3 h
Cuts per battery number	2600 (3 cm)
Battery Charging Time	1.1-1.3 h
Motor Type	Brushless
weight	1.15 kg
Accessories	2pcsBattery 1pc Charger 1pc Grindstone 1pc Wrench 1pc Allen Wrench 1pc Lubricating oil

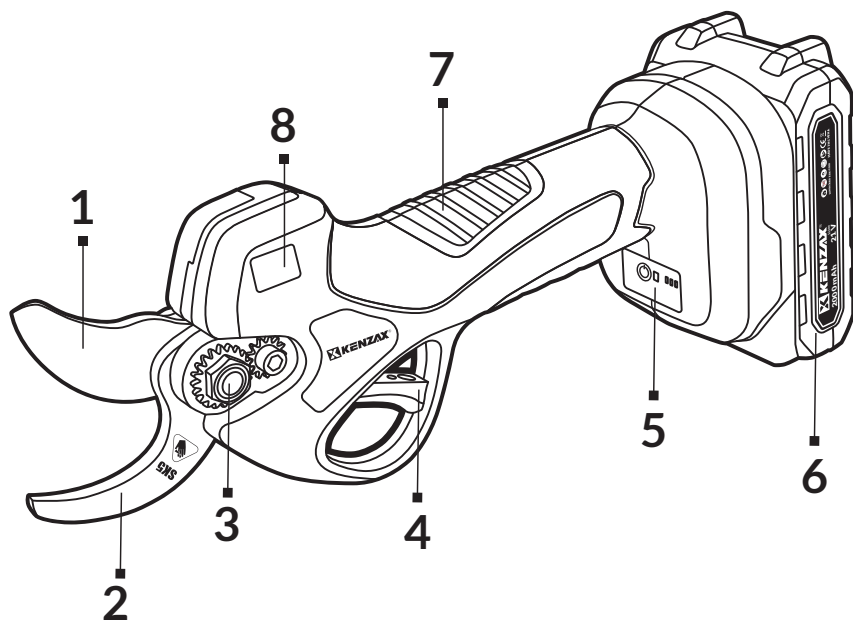PART LIST**Product Elements**

- | | |
|------------------------|---------------------|
| 1. Moving blade | 5. Power Button |
| 2. Fixed blade | 6. Battery pack |
| 3. Blade fixing system | 7. Anti slip handle |
| 4. Trigger | 8. Digital display |

NOTE!

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.



This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.



This sign means that there are important instructions of operation and handling in the manual that comes with this device.

GENERAL POWER TOOL SAFETY WARNINGS



WARNING!

- ▷ Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and or serious injury.
- ▷ Save all warnings and instructions for future reference.
- ▷ The term “power tool” in the warnings refers to your mains-operated (corded) power tools or battery operated (cordless) power tool.

WORK AREA SAFETY

- ▷ Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- ▷ Don't operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- ▷ Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRIC SAFETY

- ▷ Power tool plugs must match the outlet. Never modify the plug in any way. Don't use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- ▷ Avoid body contact with earthed or grounded surfaces such as pipe, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

- ▶ Don't expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- ▶ Don't abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increased the risk of electric shock.

PERSONAL SAFETY

- ▶ Stay alert, watch what you are doing and use common sense when operating a power tool.
Don't use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- ▶ Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- ▶ Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- ▶ Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- ▶ Don't overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- ▶ Dress properly. Don't wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose cloths, jewelry or long hair can be caught in moving parts.
- ▶ If devices are provided for connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards. Collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

- ▶ Don't force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- ▶ Don't use the power tool if the switch doesn't turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- ▶ Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- ▶ Store idle power tools out of the reach of children and don't allow persons unfamiliar with power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

- ▷ Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- ▷ Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- ▷ Use the power tool, accessories and tool bits etc. in accordance with the instruction, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

BATTERY TOOL USE AND CARE

- ▷ Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- ▷ Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- ▷ When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- ▷ Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

DO NOT SHORT THE BATTERY CARTRIDGE

- ▷ Do not touch the terminals with any conductive material.
- ▷ Avoid storing battery cartridge in a container with other metal objects such as nails, coins, etc.
- ▷ Do not expose battery cartridge to water or rain. A battery short can cause a large current flow, overheating, possible burns and even a breakdown.
- ▷ Do not store the tool and battery cartridge in locations where the temperature may reach or exceed 50 °C
- ▷ Do not incinerate the battery cartridge even if it is severely damaged or is completely worn out. The battery cartridge can explode in a fire.
- ▷ Be careful not to drop or strike battery.
- ▷ Do not use a damaged battery.

CORDLESS PRUNING SHEARS SAFETY

1. Do not use the pruning shear in bad weather conditions, especially when there is a risk of lightning. This decreases the risk of being struck by lightning.
2. Keep all power cords and cables away from cutting area. Power cords or cables may be hidden and can be accidentally cut by the blade.
3. Hold the pruning shear by insulated gripping surfaces only, because the blade may contact hidden wiring. Blades contacting a "live" wire may make exposed metal parts of the pruning shear "live" and could give the operator an electric shock.
4. Keep all parts of the body away from the blade. Do not remove cut material or hold material to be cut when blades are moving.
5. When clearing jammed material or servicing the pruning shear, make sure the power switch is off and the battery pack is removed or disconnected. Unexpected actuation of the pruning shear while clearing jammed material or servicing may result in serious personal injury.
6. Carry the pruning shear by the handle with the blade stopped and taking care not to operate the power switch. Proper carrying of the pruning shear will decrease the risk of inadvertent starting and resultant personal injury from the blades.
7. Hold the tool firmly when using the tool.

 WARNING!

- ▶ Hold power tool by insulated gripping surfaces.
- ▶ Always be sure you have a firm footing. Be sure no one is below when using the tool in high locations.
- ▶ Hold the tool firmly.

 WARNING!

-  Do not cut branches beyond the specified diameter indicated.
-  Do not cut hard items such as metals, stone or any other non-plant materials.

OPERATION INSTRUCTION

WARNING!

Do not cut branches that exceed the working range of the pruning shears, do not cut non-plant materials such as metal, rocks, etc., and do not clamp the tool with a vise. If the blades are worn or damaged, please replace them.

CAUTION!

Always be sure that the tool is switched off and the battery is removed before adjusting or checking function on the tool.

ACTIVATING THE CUTTING FUNCTION (PROGRESSIVE MODE)

1. Push the battery into the Pruning Shears and lock it tightly.
2. After installing the battery, long press the trigger, and then press the power button and hold for 1 seconds. After hearing a beep sound release your hand.

NOTE!

At this time the battery indicator light will light up.

3. Quickly pull the trigger 2-3 times to start using the tool
4. (This is a safety features to prevent accidental cutting from touching the trigger when not in use).

NOTE!


It cannot be turned on if pressing the Trigger just once.

5. Press the trigger for the cutting working. (Adjust cutting capacity and the speed of the cuttingblade by controlling the force exerted by your finger on the trigger. a period of operation and practice in actual use and work will allow you to better master this mode)

NOTE!

- ▷ Before working, pull the trigger to let the blade Idling several times, and listen to whether there is noise or excessive speed or slowness. After it is normal, start working again.
- ▷ If the trigger is not touched for 3 minutes after activating the pruning shears, it will automatically switch to sleep mode and will not respond to accidental trigger presses. To activate the pruning shears again, quickly pull the trigger 2-3 times.

- If the trigger is not touched for 10 minutes after activating the tool, it will automatically cut off the power supply and will not respond to accidental trigger presses. To continue using the tool, you need to reconnect the power supply and activate cutting mode.

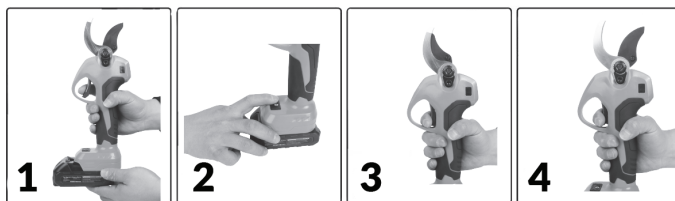

FINGER CUT PROTECTION MODE

Press the trigger to start cutting (in the progressive cutting mode). As soon as the blade touches your other hand (bare hand), the pruning shears blade will open immediately, preventing accidents!

ATTENTION!

- The finger protection mode has a memory function. It is turned OFF by default. If you need to turn ON the finger protection mode, you need to the pruning shears to progressive mode each time.
- In rainy or dewy weather, the finger cut protection function does not work due to line protection.
- The circuit cannot be formed when operating the tool with gloves. The finger cut protection function does not work.



ADJUSTING CUTTING CAPACITY

NOTE!

To use this function the tool needs to be in a progressive cutting mode.

1. press and hold the trigger for two seconds until hearing a "double beep" sound, then release the trigger.
2. Slowly press the trigger, wait for the blade to move to the opening position you want, keep the trigger in that position without pushing any further.
3. Release the trigger after hearing a "double beep" sound to save the blade position (opening size) you want.
4. Press the trigger once to perform normal cutting operations. (At this time, the maximum opening of the blade is the size you want to set, and it can continue to operate in progressive mode)
5. Long press and hold the trigger for 3 seconds before releasing, it can be restored to the maximum opening.



ADJUSTING CLOSED CUTTING DEPTH


To adjust the depth of cut after grinding or replacing a blade, follow the steps below to adjust the depth of cut.

NOTE!

to use this function the tool needs to be in a fast cutting mode.

1. After activating the fast cutting mode of the tool, quickly and continuously press the power switch 5 times, and release your hand after hearing the buzzer "beep" sound.

2. After hearing the buzzer sound, press the trigger once within 5 seconds, and the blade automatically closes to the initial position of the cutting depth adjustment.
3. Press the trigger repeatedly to adjust the cutting depth so that the overlapping part of the tips of the upper and lower blades is 1-3mm
4. After adjusting to the required cutting depth, release the trigger and wait for 5 seconds. The buzzer will emit 2 "beep" sounds, and the adjustment is completed at this time.

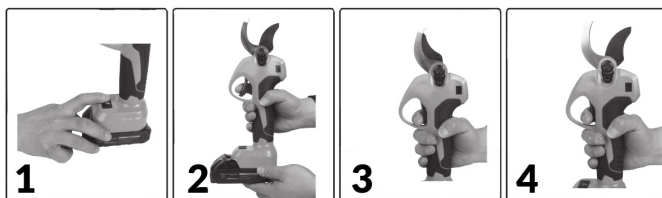

TURNING OFF THE PRUNING SHEARS

- ▶ If the tool is in standby mode, just press and hold the power button for about 2 seconds.
- ▶ If the tool is in cutting mode, press trigger to hold the blades closed and hold power button for approximately 2 seconds. The pruning shears will switch off immediately after a characteristic sound and the battery level indicator will go out.
- ▶ you can also power off the tool by press and hold the trigger for 7 seconds.

NOTE!

Do not turn off the pruning shears in cutting mode. Because the blade's normal position is open during cutting operations, it will remain open if the tool turns off at this time. Open blades pose a risk of serious injury and blade damage or destruction.

ACTIVATING THE FAST-CUTTING MODE

1. Push the battery into the Pruning Shears and lock it tightly.
2. After installing the battery, press the power button for 1 second, after hearing a 'beep' sound, it means that the tool is in standby mode.

NOTE!

At this time the battery indicator light will light up.

3. Quickly pull the trigger 2-3 times, you can start the machine. (This function is designed for safety protection to prevent accidents from touching the trigger when not in use).


 NOTE!

It cannot be turned on if pressing the switch just once.

4. Press the trigger #4 for the cutting working.

 NOTE!

At this time, the progressive cutting mode and finger protection mode are both turned off.

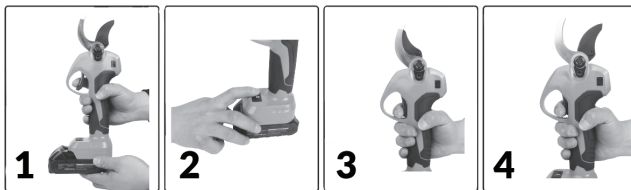


CHANGING THE PRUNING SHEARS BLADE OPENING SIZE

 NOTE!

the tool must be in the fast-cutting mode to enable the 2-level adjustment function of the blade opening size.


- ▷ Long press the trigger about 3 seconds and when you hear the sound of beeping, then release the trigger immediately, and blade opening size will be automatically converted.
- ▷ To undo, do the same step.

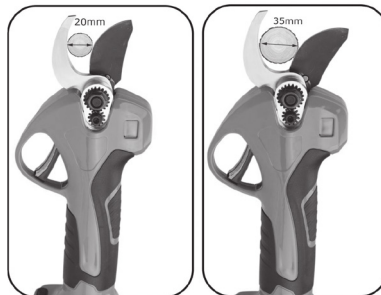

MAINTENANCE**DISASSEMBLING THE BLADE****⚠ WARNING!**

Turn off the tool and remove the battery pack before disassembling the blade.

1. Use the screwdriver to loosen the two top screws on the top cover counterclockwise.
2. Remove the top cover and the two screws on the top.
3. Flip the pruning shears and use the provided hex wrench to loosen the hexagon socket screws counterclockwise.
4. Remove the hexagon socket screws and lock washers.
5. Use the provided external hex key to loosen the lock nut counterclockwise.
6. Remove the lock nut.
7. Flip the scissors.
8. Remove the axis pin.
9. Remove the swing gear and moving blade and fixing blade.

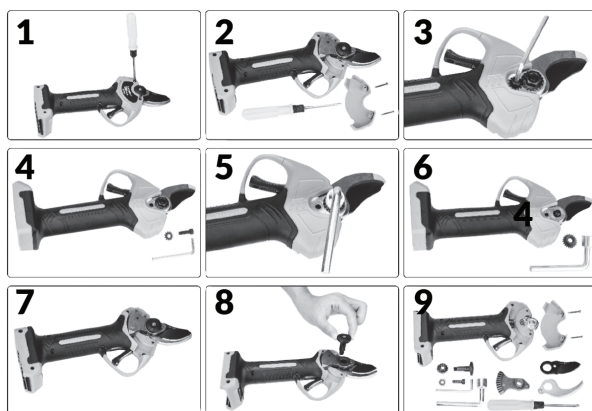

REPLACE A NEW BLADE

After disassembling the blade, replace it with the new one and follow the 9 steps of the disassembling section in reverse.

LUBRICATING THE BLADE

WARNING!

Do not use chemical reagents

1. oil the fixed blade
2. oil the swing gear
3. Insert the oil tube into the ball on the shaft pin and apply the oil directly on the pin.



ADJUSTING THE BLADE TIGHTNESS

ATTENTION!

Turn off the tool and remove the battery pack before operation.

Check the tightness of the blade before every use. The blade with proper tightness will not swing from side to side. If the tension of the blade is normal, the pruning shears will save effort when cutting.

1. Loosen the screw counterclockwise with a hexagonal wrench.
2. Remove the screw and lock washers.
3. Adjust the lock nut until it reaches a proper state, not too tight.


The most proper tightness: first make the nut reach the tightest degree. Then twist the nut back to the position of 1/7 turn. At this time, you can find the blade slightly shake when you try to shake the blade by hand.

Do not completely tight the nut. If the pin nut is too tight, which will cause the blade to be too tight, which will cause the body to heat up, increase the power consumption, lose the shear strength of the scissors, or damage the internal swing gear.

4 Tighten the screws clockwise, and check the closing of the blade according to the normal procedure.

NOTE!

When the blade is closed, the blade should not swing sideways. Lateral swing is an abnormal state. Lateral swing will create a gap between the two blades, which will cause the gear teeth to not mesh correctly and damage the mechanical structure.

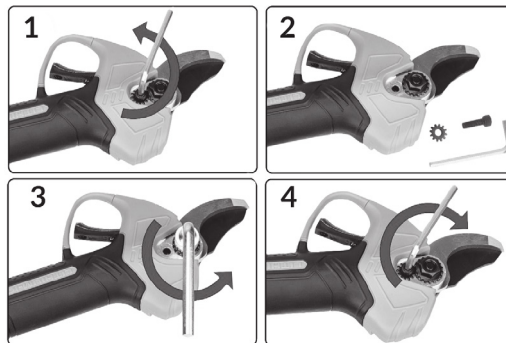

DAILY MAINTENANCE

1. In daily use, pruning shears need regular maintenance to ensure the service life of the tool.
2. It is necessary to lubricate the blade regularly (see the lubricating section).
3. The screws and nuts will be loose after several uses, you need to tighten the nuts and small screws that fix the blade, (For details, see adjusting the blade tightness section).
4. The accessories of the scissors may wear out over time; you can contact kenxax service to buy spare accessories.

5. Avoid working in rainy conditions. If there is dew or rain during pruning, please remember to dry the battery and the tool in time, especially the place where the tool is connected to the battery to avoid getting wet.
6. Avoid working in ultra-low temperature environment. If you need to use it in low temperature weather, please install the battery in advance at indoors environment, and check whether the tool can be turned on normally. Please avoid install the battery when the low temperature outdoor environment, which will affect the battery life and the use of the tool.

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and wellbeing. Disposal of discarded material shall be in accordance with local environmental regulations.



WARNING!

Do not dispose of batteries and chargers in general household garbage.

TOOL STORAGE AND MAINTENANCE

- ▷ Keep the device in dry and clean environment
- ▷ Always be sure that the tool is switched off and unplugged from power source before attempting to perform inspection or any maintenance.
- ▷ Never use gasoline, benzene, thinner, alcohol or the like. Discoloration, deformation or cracks may result.

حفاظت از محیط زیست

ضایعات محصولات الکتریکی را نباید با زباله‌های خانگی دور ریخت. لطفاً به مراکزی که امکانات بازیافت وجود دارد تحویل داده شود. وسایل برقی را به عنوان زباله‌های شهری دور نریزید و مناطق مخصوص زباله‌های بازیافتی انبارش نمایید. برای کسب اطلاعات در مورد سیستم‌های جمع‌آوری زباله‌های بازیافتی با شهرداری منطقه خود تماس بگیرید. اگر وسایل برقی در محل‌های دفن زباله‌های معمولی دور ریخته شوند، امکان این وجود دارد که مواد خطرناک و سمی به سفره‌های زیرزمینی آب نشت کرده و وارد زنجیره غذایی شوند. که این امر موجب آسیب رسیدن به سلامت می‌شود. دفع ضایعات محصولات الکتریکی باید مطابق با مقررات محیط زیست باشد.

انبارش ابزار

همیشه قبل از انجام هرگونه بازرسی یا تعمیرات دستگاه را از منبع تغذیه جدا کرد و جهت انبارش در مکان خشک و بدون رطوبت نگهداری نمایید.

هرگز از گازوئیل، بنزن، تینر، الکل یا هرگونه مواد مشابه که خاصیت خورندگی دارند استفاده نکنید. چرا که موجب تغییر رنگ، تغییر شکل یا ترک خوردن دستگاه می‌شود.

کنزاکس سرویس


ضمن تشکر از حسن انتخاب شما

به همراه ابزار شما کارت ضمانت نامه **۱۲ ماهه** کنزاکس سرویس ارائه می‌گردد.

لطفا توجه داشته باشید که هیچ کدام از اجزای داخلی ابزار، احتیاج به تعمیر و یا بهبود اضافه جهت بهینه نمودن عملکرد ندارند. بنابراین از هرگونه اعمال دستکاری یا مراجعه به مراکز تعمیرات غیر مجاز اجتناب نمایید و در صورت بروز هرگونه مشکل سریعاً با مراکز سرویس و پشتیبانی کنزاکس به شماره ۰۲۱-۶۲۸۱۹ و یا به وب سایت www.kenzax.com تماس حاصل نمایید.

توجه!

وقتی تیغه ها بسته است، نباید به طرفین تکان بخورند. چرخش جانبی یک حالت غیر طبیعی است. چرخش جانبی منجر به ایجاد شکاف بین دو تیغه می شود که باعث می شود دندانه های چرخ دنده به درستی با هم درگیر نشده و به ساختار مکانیکی آسیب برسد.

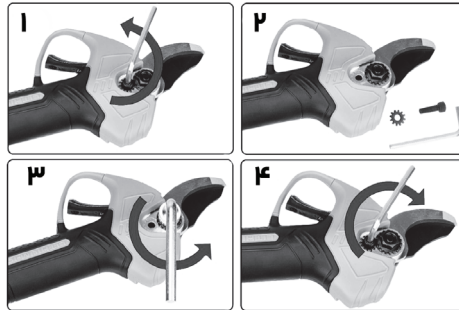

تعمیر و نگهداری روزانه

۱. در استفاده روزانه، قیچی باغبانی نیاز به تعمیر و نگهداری منظم دارد.
۲. لازم است تیغه را به طور مرتب روغن کاری کنید (به بخش روغن کاری مراجعه کنید).
۳. پیچ و مهره ها پس از چندین بار استفاده شل می شوند، باید مهره ها و پیچ های کوچکی که تیغه را ثابت نگه می دارند، سفت کنید (برای جزئیات، به بخش تنظیم سفتی تیغه مراجعه کنید).
۴. لوازم یدکی قیچی ممکن است به مرور زمان فرسوده شوند. برای خرید لوازم یدکی می توانید با خدمات پس از فروش شرکت گنزاکس تماس حاصل فرمایید.
۵. از کار در شرایط بارانی خودداری کنید. در صورت وجود شبنم یا باران در حین هرس، لطفاً به خاطر داشته باشید که باتری و قیچی را به موقع خشک کنید، مخصوصاً محل اتصال باتری به قیچی.
۶. از کار در محیط های با دمای بسیار پایین خودداری کنید. اگر نیاز به استفاده از قیچی در دمای پایین دارید، لطفاً باتری را از قبل در یک محیط گرم درون قیچی قرار دهید و بررسی کنید که قیچی به طور معمول روشن شود. لطفاً از نصب باتری در دمای پایین محیط بیرون خودداری کنید، چرا که بر عمر باتری و استفاده از قیچی تأثیر می گذارد.

۱. تیغه ثابت را روغن کاری کنید.
۲. چرخ دنده انتقال نیرو را روغن کاری کنید.
۳. سر تیوب روغن را داخل پین شفت قرار دهید و روغن را مستقیماً روی پین بریزید.




تنظیم سفتی تیغه



توجه!

- قبل از شروع کار ابزار را خاموش کنید و باتری را بردارید.
- قبل از هر بار استفاده از قیچی، سفتی تیغه را بررسی کنید. تیغه با سفتی مناسب از یک طرف به طرف دیگر تاب نمی خورد. اگر سفتی تیغه مناسب باشد، قیچی به فشار کمتری برای برش نیاز دارد.
۱. پیچ را با استفاده از آچار آلن باز کنید.
 ۲. واشر و پیچ را بردارید.
 ۳. مهره قفل را به اندازه ای بچرخانید تا سفتی به حالت مناسب برسد.
- مناسب ترین حالت سفتی: ابتدا مهره را به سفت ترین حالت ممکن برسانید. سپس آن را به اندازه یک هفتاد و شش شل کنید. در این حالت، هنگامی که تیغه را با دست تکان دهید، متوجه می شوید که تیغه کمی تکان می خورد.
- مهره را کاملاً سفت نکنید. اگر مهره خیلی سفت باشد، باعث سفت شدن بیش از حد تیغه می شود که منجر به گرم شدن بدنه، افزایش مصرف باتری، از دست دادن استحکام برشی قیچی و آسیب به چرخ دنده انتقال قدرت می شود.
۴. پیچ ها را در جهت عقربه های ساعت ببندید و بسته شدن تیغه را بررسی کنید.

۳. قیچی باغبانی را برگردانید و از آچار آلن ارائه شده برای باز کردن پیچ‌های آلن خور استفاده کنید.
۴. پیچ‌های آلن و واشرها را بردارید.
۵. از آچار ارائه شده برای باز کردن مهره قفل استفاده کنید.
۶. مهره قفل را بردارید.
۷. قیچی را برگردانید.
۸. پین محور را بردارید.
۹. چرخ دنده انتقال نیرو و تیغه متحرک و تیغه ثابت را بردارید.

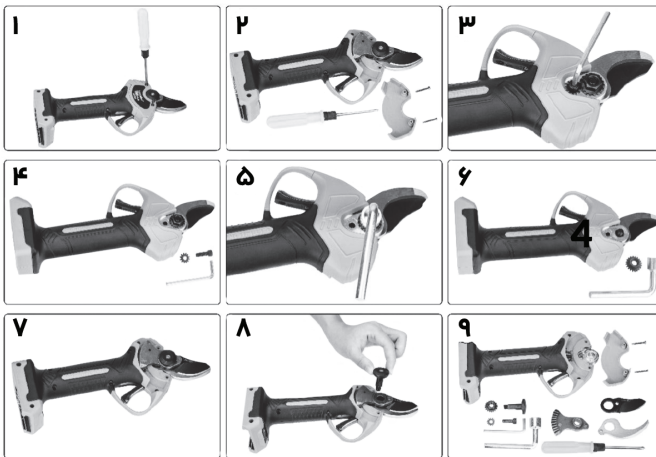

تعویض تیغه

پس از باز کردن تیغه، آن را با تیغه جدید جایگزین کرده و ۹ مرحله بالا را به صورت معکوس دنبال کنید.

روغن کاری تیغه



از محلول های شیمیایی استفاده نکنید.

تغییر اندازه دهانه قیچی باغبانی




توجه!

ابزار باید در حالت برش سریع باشد تا بتوان اندازه دهانه قیچی را فعال کرد.

◀ ماشه را به مدت ۳ ثانیه فشار دهید و با شنیدن صدای بوق، بلافاصله ماشه را رها کنید تا اندازه باز شدن تیغه به طور خودکار تغییر می کند (اندازه ۲۰ میلی متر).

◀ برای برگشتن به اندازه دهانه عادی (۳۵ میلی متر)، همین مرحله را دوباره انجام دهید.

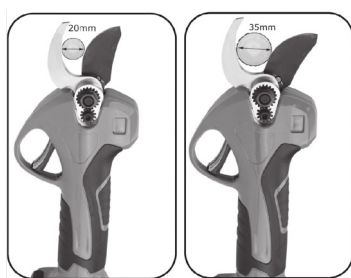

ریست کردن شمارنده برش

برای ریست کردن شمارنده تعداد برش که روی نمایشگر قیچی نشان داده می شود دکمه روشن خاموش را ۵ بار پشت سر هم فشار دهید تا شمارنده به صفر برگردد.

تعمیر و نگهداری

باز کردن تیغه



توجه!

قبل از باز کردن تیغه، قیچی را خاموش کنید و باتری را دریاورید.

۱. دو پیچ بالای درپوش بالایی را باز کنید.

۲. پوشش بالایی و دو پیچ روی آن را بردارید.

⚠️ نکته!

قیچی را در حالت برش خاموش نکنید. از آنجایی که موقعیت تیغه در حالت برش باز است، اگر ابزار در این زمان خاموش شود، تیغه‌ها باز می‌مانند. تیغه‌های باز می‌توانند باعث آسیب جدی به اشخاص و آسیب به تیغه شوند.

فعال کردن حالت برش سریع

۱. باتری را داخل قیچی قرار دهید.

۲. پس از نصب باتری، دکمه روشن خاموش را به مدت ۱ ثانیه فشار دهید، پس از شنیدن صدای "بوق"، ابزار در حالت استندبای است.

⚠️ توجه!

در این زمان چراغ نشانگر روی قیچی روشن می‌شود.

۳. به سرعت ماشه را ۲-۳ بار فشار دهید، حالا می‌توانید قیچی را راه اندازی کنید. (این یک ویژگی ایمنی برای جلوگیری از برش ناخواسته ناشی از لمس تصادفی ماشه در هنگام عدم استفاده است).


⚠️ توجه!

اگر ماشه را فقط یک بار فشار دهید قیچی روشن نمی‌شود.

۴. حالا برای برش ماشه را فشار دهید.

⚠️ توجه!

در حالت برش سریع، حالت برش حساس به فشار و حالت محافظت از انگشت هر دو خاموش هستند.

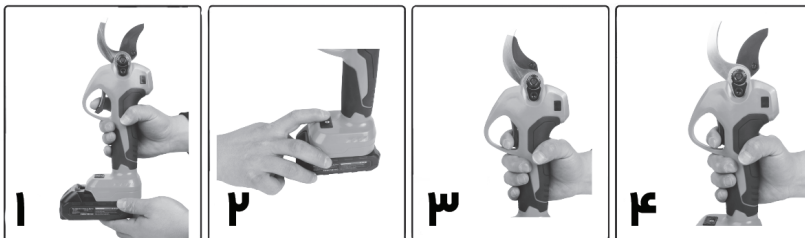

تنظیم عمق برش (همپوشانی تیغه ها در حالت بسته)

برای تنظیم عمق برش پس از تیز کردن یا تعویض تیغه ها، مراحل زیر را برای تنظیم عمق برش دنبال کنید.



توجه!


برای استفاده از این عملکرد، ابزار باید در حالت برش سریع باشد.

۱. پس از فعال کردن حالت برش سریع ابزار، کلید روشن خاموش را به سرعت و به طور مداوم ۵ بار فشار دهید و پس از شنیدن صدای بوق، دست خود را رها کنید.

۲. پس از شنیدن صدای بوق، ماشه را یک بار در عرض ۵ ثانیه فشار دهید و تیغه به طور خودکار در موقعیت اولیه تنظیم عمق برش بسته می شود.

۳. ماشه را به طور مکرر فشار دهید تا عمق برش را تنظیم کنید به این صورت که همپوشانی نوک تیغه های قیچی ۱ الی ۳ میلی متر باشد.

۴. پس از تنظیم به عمق برش لازم، ماشه را رها کرده و ۵ ثانیه صبر کنید. سپس دو بار صدای "بوق" از قیچی شنیده می شود و در این زمان تنظیم کامل می شود.

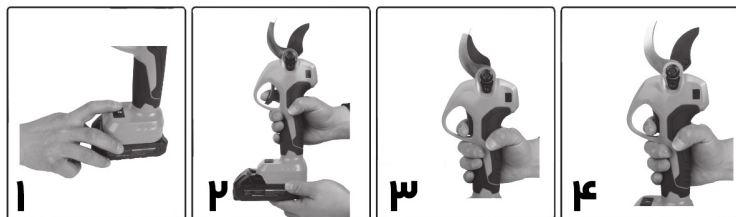


خاموش کردن قیچی باغبانی

◀ اگر ابزار در حالت استندبای است، فقط دکمه روشن خاموش را برای حدود ۲ ثانیه فشار دهید و نگه دارید.

◀ اگر ابزار در حالت برش است، ماشه را فشار دهید تا تیغه ها بسته نگه داشته شوند و دکمه روشن خاموش را تقریباً ۲ ثانیه نگه دارید. قیچی باغبانی بلافاصله پس از شنیده شدن صدای مشخص خاموش می شود و نشانگر باتری خاموش می شود.

◀ همچنین می توانید با فشار دادن و نگه داشتن ماشه برای مدت ۷ ثانیه در هر حالت برشی که باشد قیچی را خاموش کنید.

◀ هنگام کار با قیچی با دستکش، حالت محافظت از برش انگشت کار نمی‌کند.

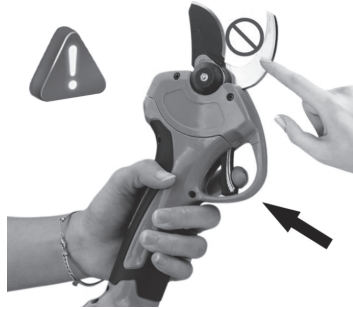

تنظیم ظرفیت برشی



توجه!

برای استفاده از این عملکرد، ابزار باید در حالت برش حساس به فشار باشد.

۱. ابتدا ماشه را به مدت دو ثانیه فشار دهید تا صدای دوبار بوق زدن شنیده شود. سپس ماشه را رها کنید.

۲. به آرامی ماشه را فشار دهید، منتظر بمانید تا تیغه به اندازه مد نظر شما باز شود، ماشه را بدون فشار بیشتر در آن موقعیت نگه دارید.

۳. پس از شنیدن صدای "دو بوق" ماشه را رها کنید تا موقعیت تیغه (اندازه باز شدن) مورد نظر شما ذخیره شود.

۴. ماشه را یک بار فشار دهید تا عملیات برش معمولی انجام شود.

◀ (در این زمان حداکثر باز شدن تیغه اندازه‌ای است که می‌خواهید تنظیم کنید و می‌تواند در حالت حساس به فشار به کار خود ادامه دهد)


۵. برای برگرداندن ظرفیت برشی به میزان حداکثر خود، ماشه را به مدت ۳ ثانیه فشار دهید و نگه دارید.





توجه!

- ◀ قبل از شروع به هرس، ماشه را چند بار فشار دهید تا تیغه در حالت بدون بار باز و بسته شود و دقت کنید تیغه ها صدا یا سرعت غیرعادی نداشته باشند.
- ◀ اگر تا ۳ دقیقه پس از فعال کردن قیچی ماشه لمس نشود، قیچی به طور خودکار به حالت خواب می رود و به فشارهای ماشه پاسخ نمی دهد. برای فعال کردن مجدد قیچی، ماشه را به سرعت ۲ تا ۳ بار فشار دهید.
- ◀ اگر تا ۱۰ دقیقه پس از فعال کردن قیچی ماشه لمس نشود، قیچی به طور خودکار جریان برق را قطع می کند و به فشارهای تصادفی ماشه پاسخ نمی دهد. برای ادامه استفاده از ابزار، دکمه روشن خاموش را دوباره فشار داده و حالت برش را فعال کنید.

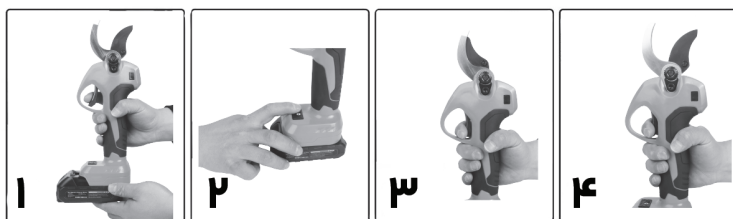

حالت محافظت از انگشت

برای برش ماشه را فشار دهید (در حالت حساس به فشار). به محض تماس تیغه با دست دیگر شما (دست برهنه)، تیغه قیچی بلافاصله باز می شود و تا زمانی که دست (انگشت) روی تیغه است عمل نمی کند.



توجه!

- ◀ حالت محافظت از انگشت به طور پیش فرض خاموش است. اگر نیاز به روشن کردن حالت محافظت از انگشت دارید، باید قبل از هر بار روشن کردن دستگاه، آن را در حالت حساس به فشار قرار دهید. در هوای بارانی یا شب، حالت محافظت از انگشت کار نمی کند.

دستورالعمل استفاده



دسته کمکی تلسکوپي هرس مدل ۸۷۳۳ قابل استفاده بر روی این قیچی شارژی باغبانی است.



از این قیچی برای برش شاخه هایی با ضخامت بیش از ظرفیت برشی قیچی، هر جسمی به جز چوب مانند فلز، سنگ و غیره استفاده نکنید. قیچی را با گیره مهار نکنید. اگر تیغه ها فرسوده یا آسیب دیده اند، آن ها را تعویض کنید.



همیشه قبل از انجام هر گونه تنظیمات و بررسی ابزار، مطمئن شوید که ابزار خاموش است و باتری خارج شده است.

فعال کردن عملکرد برش «حالت حساس به فشار»

۱. باتری را داخل قیچی قرار دهید.

۲. پس از نصب باتری، ماشه را فشار داده و نگه دارید. سپس دکمه روشن خاموش را فشار دهید و ا ثانیه نگه دارید. پس از شنیدن صدای بوق دست خود را رها کنید.



در این زمان چراغ نشانگر باتری روشن می شود.

۳. به سرعت ماشه را ۲ یا ۳ بار فشار دهید تا ابزار آماده استفاده شود. (این یک ویژگی ایمنی برای جلوگیری از برش ناخواسته ناشی از لمس تصادفی ماشه در هنگام عدم استفاده است).



اگر فقط یک بار ماشه را فشار دهید، قیچی روشن نمی شود.

۴. حالا ماشه را فشار دهید تا برش انجام شود. (ظرفیت برش و سرعت تیغه برش را با کنترل نیرویی که انگشت خود به ماشه وارد می کند، تنظیم کنید. چند بار تمرین در استفاده به شما امکان تسلط بهتر بر «حالت حساس به فشار» را می دهد)

دستورالعمل‌های ایمنی مربوط به قیچی شارژی

۱. هیچ گاه از ابزار در شرایط بد آب‌وهوایی به‌ویژه زمانی که احتمال وقوع رعد و برق وجود دارد، استفاده نکنید. این کار خطر برخورد با رعد و برق را افزایش می‌دهد.
۲. تمام سیم‌ها و کابل‌های برق را از منطقه هرس دور نگه دارید. سیم‌ها و کابل‌های پنهان ممکن است به‌طور تصادفی توسط تیغه بریده شوند.
۳. همواره ابزار را از قسمت‌های عایق شده نگه دارید، زیرا ممکن است تیغه با سیم‌های برق پنهان برخورد کند و موجب شوک الکتریکی شود.
۴. تمام قسمت‌های بدن را از تیغه دور نگه دارید.
۵. هنگام سرویس ابزار، مطمئن شوید که دستگاه خاموش است و باتری آن جدا شده است. راه‌اندازی ابزار در این شرایط می‌تواند منجر به بروز صدمات جدی شود.
۶. همواره از دسته دستگاه جهت حمل ایمن آن استفاده نمایید. حمل صحیح و ایمن دستگاه، خطر راه‌اندازی ناخواسته و بروز آسیب جسمانی را کاهش می‌دهد.
۷. هنگام استفاده از دستگاه، آن را محکم نگه دارید.



هشدار!

- ◀ دستگاه را از دسته‌های عایق‌شده نگه دارید.
- ◀ همیشه از ثابت و محکم بودن جا پای خود مطمئن شوید و هنگام کار در ارتفاع، اطمینان حاصل کنید که کسی در زیر محل کار شما قرار ندارد.
- ◀ دستگاه را محکم نگه دارید.



هشدار!

- ◀ از برش شاخه‌های بیشتر از قطر برشی دستگاه جدا خودداری کنید.
- ◀ اقلام سخت مانند فلزات، سنگ یا هر گونه مواد غیر چوبی و گیاهی را برش ندهید.

استفاده از باتری

- ◀ تنها از شارژرهای مخصوص این دستگاه استفاده نمائید. شارژر مناسب یک دستگاه ممکن است برای استفاده از باتری دستگاه های دیگر خطرآفرین باشد.
- ◀ تنها از باتری های مخصوص این دستگاه استفاده نمائید. استفاده از باتری دستگاه های دیگر ممکن است منجر به آسیب دیدن دستگاه و باتری گردد.
- ◀ هرگز باتری را در مجاورت فلزاتی مانند سکه، کلید، میخ و... قرار ندهید که منجر به ایجاد اتصال کوتاه و آتش سوزی خواهد شد.
- ◀ در صورت خراب شدن باتری و تراوش مایع داخل آن، هرگز این مایع را لمس نکنید و در صورتیکه سهوا با مایع تماس پیدا کردید، فوراً محل مربوطه را با آب بشوئید. همچنین در صورت تماس مایع با چشم هایتان، فوراً چشم ها را با آب شسته و به پزشک مراجعه نمائید. مایع داخل باتری ممکن است موجب تورم یا سوختگی گردد.

موارد زیر ممکن است موجب ایجاد اتصال کوتاه باتری شود.

- ◀ هرگز قطب های باتری را در تماس با مواد رسانا قرار ندهید.
- ◀ هرگز باتری را در مجاورت فلزاتی مانند میخ، سکه و ... قرار ندهید.
- ◀ هرگز باتری را در معرض باد و باران قرار ندهید. اتصال کوتاه باتری ممکن است موجب آتش سوزی و یا خراب شدن باتری یا دستگاه گردد.
- ◀ هرگز دستگاه و یا باتری را در محیطی با دمای بالای ۵۰ درجه سانتی گراد قرار ندهید.
- ◀ هرگز باتری دستگاه را حتی در شرایطی که دیگر قابل استفاده نیست، داخل آتش نیندازید. زیرا ممکن است موجب آتش سوزی گردد.
- ◀ مراقب باشید که باتری بر روی زمین نیوفتد و یا باز نشود.
- ◀ هرگز از باتری معیوب استفاده ننمائید.

- ◀ قبل از روشن کردن دستگاه از عدم اتصال هرگونه ابزار تنظیم مانند آچار به قطعات دوار اطمینان حاصل نمائید چرا که می‌تواند منجر به صدمات جبران ناپذیری گردد.
- ◀ حالت صحیح قرارگیری پاها و حفظ تعادل بدن حین کار از خارج شدن کنترل دستگاه جلوگیری می‌نماید.
- ◀ همواره در حین کار از لباس کار مناسب استفاده نمائید. استفاده از لباس‌های غیر استاندارد و گشاد، جواهرات و داشتن موهای بلند امکان درگیر شدن آن‌ها را با قسمت‌های متحرک ابزارآلات برقی افزایش داده و ممکن است خطر آفرین شود.
- ◀ در صورت استفاده از غبار جمع کن از اتصال صحیح و مناسب آن به دستگاه اطمینان حاصل نمائید. استفاده از چنین لوازم جانبی، مضرات مربوط به عبارات را کاهش خواهد داد.

استفاده صحیح از دستگاه

- ◀ از اعمال بار اضافه به دستگاه جدا خودداری نمائید. انتخاب درست ابزار برقی مناسب کارتان، باعث کاهش هزینه و زمان و حسن انجام کار برای شما خواهد شد. بنابراین همیشه برای انجام عملکرد مورد نظرتان از ابزار برقی مخصوص به آن کار استفاده نمائید.
- ◀ در صورت معیوب بودن کلید دستگاه، هرگز از آن استفاده نکنید و به نزدیک ترین مراکز خدمات پس از فروش برای تعمیر آن مراجعه نمائید. هر دستگاهی که با کلید قابل کنترل نباشد، خطر آفرین است و باید تعمیر شود.
- ◀ قبل از هرگونه تنظیم یا تعویض لوازم جانبی دستگاه، همچنین زمانی که از دستگاه استفاده نمی‌کنید دو شاخه را از منبع برق جدا نمائید. این کار از شروع به کار ناگهانی دستگاه جلوگیری خواهد کرد.
- ◀ ابزارآلات برقی را از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. ابزارآلات برقی در دسترس افراد آموزش ندیده، خطرآفرین خواهند بود.
- ◀ از ابزارآلات برقی به خوبی نگهداری نمائید. هرگونه تنظیمات، گیرکردن قطعات دوار و یا هر وضعیت دیگری که ممکن است بر روی عملکرد دستگاه تاثیر بگذارد را بررسی نمائید و در صورت آسیب دیدگی قبل از استفاده، آن مورد را رفع نمائید. بیشتر حوادث از عدم نگهداری صحیح ابزارآلات برقی رخ می‌دهد.
- ◀ همواره از ابزار و لوازم جانبی مناسب این دستگاه استفاده نمائید. همچنین از این دستگاه تنها برای کارهایی که برای آن تهیه و طراحی شده است، استفاده نمائید.

ایمینی برقی

- ◀ دو شاخه دستگاه باید متناسب با پریز باشد. با این کار احتمال برق گرفتگی به شدت کاهش خواهد یافت.
- ◀ در هنگام استفاده از دستگاه به محل عبور لوله، کابل برق مربوط به رادیاتور، گرمخانه و یا یخچال و... توجه نمائید. زیرا تماس بدن با آن‌ها احتمال خطر برق گرفتگی را افزایش می‌دهد.
- ◀ ابزارآلات برقی را در معرض باران و یا رطوبت قرار ندهید. ورود آب به ابزارآلات برقی ممکن است موجب برق گرفتگی شود.
- ◀ هرگز از کابل دستگاه برای حمل آن استفاده ننمائید و یا برای قطع اتصال دستگاه از پریز، کابل را نکشید. همچنین کابل را از معرض حرارت، سطوح نوک تیز، قطعات دوار و روغن دور نگهدارید. کابل‌های آسیب دیده مستعد بروز برق گرفتگی هستند.
- ◀ هنگام استفاده از دستگاه در محیط‌های باز، از سیم رابط مناسب استفاده نمائید تا احتمال برق گرفتگی کاهش یابد.
- ◀ هنگام استفاده از دستگاه در محیط‌های مرطوب حتماً از کلید حفاظت جان (RCD) برای اتصال دستگاه به منبع تغذیه برق شهری استفاده نمائید. کلید حفاظت جان، مانند دستکش و کفش ایمینی به افزایش ایمینی فردی کمک می‌کند.
- ◀ هرگز ابزارهای دارای جریان متناوب را به منبع تغذیه برق با جریان غیرمتناوب (مستقیم) وصل ننمائید. این کار منجر به آسیب دیدگی دستگاه و آسیب‌های فردی خواهد شد.

ایمینی فردی

- ◀ زمانی که خسته‌اید یا تحت تاثیر دارو قرار دارید و در مجموع زمانی که در سلامتی کامل به سر نمی‌برید، هرگز از ابزارآلات برقی استفاده ننمائید. چرا که لحظه‌ای درنگ و بی دقتی منجر به صدمات جبران ناپذیری خواهد شد.
- ◀ همواره از لوازم ایمینی مانند عینک ایمینی، ماسک هوا، کفش و کلاه ایمینی و محافظ گوش استفاده نمائید تا صدمات فردی کاهش یابد.
- ◀ برای اجتناب از شروع به کار ناگهانی دستگاه، قبل از اتصال آن به منبع برق از قرار داشتن کلید در وضعیت خاموش اطمینان حاصل نمائید. همچنین زمانی که آن را جا به جا می‌کنید، دو شاخه را از پریز جدا کرده و انگشتان را بر روی کلید قرار ندهید.

**توجه!**

برای دستیابی به بهترین عملکرد ، لطفاً دفترچه راهنما را به دقت مطالعه کرده و آن را برای مراجعات بعدی به دقت نگهداری کنید.



این علامت به معنی خطر برق گرفتگی و وجود ولتاژ خطرناک در دستگاه را بیان می‌کند.



این علامت به این معنی می باشد که در دفترچه راهنمای دستگاه، دستورالعمل های مهمی در مورد عملکرد و جابجایی وجود دارد.

دستورالعمل های کلی ابزارآلات برقی

**هشدار!**

لطفا کلیه مواردی که در ذیل قید شده است را با دقت مطالعه فرمائید و به کار برید، عدم پیروی از دستورالعمل های ذیل ممکن است منجر به ایجاد صدمات جبران ناپذیر فیزیکی یا ایجاد اختلال در کارکرد ابزارآلات برقی شوند.


این دفترچه راهنما را بعد از مطالعه نگهداری نمائید.

منظور از کلمه " ابزار برقی " در هشدارهای زیر کلیه ابزارهای برقی متصل به کابل یا ابزارهای شارژی دارای باتری می باشد.

ایمنی محل کار

- ◀ محل کار را تمیز و روشن نگهدارید. محیط های در هم ریخته و تاریک حادثه آفرین خواهند بود.
- ◀ هرگز از ابزارآلات برقی در مجاورت مواد اشتعال زا استفاده ننمائید. ابزار آلات برقی جرقه ایجاد می کنند که ممکن است موجب آتش سوزی گردد.
- ◀ ابزارآلات برقی را هنگام استفاده از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. زیرا ممکن است باعث از دست دادن تمرکز و کنترل دستگاه شود.

نام قطعات دستگاه

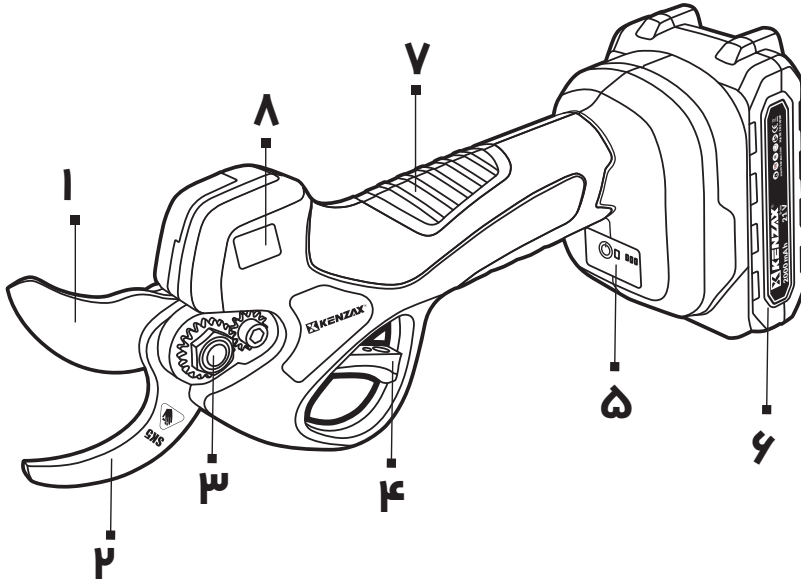

نام قطعات دستگاه

- | | |
|---------------|-----------------------|
| ۱. تیغه متحرک | ۵. دکمه روشن و خاموش |
| ۲. تیغه ثابت | ۶. باتری |
| ۳. مهره | ۷. دسته ضد لغزش |
| ۴. ماشه | ۸. صفحه نمایش دیجیتال |

مشخصات فنی

مدل	8732
حداکثر سرعت	۲۶۵۰۰ دور در دقیقه
توان	۳۰۰ وات
ظرفیت برش	۳/۵ الی ۳/۵ سانتی متر
جنس تیغه	SK5
ضخامت تیغه	۴ میلی متر
ولتاژ باتری	۲۱ ولت
ظرفیت باتری	۲ آمپر ساعت
تکنولوژی باتری	لیتیوم یون
زمان کارکرد باتری	۳ ساعت
تعداد برش بر اساس یک بار شارژ باتری	۲۶۰۰ عدد (۳ سانتی متر)
زمان شارژ باتری	۱/۱ الی ۱/۳ ساعت
نوع موتور	براشلس
وزن ابزار	۱/۵ کیلوگرم
متعلقات	۱ عدد بطری روغن
	۱ عدد سنگ نفت
	۱ عدد آچار آلن
	۱ عدد آچار
	۱ عدد پایه شارژر
	۲ عدد باتری



قیچی باغبانی شارژی ۳۵ میلی متری براشلس PRO



ITEM NO. 8732

دفترچه راهنمای فارسی