



BRUSHLESS CORDLESS CHAIN SAW




ITEM NO. 8736

INSTRUCTION MANUAL

SPECIFICATION

Model	8736
No Load Speed	20000RPM
Guide Bar length	6Inch
Saw chain Pitch	1/4 "
chain speed	7.8 m/s
Max. cutting depth	130mm
Oil Tank Capacity	30ml
Battery Voltage	16.8 V
Battery Capacity	2Ah
Battery Type	Li-ion Battery
Battery Runtime	30-45 mins (single Battery)
Cuts per battery number	10 cm 60Pcs
Battery Charging Time	1HR
Battery PCs	2 Pcs
Motor Type	brushless
Net weight	0.89Kg
Accessories	1 pc screwdriver
	1 pc charger

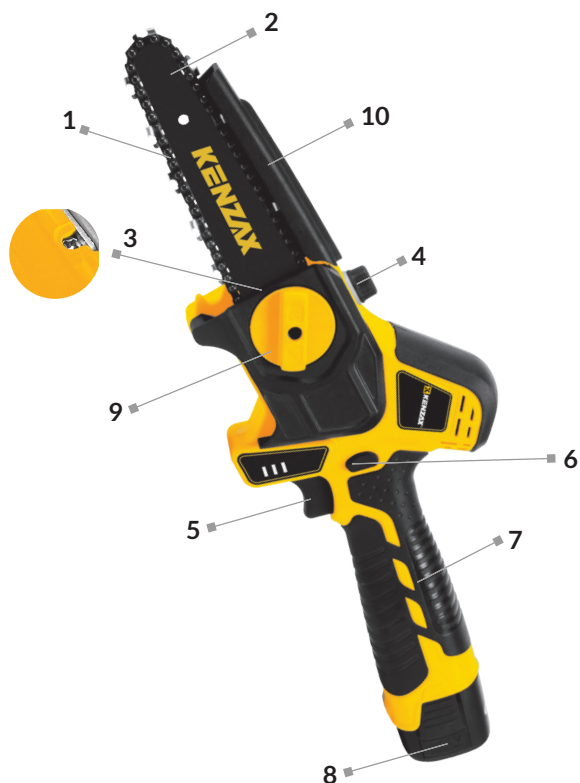PART LIST**Product Elements**

- | | |
|-----------------------------|----------------------|
| 1. Chain | 6. Lock Off Switch |
| 2. Guide Plate | 7. Handle |
| 3. Tension Adjustment Screw | 8. Battery Pack |
| 4. Chain Oil Cap | 9. Locking knob |
| 5. Trigger | 10. Protection Guard |

NOTE!

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

 This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

 This sign means that there are important instructions of operation and handling in the manual that comes with this device.

GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tools or battery operated (cordless) power tool.

WORK AREA SAFETY

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Don't operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRIC SAFETY

- Power tool plugs must match the outlet. Never modify the plug in any way. Don't use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipe, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Don't expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Don't abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increased the risk of electric shock.

PERSONAL SAFETY

- ▶ Stay alert, watch what you are doing and use common sense when operating a power tool. Don't use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- ▶ Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- ▶ Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- ▶ Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- ▶ Don't overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- ▶ Dress properly. Don't wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose cloths, jewelry or long hair can be caught in moving parts.
- ▶ If devices are provided for connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards. Collection can reduce dust-related hazards.

POWER TOOL USE AND CARE

- ▶ Don't force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- ▶ Don't use the power tool if the switch doesn't turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- ▶ Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- ▶ Store idle power tools out of the reach of children and don't allow persons unfamiliar with power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- ▶ Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- ▶ Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- ▶ Use the power tool, accessories and tool bits etc. in accordance with the instruction, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

BATTERY TOOL USE AND CARE

- ▷ Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- ▷ Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- ▷ When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- ▷ Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

SERVICE

- ▷ Have your power tool serviced by qualified repair person using only identical replacement parts. This will ensure that the safety of power tool is maintained.
- ▷ Follow instruction for lubricating and changing accessories.
- ▷ Keep handles dry, clean and free from oil and grease.

V	Volts		CE Conformity
Hz	Hertz		Wear eye protection
W	Watts		Wear ear protection
	Safety alert	n°	No load Speed
	Alternating Current		
min⁻¹	Revolutions or reciprocation per minute		

SAFETY SPECIFICATIONS

PRECAUTIONS BEFORE OPERATION

1. The use of any battery pack or charger that is not indicated or approved may cause fire or explosion, which can lead to serious or fatal injury and property damage.
2. The use of the chain saw, battery pack or charger beyond their design specifications may cause serious or fatal injury and property damage.

OPERATOR REQUIREMENTS

WARNING!

The user shall not use or access the chain saw, battery pack or charger before reading and understanding the manual. Otherwise, it may cause serious injury or death to the user or other. Read and understand the instruction manual, and keep it for future reference.

ENSURE THAT THE USER FULLY MEET THE FOLLOWING REQUIREMENTS:

1. When operating the chain saw or using the battery pack and charger, the user must be normal physically, mentally and psychologically, and be suitable for such operations. Otherwise, the user shall use it under the guidance of his/her guardians or responsible persons.
2. The user must be an adult.
3. Before the initial usage, the user should have received the manual from the distributor or professional operation instructions.
4. The user shall not use the product under the influence of alcohol, medicine or drugs.

Any inexperienced user must perform necessary sawing exercises on the sawhorse or support in advance.

DRESSING AND PROTECTION REQUIREMENTS

WARNING!

1. Dress Appropriately. Do not wear loose clothes or accessories. Keep clothing, gloves and hair away from all moving parts.
 - ▷ Loose clothing, accessories or long hair may get into the moving parts.
2. When the chain saw is working, there may be debris or other sawdust flying out, which may cause physical injury.
 - ▷ Wear goggles when operating.
 - ▷ It is recommended to wear face guard
 - ▷ Wear long clothes
3. Falling objects can cause head injuries.
4. There will be dust and sawdust generated during operation, which will lead to poor air circulation or allergic reaction.
5. Improper clothing may get caught by the branches or crotch, influencing the work of the chain saw. Improper dressing of the user may result in serious injuries.

6. The user, if gets close to the running chain when using the saw, may be subject to serious injury.
7. The user may get hurt while sawing wood. In particular, the user may touch the sharp edges of the chain by hand when cleaning the machine or the chain.
 - ▷ Please wear protective gloves when working.
8. Improper shoes may cause slipping or falling. The user may get hurt if he/she touches the saw chain after falling down.
 - ▷ Please wear protective boots for chain saws

ENVIRONMENT REQUIREMENTS

1. Onlookers, children and other animals that are not aware of the sawdust or other debris flying out from the chain saw may be exposed to threats. Onlookers, children, and animals may be seriously injured.
 - ▷ Please keep onlookers, children, and animals away from the working area.
2. The chain saw is not waterproof and may cause electric shock if used in rain or a wet environment, injuring the user and damaging the chain saw.
 - ▷ Do not use the chain saw in rain or in a wet environment.
3. The motor of the chain saw may produce sparks, which can cause fire or explosion in the environment with combustible or explosive materials. This may lead to serious injury or death and property damage.
 - ▷ Do not use it in an environment with combustible or explosive materials.

MACHINE SAFETY REQUIREMENTS

THE CHAIN SAW IS SAFE IF:

1. The chain is not damaged.
2. The chain saw is clean and dry.
3. The handle is intact.
4. The trigger switch operates normally.
5. The lubricating oil feeding system is normal.
6. The groove depth of the tooth between the chain wheel and the chain should not exceed 0.5mm.
7. The assembly of the guide plate and chain is in line with the instructions herein.
8. The guide plate and chain are well assembled.
9. 1The chain is tensioned normally.

10. Only original accessories can match the chain saw.
11. The accessories are assembled normally.
12. Oil locking is closed.

WARNING!

If the product no longer meets the safety requirements, the parts can't play their due function or the safety mechanism doesn't work normally, serious or fatal injury may occur.

1. Use only an intact chain saw. Please clean and dry a dirty or wet chain saw before using.
2. Do not modify your chain saw, for example: refit the guide plate or the chain.
3. If the control system does not work properly, stop using the chain saw.
4. Use only accessories and parts provided.
5. Install the guide plate and chain according to the manual.
6. Don't put anything in the chain saw.

The guide plate is safe for use if:

1. All functions of the guide plate are sound.
2. The guide plate is not deformed or incomplete.
3. The groove depth of the guide plate has no obvious change.
4. The guide plate track is smooth without burr.
5. There is no shrinkage or cracking in the guide plate groove.

WARNING!

If the guide plate is not in a safe state, it will not fit the chain well. The chain may jump out from the guide plate, which can cause serious or fatal injury.

1. Use only undamaged guide plate.
2. If the guide plate groove is less than the minimum. Depth, replace it.
3. Clear the trash from the guide plate after operating the chain saw.

CHAIN SAFETY INSTRUCTIONS

The chain is safe for use if the guide plate meets the following requirements:

1. The chain is not damaged.
2. The cutting edges of chain cutter heads are sharp.
3. The notch depth of the cutting edges of the chain cutter heads meets the description of the service mark.
4. The length of the cutting edges of the cutter heads meets the grinding requirements.

PRECAUTIONS DURING OPERATION

PRECAUTIONS FOR CUTTING

WARNING!


1. In some specific cases, the operator may fail to concentrate on the work, and may suffer serious injuries after getting tripped or falling down.
 - ▷ Always work calmly and in a planned way.
 - ▷ Do not use the chain saw in low visibility and dark environments.
 - ▷ Please operate your own chain saw.
 - ▷ Do not operate the chain saw above your shoulder height
 - ▷ Watch out for obstacles.
 - ▷ When operating the chain saw, please stand in a safe position and keep your balance. For operations at height, use a lift or a safe scaffold.
2. The user may be injured or seriously injured by the running saw chain.
 - ▷ Do not touch the moving saw chain.
3. The running saw chain will get hotter and longer, and may jump out from the guide plate and break if not effectively cooled and re-tensioned. This may lead to serious injury and property damage.
 - ▷ Make sure the lubricating oil for the saw chain works properly.
 - ▷ Check whether the saw chain is tensioned properly during operation. If the saw chain is loose, please adjust it in time.
4. If the chain saw shows any abnormality when getting started and working, it may be in an unsafe state, which may cause serious personal injury or property damage
 - ▷ Stop working and contact the distributor.
5. The chain saw vibrates when it is running.
 - ▷ Please put on gloves.
 - ▷ Take a break in time.
 - ▷ In case of any poor health state, consult the doctor in time.
6. If the running saw chain touches any hard object, sparks will be generated, which may cause fire in a combustible environment This will lead to serious injury and property damage.

- ▷ Do not use the chain saw in any combustible environment
- 7. The chain saw will continue running for a while after the trigger is released, which may cause serious injury.
- ▷ Wait for the complete stop of the saw chain.



WARNING!

When the tree is under tension, the guide plate may be clamped and the user will lose control of the chain saw, resulting in serious injury.

1. Cut a relief groove from the tight side
2. And then cut into the loose side.

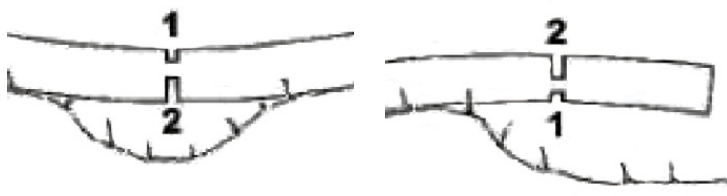

REBOUND WARNING MESSAGES

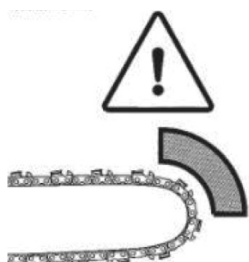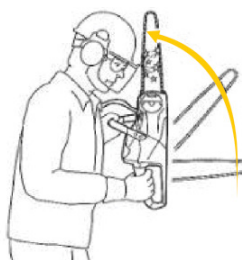


THE CHAIN SAW MAY REBOUND IN THE FOLLOWING CASES:

1. The running chain saw touches any hard object at the guide plate head or brakes suddenly.
2. The guide plate head of the running chain saw is touched.

TENSION WARNING MESSAGES


When the guide plate is used for a top-down cut, the tension direction of the chain saw is opposite to that of the operator.

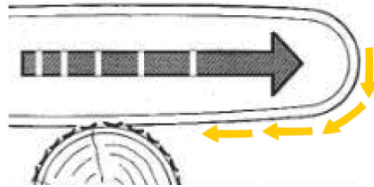

If the running chain saw touches any hard object and is clamped, the electric chain saw will suddenly separate itself from the operator, and the operator will lose control of the chain saw, causing serious or fatal injury.

- ▷ Grasp the chain saw handle firmly.
- ▷ Operate the chain saw as described in the manual.
- ▷ Cut when the guide plate is kept stable.
- ▷ Please cut at full speed.

When the guide plate is used for a bottom-up cut, the thrust direction of the chain saw is towards the operator.

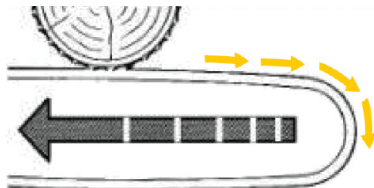

ASSEMBLY OF CHAIN SAW

NOTE!

Please cut off the power supply before the following operations!

INSTALLATION OF THE CHAIN AND GUIDE PLATE

The parameters and specifications of the guide plate chain and chain wheel are listed in the Specification (see page 1)

1. Turn off the chain saw and pull out the battery pack.

2. Turn the nut until the chain wheel cover can be removed.
3. Remove the chain wheel cover plate.
4. Adjust the tension adjusting bolt ,put the guide plate on the main body of the chain saw, and insert the fixing column into the fixed hole on the guide plate


NOTE!


the guide can be either front or back,the marked guide may be on the front or back.

5. Put the chain into the guide plate groove, and the cutting edge direction of the cutter heads refers to the arrow mark on the main body of the chain saw.
6. Cover the cover plate of the chain wheel and fasten nuts.



DISASSEMBLY OF THE CHAIN AND GUIDE PLATE

1. Turn the nut "1" counterclockwise until the cover plate of the chain wheel "2" can be removed.
2. Remove the cover plate of the chain wheel.
3. Adjust the tension adjusting bolt "3". and the chain is loose.
4. Remove chain and guide plate.

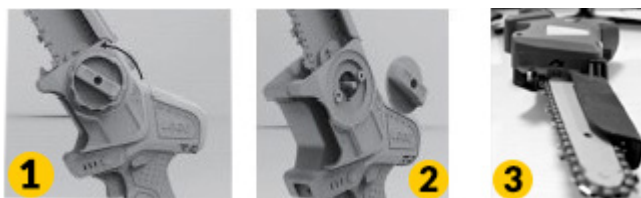

TENSION CHAIN



When the chain saw works. The chain may lengthen. If necessary, adjust the tightness of the chain according to the operating specifications.

1. Turn off the chain saw and cut off the power.
2. Turn the nut "1" counterclockwise and it will be loose.
3. Adjust the tension adjusting bolt (turn in counterclockwise to loosen the chain).
4. The drive tooth of the chain are attached to the bottom of the guide plate groove.
▷ The chain can be easily pulled along the guide plate groove.
5. The engraved guide plate is used: adjust the tightness of the chain and pull it by hand. Half of the drive tooth are outside the guide plate groove.
6. If the chain cannot be pulled by hand: loosen the cover plate nut of the chain wheel and knob and adjust the tension bolt until the chain can be easily pulled along the guide plate groove.
7. Tighten the cover plate of the chain wheel.

CHAIN OIL FEEDING

Chain oil can lubricate and cool the chain:

1. Turn off the electric saw and cut off the power.
2. Place the chain saw in a horizontal place with the oil can spout facing up.
3. Clean the oil can and its surroundings with a wet cloth.
4. Turn the oil cap counterclockwise until it can be removed.
5. Remove the oil cap.
6. Feed chain oil to the appropriate level to avoid overflow.
7. Cover the oil cap and tighten it.

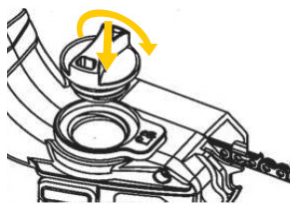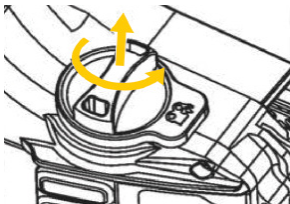


CHECKING THE CHAIN SAW

WARNING!

Turn off the power when doing the following.

INSPECTION OF THE CHAIN WHEEL

1. TURN off the chain saw and cut off the power.
2. Remove the protection cover of the chain wheel.
3. Remove the guide plate and chain.
4. Measure the depth of the chain wheel groove using a depth gauge.
5. If the groove depth exceeds 0.5mm. Please do not use the chain saw. And contact the distributor to replace the chain wheel as soon as possible.

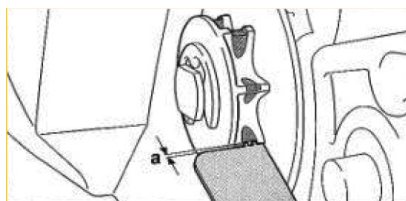

INSPECTION OF CHAIN OIL DISCHARGING

1. Place the guide plate of the chain saw directly above the clean ground.
2. Start the chain saw. The chain oil is thrown out, and the oil can be clearly seen on the ground directly below the guide plate. Which indicates normal chain saw oil discharging.

If no oil can be seen:


1. Feed the chain oil
2. Check the chain oil again.
3. Chain saw with no oil: do not use chain saws with no oil, and please contact the supplier in time, chain oil is dispensable.



INSPECTION OF STARTUP

1. Please ensure that no children or other people are seen within 50 feet (15 meters) of the workplace, and pay attention to whether there are animals around.
2. Connection: plug the machine plug into the controller socket and the controller plug into the battery socket.
3. On and off:
 - ▷ Push the lock knob to the side of the "🔒" sign. Pull the trigger "1", and the saw will start to work
 - ▷ Push the lock knob to the side of the "🔓" sign the trigger is locked.

Before starting the machine, make sure that all accessories have been in the proper installation; make sure that the chain does not touch any objects, such as branches, stones, etc. If there is any machine failure, please immediately turn off its switch and battery switch.

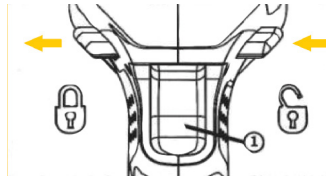

MAINTENANCE


In case of any question or problem in use, please contact us in time . We'll have professionals to address the questions or problems, and qualified maintenance staff to repair the electric tool with identical replacement parts, to maintain the safety performance of the electric trimming saw.

نحوه کار کلید

روشن و خاموش کردن:

شاسی تعبیه شده روی بدنه را به سمت علامت "❏" فشار دهید و کلید شماره ۱ را فشار دهید، دستگاه شروع به کار می کند.

برای قفل کردن کلید شاسی روی بدنه را به سمت "🔒" فشار دهید تا مکانیزم کلید قفل شود.

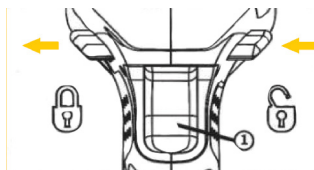

انبارش

❏ همیشه قبل از اقدام به بازرسی یا تعمیر و نگهداری مطمئن شوید که ابزار خاموش است و باتری از دستگاه خارج شده است.

❏ هرگز از بنزین، الکل و موارد مشابه برای تمیزکاری دستگاه استفاده نکنید. این کار سبب آسیب به دستگاه میشود.



برای حفظ ایمنی و قابلیت اطمینان محصول، هر گونه تعمیر و نگهداری یا تنظیم باید در مراکز خدمات پس از فروش کنزاکس انجام شود.


کنزاکس سرویس

ضمن تشکر از حسن انتخاب شما

به همراه ابزار شما کارت ضمانت نامه ۱۲ ماهه کنزاکس سرویس ارائه می گردد.

لطفا توجه داشته باشید که هیچ کدام از اجزای داخلی ابزار، احتیاج به تعمیر و یا بهبود اضافه جهت بهینه نمودن عملکرد ندارند. بنابراین از هرگونه اعمال دستکاری یا مراجعه به مراکز تعمیرات غیر مجاز اجتناب نمایید و در صورت بروز هرگونه مشکل سریعاً با مراکز سرویس و پشتیبانی کنزاکس به شماره ۰۲۱-۶۲۸۱۹ و یا به وب سایت www.kenzax.com تماس حاصل نمایید.

۴. درپوش را خلاف عقربه ساعت باز کنید.
۵. درپوش را جدا کنید
۶. روغن را تا حد نشان داده شده در مخزن پر کنید تا از لبریز شدن جلوگیری شود.
۷. درپوش را در محل خود نصب کرده و از عدم نشتی روغن اطمینان حاصل نمایید.

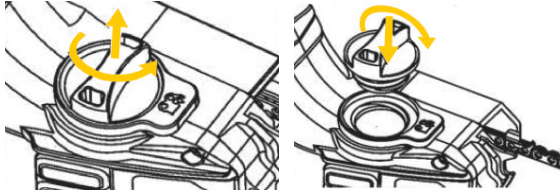

چک کردن روانکاری زنجیر

۱. لطفاً ساطوری اره زنجیری را مستقیماً بالای زمین تمیز قرار دهید و اره زنجیری را روشن کنید.
۲. باید روغن زنجیر به بیرون پرتاب می شود و روغن به وضوح روی زمین دیده می شود. که نشان دهنده تخلیه عادی روغن اره زنجیری است.



⚠️ مراحل زیر را چک کنید !

- در صورتی که در حین کار زنجیر به روغن آغشته نبود:
۱. روغن را در مخزن مخصوص اضافه کنید.
 ۲. دو مرتبه چک کنید.
 ۳. در صورتی که زنجیر به روغن آغشته نبود با واحد خدمات پس از فروش تماس بگیرید. زیرا احتمال مسدود شدن محل تزریق وجود دارد.

۳. پیچ تنظیم کشش را بچرخانید تا زنجیر شل شود .

۴. زنجیر و ساطوری را بردارید.




کار کردن با دستگاه

چک کردن چرخ زنجیر



۱. دستگاه را خاموش و باتری را جدا نمایید.
۲. پوشش محافظ چرخ زنجیر را باز کنید.
۳. ساطوری و زنجیر را جدا نمایید.
۴. عمق شیار چرخ زنجیر را چک نمایید.
۵. اگر عمق حفره از ۵/۵ میلی‌متر بیشتر بود نیاز به تعویض دارد و با خدمات پس از فروش تماس بگیرید.

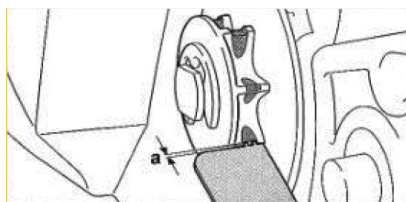

روغن کاری زنجیر

روغن زنجیر جهت روانکاری و خنک کردن زنجیر استفاده می‌شود.

۱. دستگاه را خاموش و باطری را خارج کنید.
۲. دستگاه را افقی روی سطح قرار دهید، به نحوی که در پوش مخزن رو به بالا باشد.
۳. مخزن و درپوش را با پارچه تمیز کنید .

مونتاژ اړه زنجیری

نحوه نصب ساطوری و زنجیر

- جعبه را باز کرده و ساطوری و زنجیر را به شرحی که در ادامه خواهید دید روی مولد نصب کنید
۱. قبل از آغاز به کار باتری را از دستگاه جدا کنید.
 ۲. پیچ کاور زنجیر را بچرخانید و باز کنید.
 ۳. کاور زنجیر را جدا کنید
 ۴. ساطوری و زنجیر را نصب کنید و از حرکت راحت زنجیر اطمینان حاصل نمایید.
 - ◀ ساطوری را نصب کرده و سپس زنجیر را دور ساطوری ببندید.
 - ◀ پیچ تنظیم کشش را بچرخانید تا پین داخل سوراخ ساطور قرار بگیرد.
 - ◀ کاور زنجیر را نصب کنید و پیچ کاور زنجیر را به مقدار کمی سفت کنید.
 - ◀ با استفاده از پیچ گوشتی پیچ تنظیم کشش را به مقداری سفت کنید که زنجیر، کشش مناسبی داشته باشد (زنجیر حالت ارتجاعی داشته باشد).
 ۵. سپس کاور زنجیر را نصب کنید
 ۶. در انتها پیچ کاور زنجیر را کاملاً سفت کنید.



به جهت صحیح زنجیر توجه کنید. (سمت تیغه‌ها روی زنجیر به سمت نوک دستگاه باشد)
پس از اتمام مراحل نصب، زنجیر باید به راحتی روی ساطوری حرکت کند.



نحوه جداسازی زنجیر و ساطوری

۱. پیچ کاور زنجیر را بچرخانید.
۲. کاور زنجیر را بردارید.

پیام های هشدار کشش زنجیر

هنگامی که صفحه راهنما برای برش از بالا به پایین استفاده می شود، جهت کشش اره زنجیری بر خلاف جهت کاربر است.


اگر اره زنجیری در حال کار، هر جسم سختی را لمس کند و گیر کند، اره زنجیری به طور ناگهانی از دست کاربر جدا می شود و اپراتور کنترل اره زنجیری را از دست می دهد و باعث آسیب جدی یا کشنده می شود. دسته اره زنجیری را محکم بگیرید.

اره زنجیری را همانطور که در دفترچه راهنما توضیح داده شده است کار کنید.


زمانی که صفحه راهنما ثابت نگه داشته شد، برش دهید.

لطفاً با سرعت کامل برش دهید.

هنگامی که از اره برای برش از بالا به پایین استفاده می شود، جهت رانش اره زنجیری به سمت اپراتور است.

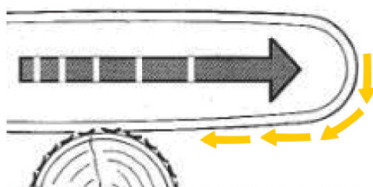

هنگامی که از اره برای برش از پایین به بالا استفاده می شود، جهت رانش اره زنجیری به سمت اپراتور است.

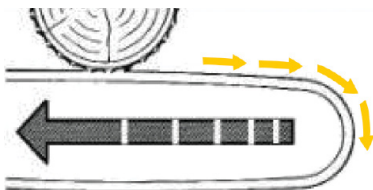

اگر اره زنجیری در حال اجرا به هر جسم سختی برخورد کند و گیر کند، اره به طور ناگهانی از اپراتور جدا می شود و اپراتور کنترل اره زنجیری را از دست می دهد که می تواند باعث آسیب جدی یا کشنده شود.

◀ دسته اره زنجیری را با دو دست محکم بگیرید.

◀ اره زنجیری را همانطور که در دفترچه راهنما توضیح داده شده است استفاده کنید.

◀ زمانی که صفحه راهنما ثابت نگه داشته شد، برش دهید.

◀ لطفاً با سرعت حداکثر اره برش دهید.

آتش سوزی در یک محیط قابل احتراق شود که منجر به صدمات جدی و آسیب به ابزار می شود.

◀ از اره زنجیری در محیط های قابل احتراق استفاده نکنید

۷. اره زنجیری پس از رها شدن ماشه برای مدتی به کار خود ادامه می دهد که ممکن است باعث آسیب جدی شود.

◀ منتظر توقف کامل زنجیر اره باشید.



هنگامی که درخت تحت کشش است، ساطوری ممکن است گیر کند و کاربر کنترل اره زنجیری را از دست بدهد و در نتیجه آسیب جدی وارد شود.

۱. در سمتی که شاخه یا درخت تحت فشار است یک شیار کوچک ایجاد کنید.

۲. سپس از سمت شل برش دهید.



پیام های هشدار برگشتن اره

اره زنجیری ممکن است در موارد زیر به سمت سر کاربر برگردد:

۱. اگر سر ساطوری اره زنجیری در حال کار هر جسم سختی را لمس کند یا به طور ناگهانی بشکند.

۲. اگر سر ساطوری اره زنجیری در حال کار شود.



اقدامات احتیاطی در حین استفاده

اقدامات احتیاطی برای برش



هشدار!

۱. در برخی موارد خاص، اپراتور ممکن است نتواند روی کار تمرکز کند و در صورت زمین خوردن ممکن است دچار صدمات جدی شود.
 - ◀ همیشه آرام و برنامه ریزی شده کار کنید.
 - ◀ از اره زنجیری در محیط های کم نور و تاریک استفاده نکنید.
 - ◀ لطفاً فقط از اره زنجیری خودتان استفاده کنید.
 - ◀ اره زنجیری را بالاتر از ارتفاع شانه خود به کار نبرید.
 - ◀ مراقب موانع باشید.
 - ◀ هنگام کار با اره زنجیری، لطفاً در یک موقعیت امن بایستید و تعادل خود را حفظ کنید. برای انجام عملیات در ارتفاع، از بالابر یا داربست ایمن استفاده کنید.
۲. کاربرد ممکن است توسط زنجیر اره در حال کار به شدت آسیب ببیند.
 - ◀ زنجیر در حال کار را لمس نکنید.
۳. زنجیر اره در حال کار داغ و داغتر و منبسط می شود و ممکن است از ساطوری به بیرون پرت شود و اگر به طور موثر خنک و فیکس نشود ممکن است بشکند. این امر می تواند منجر به صدمات جدی و آسیب به ابزار شود.
 - ◀ مطمئن شوید که روغن روان کننده زنجیر اره به درستی کار می کند.
 - ◀ بررسی کنید که آیا زنجیر اره در حین کار به درستی کشیده شده است یا خیر. اگر زنجیر اره شل است، لطفاً آن ربه موقع تنظیم کنید.
۴. اگر اره زنجیری هنگام شروع به کار و در حین کار هر گونه ناهنجاری از خود نشان دهد، ممکن است در وضعیت ناامن قرار داشته باشد که می تواند باعث صدمات جدی به شخص یا آسیب به ابزار شود.
 - ◀ کار را متوقف کرده و با شرکت کنزاکس تماس بگیرید.
۵. اره زنجیری هنگام کار می لرزد.
 - ◀ لطفاً دستکش بپوشید
 - ◀ به موقع استراحت کنید.
 - ◀ در صورت بروز هر گونه وضعیت بد سلامتی، به موقع با پزشک مشورت کنید.
۶. اگر زنجیر اره در حال اجرا با هر جسم سختی برخورد کند، جرقه ایجاد می شود که ممکن است باعث

۶. اگر عمق حفره از ۵/۰ میلی متر تجاوز کند.
۷. مونتاژ ساطوری و زنجیر مطابق با دستورالعمل های موجود باشد.
۸. ساطوری و زنجیر به خوبی مونتاژ شده باشد.
۹. زنجیر به طور معمول کشیده شود.
۱۰. فقط لوازم جانبی اصلی با اره زنجیری مطابقت دارند.
۱۱. لوازم جانبی به طور صحیح سوار شوند.
۱۲. قفل روغن بسته باشد.



اگر محصول الزامات ایمنی را برآورده نکند، قطعات نتوانند عملکرد مناسب خود را ایفا کنند یا مکانیسم ایمنی به طور معمول کار نکند، ممکن است آسیب جدی یا کشنده رخ دهد.

۱. فقط از اره زنجیری سالم استفاده کنید. لطفاً قبل از استفاده اره زنجیری گتیف یا مرطوب را تمیز و خشک کنید.
 ۲. اره زنجیری خود را تغییر ندهید، به عنوان مثال: ساطوری یا زنجیر را دستکاری نکنید.
 ۳. اگر سیستم کنترل به درستی کار نمی کند، استفاده از اره زنجیری را متوقف کنید.
 ۴. فقط از لوازم جانبی و قطعات ارائه شده استفاده کنید.
 ۵. ساطوری و زنجیر را طبق دفترچه راهنما نصب کنید.
 ۶. چیزی در اره زنجیری قرار ندهید.
- اگر موارد زیر رعایت شده باشد اره زنجیری برای استفاده ایمن است:

۱. تمام عملکردهای ساطوری سالم هستند.
۲. ساطوری دفرمه یا شکسته نیست.
۳. عمق شیار ساطوری تغییر آشکاری ندارد.
۴. مسیر ساطوری صاف و بدون براده است.
۵. در شیار ساطوری انقباض یا ترک وجود ندارد.



اگر ساطوری در حالت ایمن نباشد، به خوبی روی زنجیر قرار نمی گیرد. ممکن است زنجیر از ساطوری به بیرون پرت شود که می تواند باعث آسیب جدی یا کشنده شود.

۱. فقط از ساطوری سالم استفاده کنید.
۲. اگر شیار ساطوری کمتر از عمق کمینه باشد، آن را جایگزین کنید.
۳. پس از کار با اره زنجیری، خاک اره و آشغال را از روی ساطوری پاک کنید.

۳. افتادن اجسام می‌تواند باعث آسیب به سر شود.
۴. گرد و غبار و خاک اره در طول عملیات تولید می‌شود که منجر به گردش ضعیف هوا یا واکنش آلرژیک می‌شود.
۵. لباس نامناسب ممکن است توسط گیر کند و بر کار اره زنجیری تأثیر بگذارد. لباس نامناسب کاربر ممکن است منجر به صدمات جدی شود.
۶. اگر کاربر هنگام استفاده از اره به زنجیر در حال حرکت نزدیک شود، ممکن است آسیب جدی ببیند.
۷. ممکن است کاربر هنگام اره کردن چوب صدمه ببیند. به ویژه، کاربر ممکن است هنگام تمیز کردن دستگاه یا زنجیر، لبه‌های تیز زنجیر را با دست لمس کند.
- ◀ لطفاً هنگام کار از دستکش محافظ استفاده کنید.
۸. کفش نامناسب ممکن است باعث سر خوردن یا افتادن شود. اگر کاربر پس از افتادن به زنجیر اره دست بزند، ممکن است آسیب ببیند.
- ◀ لطفاً برای اره‌های زنجیری چکمه‌های محافظ بپوشید.

الزامات حفاظت از محیط زیست

- ضایعات محصولات الکتریکی را نباید با زباله های خانگی دور ریخت. لطفاً به مراکزی که امکانات بازیافت وجود دارد تحویل داده شود. وسایل برقی را به عنوان زباله‌های شهری دور نریزید و مناطق مخصوص زباله های بازیافتی انبارش نمایید. برای کسب اطلاعات در مورد سیستم های جمع آوری زباله های بازیافتی با شهرداری منطقه خود تماس بگیرید. اگر وسایل برقی در محل های دفن زباله های معمولی دور ریخته شوند، امکان این وجود دارد که مواد خطرناک و سمی به سفره های زیرزمینی آب نشت کرده و وارد زنجیره غذایی شوند. که این امر موجب آسیب رسیدن به سلامت می‌شود. دفع ضایعات محصولات الکتریکی باید مطابق با مقررات محیط زیست باشد.
- ◀ لطفاً ضایعات محصولات الکتریکی را با زباله های خانگی دور ریخت.

الزامات ایمنی دستگاه

اگر موارد زیر رعایت شده باشد اره زنجیری برای استفاده ایمن است:

۱. زنجیر آسیبی ندیده است.
۲. اره زنجیری تمیز و خشک است.
۳. دسته سالم باشد.
۴. سوئیچ ماشه به طور معمول کار می‌کند.
۵. سیستم تغذیه روغن روانکاری را به درستی انجام دهد.

الزامات ایمنی

اقدامات احتیاطی قبل از استفاده

۱. استفاده از هر باتری یا شارژری که تایید شده نباشد ممکن است باعث آتش سوزی یا انفجار شود که می‌تواند منجر به صدمات جدی یا کشنده به شخص و آسیب آسیب به دستگاه شود.
۲. استفاده از اهر زنجیری، باتری یا شارژر فراتر از مشخصات فنی آن‌ها ممکن است باعث صدمات جدی یا کشنده به شخص و آسیب آسیب به دستگاه شود.

الزامات اپراتور



هشدار!

کاربر نباید قبل از خواندن و درک دفترچه راهنما از اهر زنجیری، باتری یا شارژر استفاده کند یا به آن دسترسی داشته باشد، در غیر این صورت ممکن است باعث آسیب جدی یا مرگ کاربر یا دیگران شود. دفترچه راهنما را برای مراجعات بعدی نگه دارید.

اطمینان حاصل کنید که کاربر به طور کامل الزامات زیر را برآورده می‌کند:

۱. هنگام کار با اهر زنجیری یا استفاده از باتری و شارژر، کاربر باید از نظر جسمی، روحی و روانی در حالت عادی باشد و برای چنین عملیاتی مناسب باشد. در غیر این صورت، کاربر باید با راهنمایی و تحت نظر افراد مسئول از آن استفاده کند.
۲. کاربر باید بزرگسال باشد.
۳. قبل از استفاده اولیه، کاربر باید دفترچه راهنما محصول را دریافت و خوانده باشد.
۴. کاربر نباید از محصول تحت تأثیر الکل، دارو یا مواد مخدر استفاده کند. کاربر تازه کار باید از قبل تمرینات لازم اهر کردن را انجام دهد.

الزامات لباس پوشیدن و محافظت



هشدار!

۱. لباس مناسب بپوشید. لباس‌های گشاد نپوشید. لباس، دستکش و مو را از تمام قسمت‌های متحرک دور نگه دارید.
۲. لباس‌های گشاد، چیزهایی مثل زنجیر یا موهای بلند ممکن است وارد قسمت‌های متحرک شوند.
۳. هنگامی که اهر زنجیری کار می‌کند، ممکن است براده یا خاک اهر به بیرون پرتاب شود که می‌تواند باعث آسیب فیزیکی شود.
۴. هنگام کار از عینک استفاده کنید.
۵. استفاده از محافظ صورت توصیه می‌شود.
۶. لباس‌های بلند بپوشید.

- قبل از استفاده، آن مورد را رفع نمائید. بیشتر حوادث از عدم نگهداری صحیح ابزارآلات برقی رخ می‌دهد.
- ◀ همواره از ابزار و لوازم جانبی مناسب این دستگاه استفاده نمائید. همچنین از این دستگاه تنها برای کارهایی که برای آن تهیه و طراحی شده است، استفاده نمائید.

استفاده از باتری

- ◀ تنها از شارژرهای مخصوص این دستگاه استفاده نمائید. شارژر مناسب یک دستگاه ممکن است برای استفاده از باتری دستگاه‌های دیگر خطرآفرین باشد.
- ◀ تنها از باتری‌های مخصوص این دستگاه استفاده نمائید. استفاده از باتری دستگاه‌های دیگر ممکن است منجر به آسیب دیدن دستگاه و باتری گردد.
- ◀ هرگز باتری را در مجاورت فلزاتی مانند سکه، کلید، میخ و... قرار ندهید که منجر به ایجاد اتصال کوتاه و آتش سوزی خواهد شد.
- ◀ در صورت خراب شدن باتری و تراوش مایع داخل آن، هرگز این مایع را لمس نکنید و در صورتیکه سهواً با مایع تماس پیدا کردید، فوراً محل مربوطه را با آب بشوئید. همچنین در صورت تماس مایع با چشم‌هایتان، فوراً چشم‌ها را با آب شسته و به پزشک مراجعه نمائید. مایع داخل باتری ممکن است موجب تورم یا سوختگی گردد.

تعمیرات و نگهداری

- ◀ برای هرگونه تعمیر و تعویض قطعات، تنها به مراکز خدمات پس از فروش **شرکت کنزاکس** مراجعه نمائید.

نمادها

CE	ولتاژ	V
از اینک ایمنی استفاده نمائید	فرکانس	Hz
از محافظ ایمنی گوش استفاده نمائید	توان	W
سرعت بی باری	هشدار	⚠
	جریان متناوب	~
	دور بر دقیقه	min ⁻¹

ایمینی فردی

- ◀ زمانی که خسته‌اید یا تحت تاثیر دارو قرار دارید و در مجموع زمانی که در سلامتی کامل به سر نمی‌برید، هرگز از ابزارآلات برقی استفاده ننمائید. چرا که لحظه‌ای درنگ و بی دقتی منجر به صدمات جبران ناپذیری خواهد شد.
- ◀ همواره از لوازم ایمینی مانند عینک ایمینی، ماسک هوا، کفش و کلاه ایمینی و محافظ گوش استفاده ننمائید تا صدمات فردی کاهش یابد.
- ◀ برای اجتناب از شروع به کار ناگهانی دستگاه، قبل از اتصال آن به منبع برق از قرار داشتن کلید در وضعیت خاموش اطمینان حاصل ننمائید. همچنین زمانی که آن را جا به جا می‌کنید، دو شاخه را از پریز جدا کرده و انگشتان را بر روی کلید قرار ندهید.
- ◀ قبل از روشن کردن دستگاه از عدم اتصال هرگونه ابزار تنظیم مانند آچار به قطعات دوار اطمینان حاصل ننمائید چرا که می‌تواند منجر به صدمات جبران ناپذیری گردد.
- ◀ حالت صحیح قرارگیری پاها و حفظ تعادل بدن حین کار از خارج شدن کنترل دستگاه جلوگیری می‌نماید.
- ◀ همواره در حین کار از لباس کار مناسب استفاده ننمائید. استفاده از لباس‌های غیر استاندارد و گشاد، جواهرات و داشتن موهای بلند امکان درگیر شدن آن‌ها را با قسمت‌های متحرک ابزارآلات برقی افزایش داده و ممکن است خطر آفرین شود.
- ◀ در صورت استفاده از غبار جمع کن از اتصال صحیح و مناسب آن به دستگاه اطمینان حاصل ننمائید. استفاده از چنین لوازم جانبی، مضرات مربوط به غبارات را کاهش خواهد داد.

استفاده صحیح از دستگاه

- ◀ از اعمال بار اضافه به دستگاه جدا خودداری ننمائید. انتخاب درست ابزار برقی مناسب کارتان، باعث کاهش هزینه و زمان و حسن انجام کار برای شما خواهد شد. بنابراین همیشه برای انجام عملکرد مورد نظران از ابزار برقی مخصوص به آن کار استفاده ننمائید.
- ◀ در صورت معیوب بودن کلید دستگاه، هرگز از آن استفاده نکنید و به نزدیک ترین مراکز خدمات پس از فروش برای تعمیر آن مراجعه ننمائید. هر دستگاهی که با کلید قابل کنترل نباشد، خطر آفرین است و باید تعمیر شود.
- ◀ قبل از هرگونه تنظیم یا تعویض لوازم جانبی دستگاه، همچنین زمانی که از دستگاه استفاده نمی‌کنید دو شاخه را از منبع برق جدا ننمائید. این کار از شروع به کار ناگهانی دستگاه جلوگیری خواهد کرد.
- ◀ ابزارآلات برقی را از دسترس کودکان و افراد غیرمتخصص دور نگهدارید. ابزارآلات برقی در دسترس افراد آموزش ندیده، خطر آفرین خواهند بود.
- ◀ از ابزارآلات برقی به خوبی نگهداری ننمائید. هرگونه تنظیمات، گیرکردن قطعات دوار و یا هر وضعیت دیگری که ممکن است بر روی عملکرد دستگاه تاثیر بگذارد را بررسی ننمائید و در صورت آسیب دیدگی

دستورالعمل‌های کلی ابزارآلات برقی



هشدار!

لطفاً کلیه مواردی که در ذیل قید شده است را با دقت مطالعه فرمائید و به کار برید، عدم پیروی از دستورالعمل‌های ذیل ممکن است منجر به ایجاد صدمات جبران ناپذیر فیزیکی یا ایجاد اختلال در کارکرد ابزارآلات برقی شوند.

این دفترچه راهنما را بعد از مطالعه نگهداری نمائید.

منظور از کلمه "ابزار برقی" در هشدارهای زیر کلیه ابزارهای برقی متصل به کابل یا ابزارهای شارژی دارای باتری می‌باشد.


ایمنی محل کار

- ◀ محل کار را تمیز و روشن نگهدارید. محیط‌های در هم ریخته و تاریک حادثه آفرین خواهند بود.
- ◀ هرگز از ابزارآلات برقی در مجاورت مواد اشتعال زا استفاده ننمائید. ابزار آلات برقی جرقه ایجاد می‌کنند که ممکن است موجب آتش سوزی گردد.
- ◀ ابزارآلات برقی را هنگام استفاده از دسترس کودکان و افراد غیرمختص دور نگهدارید. زیرا ممکن است باعث از دست دادن تمرکز و کنترل دستگاه شود.

ایمنی برقی

- ◀ دو شاخه دستگاه باید متناسب با پریز باشد. با این کار احتمال برق گرفتگی به شدت کاهش خواهد یافت.
- ◀ در هنگام استفاده از دستگاه به محل عبور لوله، کابل برق مربوط به رادیاتور، گرمخانه و یا یخچال و... توجه نمائید. زیرا تماس بدن با آن‌ها احتمال خطر برق گرفتگی را افزایش می‌دهد.
- ◀ ابزارآلات برقی را در معرض باران و یا رطوبت قرار ندهید. ورود آب به ابزارآلات برقی ممکن است موجب برق گرفتگی شود.
- ◀ هرگز از کابل دستگاه برای حمل آن استفاده ننمائید و یا برای قطع اتصال دستگاه از پریز، کابل را نکشید. همچنین کابل را از معرض حرارت، سطوح نوک تیز، قطعات دوار و روغن دور نگهدارید. کابل‌های آسیب دیده مستعد بروز برق گرفتگی هستند.
- ◀ هنگام استفاده از دستگاه در محیط‌های باز، از سیم رابط مناسب استفاده نمائید تا احتمال برق گرفتگی کاهش یابد.
- ◀ هنگام استفاده از دستگاه در محیط‌های مرطوب حتماً از کلید حفاظت جان (RCD) برای اتصال دستگاه به منبع تغذیه برق شهری استفاده نمائید. کلید حفاظت جان، مانند دستکش و کفش ایمنی به افزایش ایمنی فردی کمک می‌کند.
- ◀ هرگز ابزارهای دارای جریان متناوب را به منبع تغذیه برق با جریان غیرمتناوب (مستقیم) وصل ننمائید. این کار منجر به آسیب دیدگی دستگاه و آسیب‌های فردی خواهد شد.

نام قطعات دستگاه

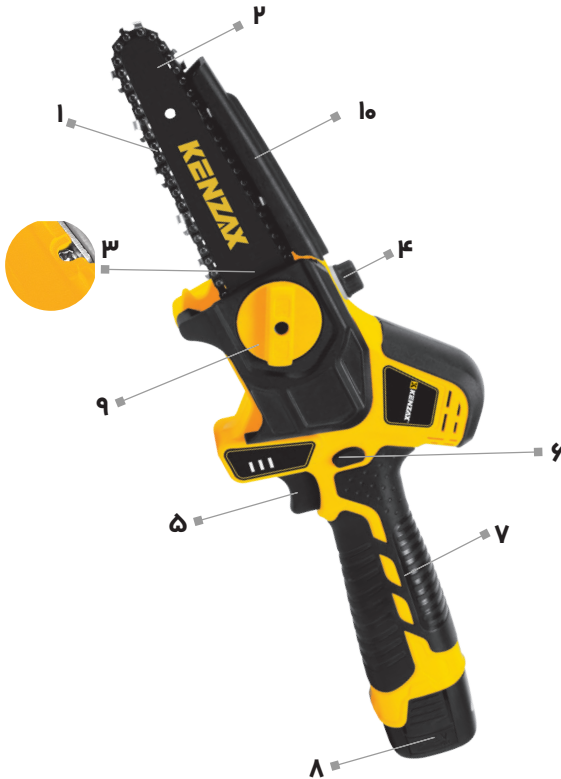

نام قطعات دستگاه

- | | |
|---------------------------|--------------------|
| ۱. زنجیر | ۶. ضامن ایمنی کلید |
| ۲. ساطوری | ۷. دسته |
| ۳. پیچ تنظیم کشش | ۸. پک باتری |
| ۴. درپوش تزریق روغن زنجیر | ۹. پیچ کاور زنجیر |
| ۵. کلید روشن و خاموش | ۱۰. محافظ ساطوری |

مشخصات فنی

مدل	8736
حداکثر سرعت	۲۰۰۰۰ دور بر دقیقه
طول ساطور	۶ اینچ
گام زنجیر	۱/۴ اینچ
سرعت زنجیر	۷/۸ متر بر ثانیه
حداکثر عمق برش	۱۳۰ میلی متر
حجم مخزن روغن	۳۰ میلی لیتر
ولتاژ باتری	۱۶/۸ ولت
ظرفیت باتری	۲ آمپر ساعت
تکنولوژی باتری	لیتیوم-یون
زمان کارکرد باتری	۳۰ الی ۴۵ دقیقه
تعداد برش بر اساس یک بار شارژ باتری	۶۰ عدد (ضخامت ۱۰ سانتی متر)
زمان شارژ باتری	۱ ساعت
تعداد باتری	۲ عدد
نوع موتور	براشلس
وزن خالص	۰/۸۹ کیلوگرم
متعلقات	یک عدد پیچ گوشتی یک عدد شارژر



اره زنجیری شارژی ۶ اینچ براشلس



ITEM NO. 8736

دفترچه راهنمای فارسی