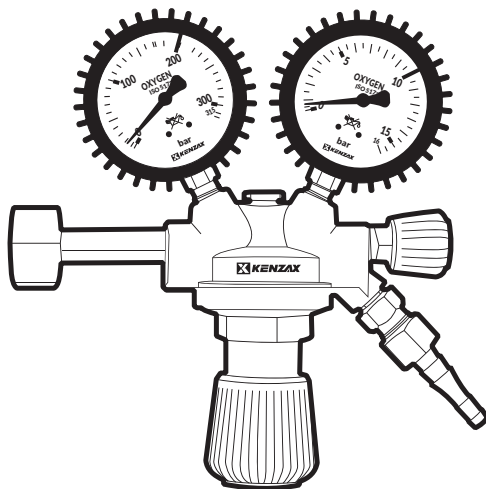


GAS REGULATOR OXYGEN

ITEM
NO.**3722**

WARNING!

Never use dirty hands for installing the oxygen regulator

NOTE!

The regulators are manufactured to BS EN ISO 2503 requirements and the gauges to BS En562.

INSTALLATION & OPERATION


1. Ensure the appropriate regulator is selected for the type of gas being used.
2. Cylinders must be upright and secured.
3. Ensure that the cylinder valve is clean and free from any residual dirt or obstruction.
4. Connect regulator to the cylinder valve and tighten using the correct size spanner.
5. For safety, always use a flashback arrestor.
6. Open cylinder valve slowly to prevent pressure surge.
7. Open downstream valve slowly to position and adjust regulator to required pressure via the PA control or flowmeter.

CLOSING DOWN PROCEDURE

1. Close cylinder valve.
2. Open all downstream valves to release pressure in system.
3. Close all downstream valves.

Operators should be trained to use correct procedures as above and to be aware of the recommendations of the British Compressed Gases Code of Practice Cp7.

مانومتر اکسیژن طرح مکسی

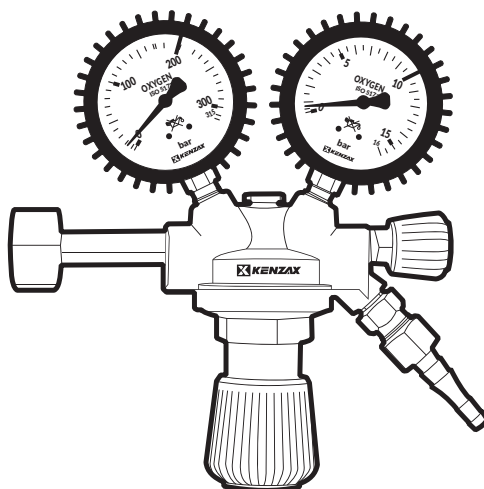ITEM
NO.**3722****⚠️ خطر!**

هیچ گاه با دست چرب و روغنی اقدام به بستن مانومتر اکسیژن ننمایید.

⚠️ توجه!

مانومتر اکسیژن کنزاکس تحت لیسانس BS EN ISO 2503 و گیج های فشار تحت لیسانس BS EN 562 ساخته شده اند.

نصب و راه اندازی

۱. اطمینان حاصل کنید که مانومتر، متناسب با نوع گاز مورد استفاده انتخاب شده است.
۲. همیشه کپسول گاز باید به صورت عمودی قرار گرفته و محکم شوند.
۳. مطمئن شوید که فیلتر مانومتر تعویض و عاری از هرگونه کثیفی یا گرفتگی است.
۴. به کمک آچار مناسب مانومتر را به رابط کپسول متصل نمایید.
۵. برای ایمنی، همیشه از رابط فلش یک ارستور (رابط بازدارنده برگشت شعله) استفاده کنید.
۶. شیر کپسول را به آرامی باز کنید.
۷. شیر تنظیم مانومتر را به آرامی باز کنید.

خارج کردن مانومتر از کپسول

۱. شیر کپسول را به آرامی ببندید.
۲. تمامی اتصالات به رابط خروجی جدا نمایید.
۳. شیر تنظیم مانومتر را به آرامی ببندید.

⚠️ توجه!

اپراتورها باید برای استفاده از کپسول های اکسیژن جوش و برش آموزش کافی را دیده باشد و با کلیه نکات ایمنی استفاده از کپسول گاز اکسیژن آشنایی کامل را داشته باشد.